



COSTRUZIONI INDUSTRIALI
Via Cristoforo Colombo, 2
Loc. CAVAZZONA
41013 Castelfranco Emilia (MO)
(Tel.059/959811 - Fax 059/959850)

YOUR DEALER

648622 EN (01/07/2011)

MLT 845-120-E3

OPERATOR'S MANUAL
(ORIGINAL INSTRUCTIONS)

THIS OPERATOR'S MANUAL MUST BE KEPT IN THE LIFT TRUCK AND MUST BE READ AND UNDERSTOOD BY OPERATORS.



1 - OPERATING AND SAFETY INSTRUCTIONS

TABLE OF CONTENTS

INSTRUCTIONS TO THE COMPANY MANAGER	1 - 4
THE SITE	1 - 4
THE OPERATOR	1 - 4
THE LIFT TRUCK	1 - 4
A - THE LIFT TRUCK'S SUITABILITY FOR THE JOB	1 - 4
B - ADAPTATION OF THE LIFT TRUCK TO STANDARD ENVIRONMENTAL CONDITIONS	1 - 4
C - MODIFICATION OF THE LIFT TRUCK	1 - 5
D - FRENCH ROAD TRAFFIC RULES (or see current legislation in other countries)	1 - 5
THE INSTRUCTIONS	1 - 5
THE MAINTENANCE	1 - 5
INSTRUCTIONS FOR THE OPERATOR	1 - 6
PREAMBULE	1 - 6
GENERAL INSTRUCTIONS	1 - 6
A - OPERATOR'S MANUAL	1 - 6
B - AUTHORIZATION FOR USE IN FRANCE (or see current legislation in other countries)	1 - 6
C - MAINTENANCE	1 - 6
D - MODIFICATION OF THE LIFT TRUCK	1 - 6
E - LIFTING PEOPLE	1 - 7
OPERATING INSTRUCTIONS UNLADEN AND LADEN	1 - 8
A - BEFORE STARTING THE LIFT TRUCK	1 - 8
B - DRIVER'S OPERATING INSTRUCTIONS	1 - 8
C - ENVIRONMENT	1 - 9
D - VISIBILITY	1 - 9
E - STARTING THE LIFT TRUCK	1 - 10
F - DRIVING THE LIFT TRUCK	1 - 10
G - STOPPING THE LIFT TRUCK	1 - 11
H - DRIVING THE LIFT TRUCK ON THE PUBLIC HIGHWAY (or see current legislation in other countries)	1 - 12
INSTRUCTIONS FOR HANDLING A LOAD	1 - 14
A - CHOICE OF ATTACHMENTS	1 - 14
B - MASS OF LOAD AND CENTRE OF GRAVITY	1 - 14
C - LONGITUDINAL STABILITY LIMITER AND WARNING DEVICE	1 - 14
D - TRANSVERSE ATTITUDE OF THE LIFT TRUCK	1 - 15
E - TAKING UP A LOAD ON THE GROUND	1 - 15
F - TAKING UP AND LAYING A HIGH LOAD ON TYRES	1 - 16
G - TAKING UP AND LAYING DOWN A SUSPENDED LOAD	1 - 18
H - TRAVELLING WITH A SUSPENDED LOAD	1 - 18
PLATFORM OPERATING INSTRUCTIONS	1 - 19
A - AUTHORISATION FOR USE	1 - 19
B - SUITABILITY OF THE PLATFORM FOR THE JOB	1 - 19
C - PRECAUTIONS WHEN USING THE PLATFORM	1 - 19
D - USING THE PLATFORM	1 - 19
E - ENVIRONMENT	1 - 20
F - MAINTENANCE	1 - 20
INSTRUCTIONS FOR USING THE RADIO-CONTROL	1 - 21
MAINTENANCE INSTRUCTIONS OF THE LIFT TRUCK	1 - 22
GENERAL INSTRUCTIONS	1 - 22
MAINTENANCE	1 - 22
LUBRICANT AND FUEL LEVELS	1 - 22
HYDRAULIC	1 - 22
ELECTRICITY	1 - 22
WELDING	1 - 23
WASHING THE LIFT TRUCK	1 - 23
IF THE LIFT TRUCK IS NOT TO BE USED FOR A LONG TIME	1 - 24
INTRODUCTION	1 - 24
PREPARING THE LIFT TRUCK	1 - 24
PROTECTING THE I.C. ENGINE	1 - 24
PROTECTING THE LIFT TRUCK	1 - 24
BRINGING THE LIFT TRUCK BACK INTO SERVICE	1 - 25

INSTRUCTIONS TO THE COMPANY MANAGER

THE SITE

- Proper management of lift truck's area of travel will reduce the risk of accidents:
 - . ground not unnecessarily uneven or obstructed,
 - . no excessive slopes,
 - . pedestrian traffic controlled, etc.

THE OPERATOR

- Only qualified, authorized personnel can use the lift truck. This authorization is given in writing by the appropriate person in the establishment with respect to the use of lift trucks and must be carried permanently by the operator.



On the basis of experience, there are a number of possible situations in which operating the lift truck is contra-indicated. Such foreseeable abnormal uses, the main ones being listed below, are strictly forbidden.

- The foreseeable abnormal behaviour resulting from ordinary neglect, but does not result from any wish to put the machinery to any improper use.
 - The reflex reactions of a person in the event of a malfunction, incident, fault, etc. during operation of the lift truck.
 - Behaviour resulting from application of the «principle of least action» when performing a task.
 - For certain machines, the foreseeable behaviour of such persons as: apprentices, teenagers, handicapped persons, trainees tempted to drive a lift truck, operator tempted to operate a truck to win a bet, in competition or for their own personal experience.
- The person in charge of the equipment must take these criteria into account when assessing whether or not a person will make a suitable driver.**

THE LIFT TRUCK

A - THE TRUCK'S SUITABILITY FOR THE JOB

- MANITOU has ensured that this lift truck is suitable for use under the standard operating conditions defined in this operator's manual, with a **STATIC** test coefficient **OF 1.33** and a **DYNAMIC** test coefficient **OF 1**, as specified in harmonized norm **EN 1459** for variable range trucks.
- Before commissioning, the company manager must make sure that the lift truck is appropriate for the work to be done, and perform certain tests (in accordance with current legislation).

B - ADAPTATION OF THE LIFT TRUCK TO STANDARD ENVIRONMENTAL CONDITIONS

- In addition to series equipment mounted on your lift truck, many options are available, such as: road lighting, stop lights, flashing light, reverse lights, reverse buzzer alarm, front light, rear light, light at the jib head, etc... (as model of lift truck).
- The operator must take into account the operating conditions to define the lift truck's signalling and lighting equipment. Contact your dealer.
- Take into account climatic and atmospheric conditions of the site of utilisation.
 - . Protection against frost (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL).
 - . Adaptation of lubricants (ask your dealer for information).
 - . I.C. engine filtration (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS).



For operation under average climatic conditions, i.e.: between - 15 °C and + 35 °C, correct levels of lubricants in all the circuits are checked in production. For operation under more severe climatic conditions, before starting up, it is necessary to drain all the circuits, then ensure correct levels of lubricants using lubricants properly suited to the relevant ambient temperatures. It is the same for the cooling liquid.

- A lift truck operating in an area without fire extinguishing equipment must be equipped with an individual extinguisher. There are solutions, consult your dealer.



Your lift truck is designed for outdoor use under normal atmospheric conditions and indoor use in suitably aerated and ventilated premises. It is prohibited to use the lift truck in areas where there is a risk of fire or which are potentially explosive (e.g. Refineries, fuel or gas depots, stores of inflammable products...). For use in these areas, specific equipment is available (ask your dealer for information).

- Our trucks comply with Directive 2004/108/EC concerning electromagnetic compatibility (EMC), and with the corresponding harmonized norm EN 12895. Their proper operation is no longer guaranteed if they are used within areas in which the electromagnetic fields exceed the limit specified by that norm (10 V/m).
- Directive 2002/44/EC requires company managers to not expose their employees to excessive vibration doses. There is no recognized code of measurement for comparing the machines of different manufacturers. The actual doses received can therefore be measured only under actual operating conditions at the user's premises.
- The following are some tips for minimizing these vibration doses:
 - Select the most suitable lift truck and attachment for the intended use.
 - Adapt the seat adjustment to the operator's weight (according to lift truck model) and maintain it in good condition, as well as the cab suspension. Inflate the tires in accordance with recommendations.
 - Ensure that the operators adapt their operating speed to suit the conditions on site.
 - As far as possible, arrange the site in such a way as to provide a flat running surface and remove obstacles and harmful potholes.

C - MODIFICATION OF THE LIFT TRUCK

- For your safety and that of others, you must not change the structure and settings of the various components used in your lift truck (hydraulic pressure, calibrating limiters, I.C. engine speed, addition of extra equipment, addition of counterweight, unapproved attachments, alarm systems, etc.) yourself. In this event, the manufacturer cannot be held responsible.

D - FRENCH ROAD TRAFFIC RULES

(or see current legislation in other countries)

- Only one certificate of conformity is issued. It must be kept in a safe place.

THE INSTRUCTIONS

- The operator's manual must always be in good condition and kept in the place provided on the lift truck and in the language used by the operator.
- The operator's manual and any plates or stickers which are no longer legible or are damaged, must be replaced immediately.

THE MAINTENANCE

- Maintenance or repairs other than those detailed in part: 3 - MAINTENANCE must be carried out by qualified personnel (consult your dealer) and under the necessary safety conditions to maintain the health of the operator and any third party.



Your lift truck must be inspected periodically to ensure that it remains in compliance. The frequency of this inspection is defined by current legislation in the country in which the lift truck is used.

INSTRUCTIONS FOR THE OPERATOR

PREAMBLE

WHenever you see this symbol it means:



WARNING ! BE CAREFUL ! YOUR SAFETY OR THE SAFETY OF THE LIFT TRUCK IS AT RISK.



The risk of accident while using, servicing or repairing your lift truck can be restricted if you follow the safety instructions and safety measures detailed in these instructions.

- Only the operations and manœuvres described in these operator's manual must be performed. The manufacturer cannot predict all possible risky situations. Consequently, the safety instructions given in the operator's manual and on the lift truck itself are not exhaustive.
- At any time, as an operator, you must envisage, within reason, the possible risk to yourself, to others or to the lift truck itself when you use it.



Failure to respect the safety and operating instructions, or the instructions for repairing or servicing your lift truck may lead to serious, even fatal accident.

GENERAL INSTRUCTIONS

A - OPERATOR'S MANUAL

- Read the operator's manual carefully.
- The operator's manual must always be in good condition and in the place provided for it on the lift truck.
- You must report any plates and stickers which are no longer legible or which are damaged.

B - AUTHORISATION FOR USE IN FRANCE

(or see current legislation in other countries)

- Only qualified, authorized personnel can use the lift truck. This authorization is given in writing by the appropriate person in the establishment with respect to the use of lift trucks and must be carried permanently by the operator.
- The operator is not competent to authorise the driving of the lift truck by another person.

C - MAINTENANCE

- The operator must immediately advise his superior if his lift truck is not in good working order or does not comply with the safety notice.
- The operator is prohibited from carrying out any repairs or adjustments himself, unless he has been trained for this purpose. He must keep the lift truck properly cleaned if this is among his responsibilities.
- The operator must carry out daily maintenance (see: 3 - MAINTENANCE: A - DAILY OR EVERY 10 HOURS SERVICE).
- The operator must ensure tyres are adapted to the nature of the ground (see area of the contact surface of the tyres in the chapter: 2 - DESCRIPTION: FRONT AND REAR TYRES). There are optional solutions, consult your dealer.
 - . SAND tyres.
 - . LAND tyres.
 - . Snow chains.



Do not use the lift truck if the tyres are incorrectly inflated, damaged or excessively worn, because this could put your own safety or that of others at risk, or cause damage to the lift truck itself. The fitting of foam inflated tyres is prohibited and is not guaranteed by the manufacturer, excepting prior authorisation.

D - MODIFICATION OF THE LIFT TRUCK

- For your safety and that of others, you must not change the structure and settings of the various components used in your lift truck (hydraulic pressure, calibrating limiters, I.C. engine speed, addition of extra equipment, addition of counterweight, unapproved attachments, alarm systems, etc.) yourself. In this event, the manufacturer cannot be held responsible.

E - LIFTING PEOPLE

- The use of working equipment and load lifting attachments to lift people is:
 - either forbidden
 - or authorized exceptionally and under certain conditions (see current regulations in the country in which the lift truck is used).
- The pictogram posted at the operator station reminds you that:
 - Left-hand column
 - It is forbidden to lift people, with any kind of attachment, using a non PLATFORM-fitted lift truck.
 - Right-hand column
 - With a PLATFORM-fitted lift truck, people can only be lifted using platforms designed by MANITOU for the purpose.
- MANITOU sells equipment specifically designed for lifting people (OPTION PLATFORM lift truck, contact your dealer).



A - BEFORE STARTING THE LIFT TRUCK

- Carry out daily maintenance (see: 3 - MAINTENANCE: A - DAILY OR EVERY 10 HOURS SERVICE).
- Make sure the lights, indicators and windscreen wipers are working properly.
- Make sure the rear view mirrors are in good condition, clean and properly adjusted.
- Make sure the horn works.

B - DRIVER'S OPERATING INSTRUCTIONS

- Whatever his experience, the operator is advised to familiarize himself with the position and operation of all the controls and instruments before operating the lift truck.
- Wear clothes suited for driving the lift truck, avoid loose clothes.
- Make sure you have the appropriate protective equipment for the job to be done.
- Prolonged exposure to high noise levels may cause hearing problems. It is recommended to wear ear muffs to protect against excessive noise.
- Always face the lift truck when getting into and leaving the driving seat and use the handle(s) provided for this purpose. Do not jump out of the seat to get down.
- Always pay attention when using the lift truck. Do not listen to the radio or music using headphones or earphones.
- Never operate the lift truck when hands or feet are wet or soiled with greasy substances.
- For increased comfort, adjust the seat to your requirements and adopt the correct position in the driver's cab.



Under no circumstances must the seat be adjusted while the lift truck is moving.

- The operator must always be in his normal position in the driver's cab. It is prohibited to have arms or legs, or generally any part of the body, protruding from the driver's cab of the lift truck.
- The safety belt must be worn and adjusted to the operator's size.
- The control units must never in any event be used for any other than their intended purposes (e.g. climbing onto or down from the lift truck, portmanteau, etc.).
- If the control components are fitted with a forced operation (lever lock) device, it is forbidden to leave the cab without first putting these controls in neutral.
- It is prohibited to carry passengers either on the lift truck or in the cab.

C - ENVIRONMENT

- Comply with site safety regulations.
- If you have to use the lift truck in a dark area or at night, make sure it is equipped with working lights.
- During handling operations, make sure that no one is in the way of the lift truck and its load.
- Do not allow anybody to come near the working area of the lift truck or pass beneath an elevated load.
- When using the lift truck on a transverse slope, before lifting the jib, follow the instructions given in the paragraph: INSTRUCTIONS FOR HANDLING A LOAD: D - TRANSVERSE ATTITUDE OF THE LIFT TRUCK.
- Travelling on a longitudinal slope:
 - Drive and brake gently.



- Moving without load: Forks or attachment facing downhill.



- Moving with load: Forks or attachment facing uphill.

- Take into account the lift truck's dimensions and its load before trying to negotiate a narrow or low passageway.
- Never move onto a loading platform without having first checked:
 - That it is suitably positioned and made fast.
 - That the unit to which it is connected (wagon, lorry, etc.) will not shift.
 - That this platform is prescribed for the total weight of the lift truck to be loaded.
 - That this platform is prescribed for the size of the lift truck.
- Never move onto a foot bridge, floor or freight lift, without being certain that they are prescribed for the weight and size of the lift truck to be loaded and without having checked that they are in sound working order.
- Be careful in the area of loading bays, trenches, scaffolding, soft land and manholes.
- Make sure the ground is stable and firm under the wheels and/or stabilizers before lifting or removing the load. If necessary, add sufficient wedging under the stabilizers.
- Make sure that the scaffolding, loading platform, pilings or ground is capable of bearing the load.
- Never stack loads on uneven ground, they may tip over.



If the load or the attachment must remain above a structure for a long time, there is the risk that it will rest on the structure because of the jib descending owing to the oil in the cylinders cooling down.

To eliminate this risk:

- ***Regularly check the distance between the load or the attachment and the structure and readjust this if necessary.***
- ***If possible use the lift truck at an oil temperature as close as possible to ambient temperature.***

- In the case of work near aerial lines, ensure that the safety distance is sufficient between the working area of the lift truck and the aerial line.



You must consult your local electrical agency. You could be electrocuted or seriously injured if you operate or park the lift truck too close to power cables.



In the event of high winds, do not carry out handling work that jeopardizes the stability of the lift truck and its load, particularly if the load catches the wind badly.

D - VISIBILITY

- The safety of people within the lift truck's working area, as well as that of the lift truck itself and the operator are depend on good operator visibility of the lift truck's immediate vicinity in all situations and at all times.
- This lift truck has been designed to allow good operator visibility (direct or indirect by means of rear-view mirrors) of the immediate vicinity of the lift truck while traveling with no load and with the jib in the transport position.
- Special precautions must be taken if the size of the load restricts visibility towards the front:
 - moving in reverse,
 - site layout,
 - assisted by a person directing the maneuver (while standing outside the truck's area of travel), making sure to keep this person clearly in view at all times.
 - in any case, avoid reversing over long distances.
- Certain special accessories may require the truck to travel with the jib in the raised position. In such cases, visibility on the right hand side is restricted, and special precautions must be taken:
 - site layout,
 - assisted by a person directing the maneuver (while standing outside the truck's area of travel).
- If visibility of your road is inadequate, ask someone to assist by directing the maneuver (while standing outside the truck's area of travel), making sure to keep this person clearly in view at all times.
- Keep all components affecting visibility in a clean, properly adjusted state and in good working order (e.g. windscreens, windows, windscreen wipers, windscreen washers, driving and work lights, rear-view mirrors).

E - STARTING THE LIFT TRUCK

SAFETY INSTRUCTIONS



The lift truck must only be started up or maneuvered when the operator is sitting in the driver's cab, with his seat belt adjusted and fastened.

- Never try to start the lift truck by pushing or towing it. Such operation may cause severe damage to the transmission. If necessary, to tow the lift truck in an emergency, the transmission must be placed in the neutral position (see: 3 - MAINTENANCE: G - OCCASIONAL MAINTENANCE).
- If using an emergency battery for start-up, use a battery with the same characteristics and respect battery polarity when connecting it. Connect at first the positive terminals before the negative terminals.



Failure to respect polarity between batteries can cause serious damage to the electrical circuit. The electrolyte in the battery may produce an explosive gas. Avoid flames and generation of sparks close to the batteries. Never disconnect a battery while it is charging.

INSTRUCTIONS

- Check the closing and locking of the hood(s).
- Check that the cab door is closed.
- Check that the forward/reverse selector is in neutral.
- Turn the ignition key to the position I to activate the electrical system and the preheat.
- Whenever you switch on the lift truck, perform the automatic check on the longitudinal stability limiter and warning device system (see: 2 - DESCRIPTION: INSTRUMENTS AND CONTROLS). Do not use the lift truck if it does not conform to the regulations.
- Check the fuel level on the indicator.
- Turn the ignition key fully: the I.C. engine should then start. Release the ignition key and let the I.C. engine run at idle.
- Do not engage the starter motor for more than 15 seconds and carry out the preheating between unsuccessful attempts.
- Make sure all the signal lights on the control instrument panel are off.
- Check all control instruments when the I.C. engine is warm and at regular intervals during use, so as to quickly detect any faults and to be able to correct them without any delay.
- If an instrument does not show the correct display, stop the I.C. engine and immediately carry out the necessary operations.

F - DRIVING THE LIFT TRUCK

SAFETY INSTRUCTIONS



Operators' attention is drawn to the risks involved in using the lift truck, in particular:

- ***Risk of losing control.***
- ***Risk of losing lateral and frontal stability of the lift truck.***

The operator must remain in control of the lift truck.

In the event of the lift truck overturning, do not try to leave the cabin during the incident. YOUR BEST PROTECTION IS TO STAY FASTENED IN THE CABIN.

- Observe the company's traffic regulations or, by default, the public highway code.
- Do not carry out operations which exceed the capacities of your lift truck or attachments.
- Always drive the lift truck with the forks or attachment to the transport position, i.e. at 300 mm from the ground, the jib retracted and the carriage sloping backwards.
- Only carry loads which are balanced and properly anchored to avoid any risk of a load falling off.
- Ensure that pallets, cases, etc, are in good order and suitable for the load to be lifted.
- Familiarise yourself with the lift truck on the terrain where it will be used.
- Ensure that the service brakes are working properly.
- The loaded lift truck must not travel at speeds in excess of 12 km/h.
- Drive smoothly at an appropriate speed for the operating conditions (land configuration, load on the lift truck).
- Do not use the hydraulic jib controls when the lift truck is moving.
- Never change the steering mode whilst driving.
- Do not manoeuvre the lift truck with the jib in the raised position unless under exceptional circumstances and then with extreme caution, at very low speed and using gentle braking. Ensure that visibility is adequate.
- Take bends slowly.
- In all circumstances make sure you are in control of your speed.
- On damp, slippery or uneven terrain, drive slowly.
- Brake gently, never abruptly.
- Only use the lift truck's forward/reverse selector from a stationary position and never do so abruptly.
- Do not drive with your foot on the brake pedal.
- Always remember that hydrostatic type steering is extremely sensitive to movement of the steering wheel, so turn it gently and not jerkily.
- Never leave the I.C. engine on when the lift truck is unattended.
- Do not leave the cab when the lift truck has a raised load.
- Look where you are going and always make sure you have good visibility along the route.

- Use the rear-view mirrors frequently.
- Drive round obstacles.
- Never drive on the edge of a ditch or steep slope.
- It is dangerous to use two lift trucks simultaneously to handle heavy or voluminous loads, since this operation requires particular precautions to be taken. It must only be used exceptionally and after risk analysis.
- The ignition switch has an emergency stop mechanism in case of an operating anomaly occurring in the case of lift trucks not fitted with a punch-operated cut-out.

INSTRUCTIONS

- Always drive the lift truck with the forks or attachment to the transport position, i.e. at 300 mm from the ground, the jib retracted and the carriage sloping backwards.
- For lift trucks with gearboxes, use the recommended gear (see: 2 - DESCRIPTION: INSTRUMENTS AND CONTROLS).
- Select the steering mode appropriate for its use and/or working conditions (see: 2 - DESCRIPTION: INSTRUMENTS AND CONTROLS) (as model of lift truck).
- Release the parking brake.
- Shift the forward/reverse selector to the selected direction of travel and accelerate gradually until the lift truck moves off.

G - STOPPING THE LIFT TRUCK

SAFETY INSTRUCTIONS

- Never leave the ignition key in the lift truck during the operator's absence.
- When the lift truck is stationary, or if the operator has to leave his cab (even for a moment), place the forks or attachment on the ground, apply the parking brake and place the forward/reverse selector in neutral.
- Make sure that the lift truck is not stopped in any position that will interfere with the traffic flow and at less than one meter from the track of a railway.
- In the event of prolonged parking on a site, protect the lift truck from bad weather, particularly from frost (check the level of antifreeze), close and lock all the lift truck accesses (doors, windows, cowls...).

INSTRUCTIONS

- Park the lift truck on flat ground or on an incline lower than 15 %.
- Set the forward/reverse selector to neutral.
- Apply the parking brake.
- For lift trucks with gearboxes, place the gear lever in neutral.
- Retract entirely the jib.
- Lower the forks or attachment to rest on the ground.
- When using an attachment with a grab or jaws, or a bucket with hydraulic opening, close the attachment fully.
- Before stopping the lift truck after a long working period, leave the I.C. engine idling for a few moments, to allow the coolant liquid and oil to lower the temperature of the I.C. engine and transmission. Do not forget this precaution, in the event of frequent stops or warm stalling of the I.C. engine, or else the temperature of certain parts will rise significantly due to the stopping of the cooling system, with the risk of badly damaging such parts.
- Stop the I.C. engine with the ignition switch.
- Remove the ignition key.
- Lock all the accesses to the lift truck (doors, windows, cowls...).

H - DRIVING THE LIFT TRUCK ON THE PUBLIC HIGHWAY

(or see current legislation in other countries)

SAFETY INSTRUCTIONS

- Operators driving on the public highway must comply with current highway code legislation.
- The lift truck must comply with current road legislation. If necessary, there are optional solutions. Contact your dealer.

INSTRUCTIONS

- Make sure the revolving light is in place, switch it on and verify its operation.
- Make sure the lights, indicators and windscreen wipers are working properly.
- Switch off the working headlights if the lift truck is fitted with them.
- Select the steering mode "HIGHWAY TRAFFIC" (as model of lift truck) (see: 2 - DESCRIPTION: INSTRUMENTS AND CONTROLS).
- Retract entirely the jib and put the attachment at 300 mm from the ground.
- Place the slope correctors in the central position, i.e. the transverse shaft of the axles parallel to the chassis (as model of lift truck).
- Lift up the stabilizers to the maximum and turn the blocks inwards (as model of lift truck).



Never move in neutral (forward/reverse selector or gear lever in neutral or transmission cut-off button pressed) to preserve the lift truck engine brake. Failure to respect this instruction on a slope will lead to excessive speed which may make the lift truck uncontrollable (steering, brakes) and cause serious mechanical damage.

DRIVING THE LIFT TRUCK WITH A FRONT-MOUNTED ATTACHMENT

- You must comply with current regulations in your country, covering the possibility of driving on the public highway with a front-mounted attachment on your lift truck.
- If road legislation in your country authorizes circulation with a front-mounted attachment, you must at least:
 - Protect and report any sharp and/or dangerous edges on the attachment (see: 4 - ADAPTABLE ATTACHMENTS IN OPTION ON THE RANGE: ATTACHMENT SHIELDS).
 - The attachment must not be loaded.
 - Make sure that the attachment does not mask the lighting range of the forward lights.
 - Make sure that current legislation in your country does not require other obligations.

OPERATING THE LIFT TRUCK WITH A TRAILER

- For using a trailer, observe the regulations in force in your country (maximum travel speed, braking, maximum weight of trailer, etc.).
- Do not forget to connect the trailer's electrical equipment to that of the lift truck.
- The trailer's braking system must comply with current legislation.
- If pulling a trailer with assisted braking, the tractor lift truck must be equipped with a trailer braking mechanism. In this case, do not forget to connect the trailer braking equipment to the lift truck.
- The vertical force on the towing hook must not exceed the maximum authorised by the manufacturer (consult the manufacturer's plate on your lift truck).
- The authorised gross vehicle weight must not exceed the maximum weight authorised by the manufacturer (see: 2 - DESCRIPTION: CHARACTERISTICS).

IF NECESSARY, CONSULT YOUR DEALER.

INSTRUCTIONS FOR HANDLING A LOAD

A - CHOICE OF ATTACHMENTS

- Only attachments approved by MANITOU can be used on its lift trucks.
- Make sure the attachment is appropriate for the work to be done (see: 4 - ADAPTABLE ATTACHMENTS IN OPTION ON THE RANGE).
- If the lift truck is equipped with the Single side-shift carriage OPTION (TSDL), use only the authorised attachments (see: 4 - ADAPTABLE ATTACHMENTS IN OPTION ON THE RANGE).
- Make sure the attachment is correctly installed and locked onto the lift truck carriage.
- Make sure that your lift truck attachments work properly.
- Comply with the load chart limits for the lift truck for the attachment used.
- Do not exceed the rated capacity of the attachment.
- Never lift a load in a sling without the attachment provided for the purpose, as the sling risks to slip (see: INSTRUCTIONS FOR HANDLING A LOAD: H - TAKING UP AND LAYING DOWN A SUSPENDED LOAD).

B - MASS OF LOAD AND CENTRE OF GRAVITY



- Before taking up a load, you must know its mass and its centre of gravity.
- The load chart for your lift truck is valid for a load in which the longitudinal position of the centre of gravity is 500 mm from the base of the forks (fig. B1). For a higher centre of gravity, contact your dealer.
- For irregular loads, determine the transverse centre of gravity before any movement (fig. B2) and set it in the longitudinal axis of the lift truck.



It is forbidden to move a load heavier than the effective capacity defined on the lift truck load chart.



For loads with a moving centre of gravity (e.g. liquids), take account of the variations in the centre of gravity in order to determine the load to be handled and be vigilant and take extra care to limit these variations as far as possible.

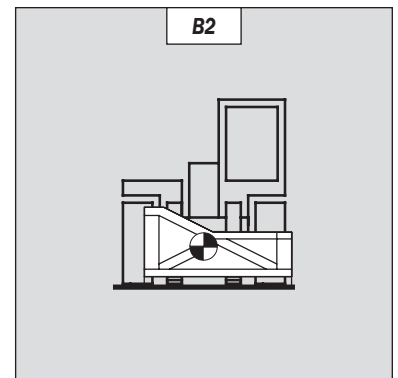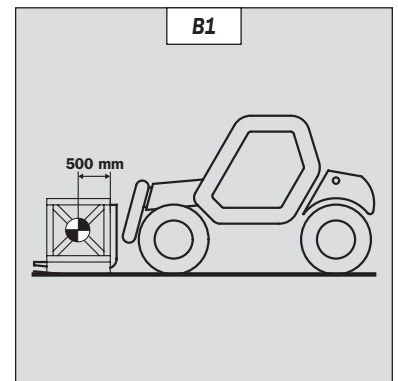


C - LONGITUDINAL STABILITY LIMITER AND WARNING DEVICE

This device gives an indication of the longitudinal stability of the lift truck, and limits hydraulic movements in order to ensure this stability, at least under the following operating conditions:

- when the lift truck is at a standstill,
 - when the lift truck is on firm, stable and consolidated ground,
 - when the lift truck is performing handling and placing operations.
- Move the jib very carefully when approaching the authorized load limit (see: 2 - DESCRIPTION: INSTRUMENTS AND CONTROLS).
 - Always watch this device during handling operations.
 - In the event that "AGGRAVATING" hydraulic movements are cut-off, only perform de-aggravating hydraulic movements in the following order (fig. C): if necessary, raise the jib (1), retract the jib as far as possible (2) and lower the jib (3) to set down the load.



The instrument reading may be erroneous when the steering is at its maximum limit or the rear axle oscillated to its limit. Before lifting a load, make sure that the lift truck is not in either of these situations.

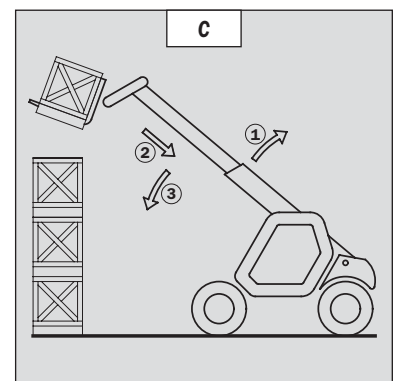

D - TRANSVERSE ATTITUDE OF THE LIFT TRUCK

Depending on the model of lift truck


The transverse attitude is the transverse slope of the chassis with respect to the horizontal. Raising the jib reduces the lift truck's lateral stability. The transverse attitude must be set with the jib in down position as follows:

1 - LIFT TRUCK WITHOUT SLOPE CORRECTOR USED ON TYRES

- Position the lift truck so that the bubble in the level is between the two lines (see: 2 - DESCRIPTION: INSTRUMENTS AND CONTROLS).

2 - LIFT TRUCK WITH SLOPE CORRECTOR USED ON TYRES

- Correct the slope using the hydraulic control and verify the horizontality via the level. The bubble in the level must be between the two lines (see: 2 - DESCRIPTION: INSTRUMENTS AND CONTROLS).

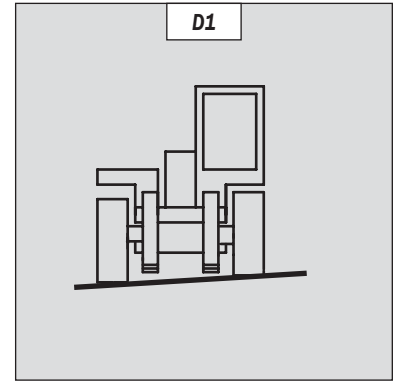


E - TAKING UP A LOAD ON THE GROUND

- Approach the lift truck perpendicular to the load, with the jib retracted and the forks in a horizontal position (fig. E1).
- Adjust the fork spread and centering in connection with the load (fig. E2) (optional solutions exist, consult your dealer).
- Never lift a load with a single fork.






Beware of the risks of trapping or squashing limbs when manually adjusting the forks.

- Move the lift truck forward slowly (1) and bring the forks to stop in front of the load (fig. E3), if necessary, slightly lift the jib (2) while taking up the load.
- Bring the load into the transport position.
- Tilt the load far enough backwards to ensure stability (loss of load on braking or going downhill).

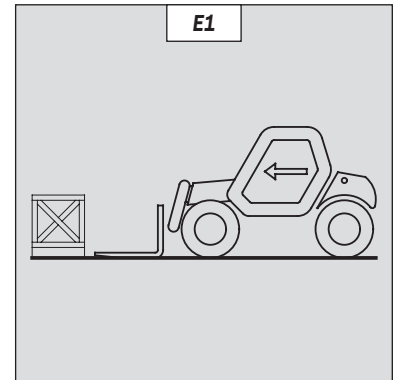

FOR A NON-PALLETIZED LOAD

- Tilt the carriage (1) forwards and move the lift truck slowly forwards (2), to insert the fork under the load (fig. E4) (block the load if necessary).
- Continue to move the lift truck forwards (2) tilting the carriage (3) (fig. E4) backwards to position the load on the forks and check the load's longitudinal and lateral stability.

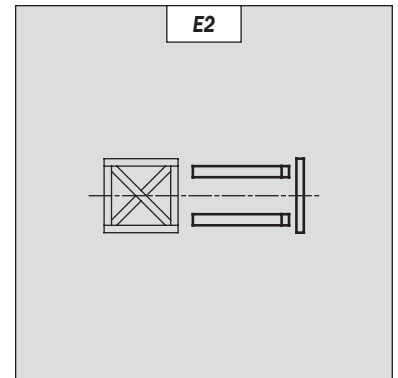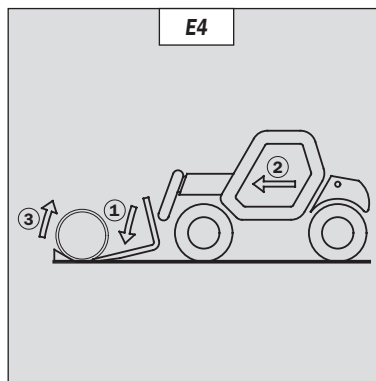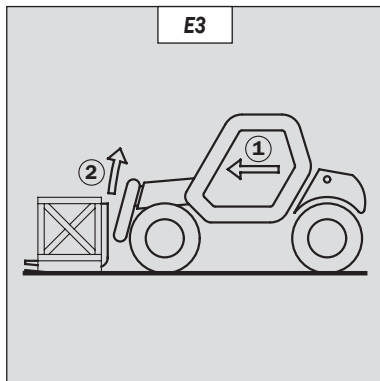

F - TAKING UP AND LAYING A HIGH LOAD ON TYRES








You must not raise the jib if you have not checked the transverse attitude of the lift truck (see: INSTRUCTIONS FOR HANDLING A LOAD: D - TRANSVERSE ATTITUDE OF THE LIFT TRUCK).

REMINDER: Make sure that the following operations can be performed with good visibility (see: OPERATIONS INSTRUCTIONS UNLADEN AND LADEN: D - VISIBILITY).






TAKING UP A HIGH LOAD ON TYRES

- Ensure that the forks will easily pass under the load.
- Lift and extend the jib (1) (2) until the forks are level with the load, moving the lift truck (3) forward if necessary (fig. F1), moving very slowly and carefully.
- Always think about keeping the distance necessary to fit the forks under the load, between the pile and the lift truck (fig. F1) and use the shortest possible length of jib.
- Stop the forks in front of the load by alternately extending and retracting the jib (1) or, if necessary, moving the lift truck forward (2) (fig. F2). Put the handbrake on and set the forward/reverse selector to neutral.
- Slightly lift the load (1) and incline the carriage (2) backwards to stabilize the load (fig. F3).
- Tilt the load sufficiently backwards to ensure its stability.
- Watch the longitudinal stability limiter and warning device (see: INSTRUCTIONS FOR HANDLING A LOAD: C - LONGITUDINAL STABILITY LIMITER AND WARNING DEVICE). If it is overloaded, replace the load in the place from which it was taken.
- If possible lower the load without shifting the lift truck. Lift the jib (1) to release the load, retract (2) and lower the jib (3) to bring the load into the transport position (fig. F4).
- If this is not possible, back up the lift truck (1), manoeuvring very gently and carefully to release the load. Retract (2) and lower the jib (3) to bring the load into the transport position (fig. F5).

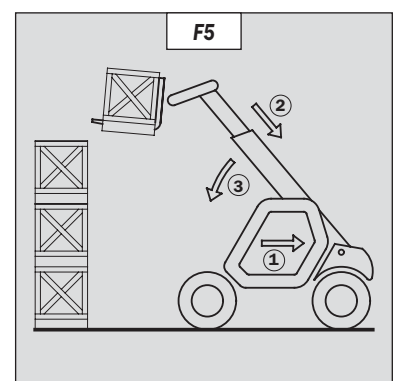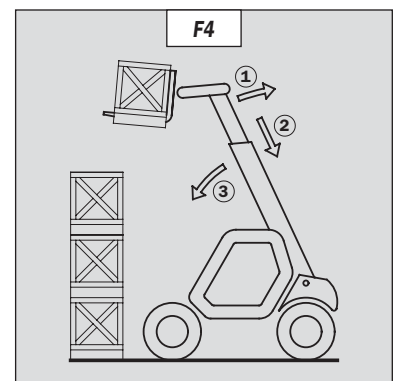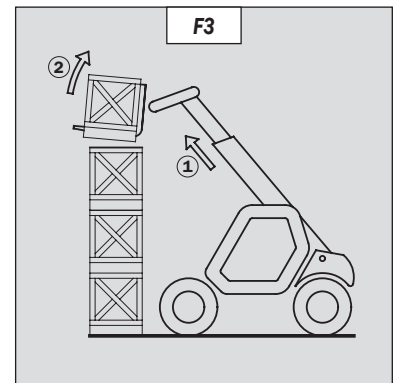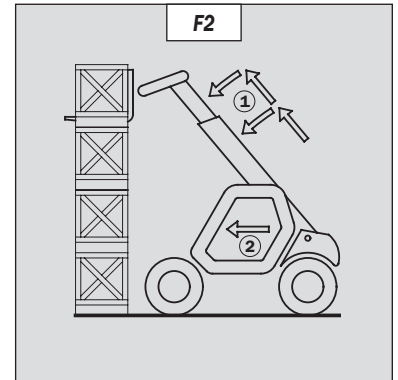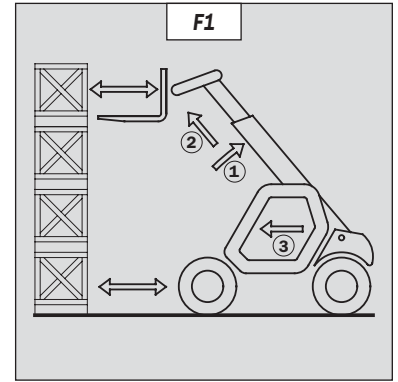

LAYING A HIGH LOAD ON TYRES

- Approach the load in the transport position in front of the pile (fig. F6).
- Put the handbrake on and set the forward/reverse selector to neutral.
- Lift and extend the jib (1) (2) until the load is above the pile, while keeping an eye on the longitudinal stability limiter and warning device (see: INSTRUCTIONS FOR HANDLING A LOAD: C - LONGITUDINAL STABILITY LIMITER AND WARNING DEVICE). If necessary, move the lift truck (3) forward (fig. F7), driving very slowly and carefully.
- Place the load in a horizontal position and lay it down on the pile by lowering and retracting the jib (1) (2) in order to position the load correctly (fig. F8).
- If possible, release the fork by alternately retracting and raising the jib (1) (fig. F9). Then set the forks into transport position.
- If this is not possible, reverse the lift truck (1) very slowly and carefully to release the forks (fig. F10). Then set them into transport position.

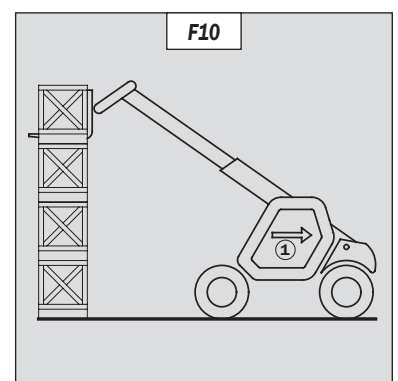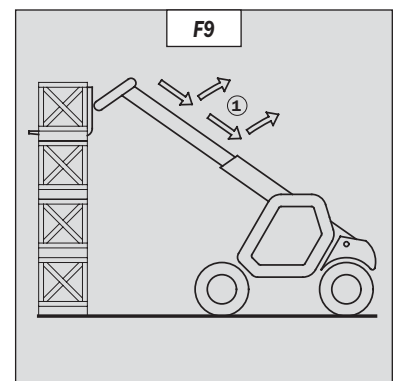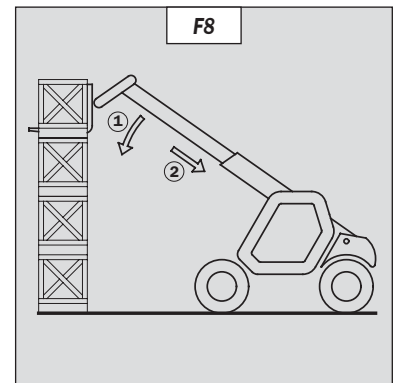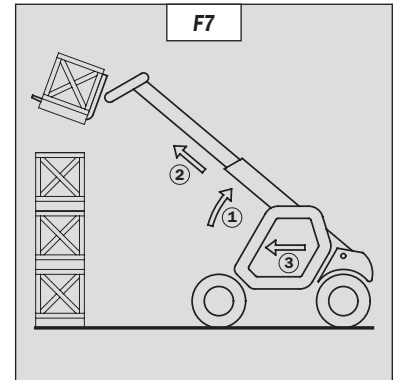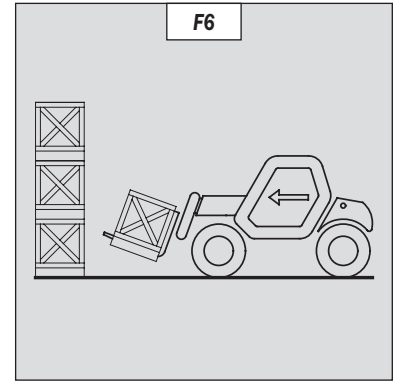

G - TAKING UP AND LAYING DOWN A SUSPENDED LOAD



WARNING: Failure to follow the above instructions may lead the lift truck to loose stability and overturn.



MUST be used with a lift truck equipped with an operational hydraulic movement cut-out device.

CONDITIONS OF USE

- The length of the sling or the chain shall be as short as possible to limit swinging of the load.
- Lift the load vertically along its axis, never by pulling sideways or lengthways.

HANDLING WITHOUT MOVING THE LIFT TRUCK

- Whether on stabilisers or on tyres, the lateral attitude must not exceed 1 % and the longitudinal attitude must not exceed 5%, the bubble of the level must be held at "0".
- Ensure that the wind speed is not higher than 10 m/s.
- Ensure that there is no one between the load and the lift truck.

H - TRAVELLING WITH A SUSPENDED LOAD

- Before moving, inspect the terrain in order to avoid excessive slopes and cross-falls, bumps and potholes, or soft ground.
- Ensure that the wind speed is not higher than 10 m/s.
- The lift truck must not travel at more than 0.4 m/s (1.5 km/h, i.e., one quarter walking speed).
- Drive and stop the lift truck gently and smoothly to minimise swinging of the load.
- Carry the load a few centimetres above the ground (max. 30 cm) the shortest possible jib length. Do not exceed the offset indicated on the load chart. If the load begins to swing excessively, do not hesitate to stop and lower the jib to set down the load.
- Before moving the lift truck, check the longitudinal stability limiter and warning device (see: 2 - DESCRIPTION: INSTRUMENTS AND CONTROLS), only the green LEDs and possibly the yellow LEDs should be lit.
- During transport, the lift truck operator must be assisted by a person on the ground (standing a minimum of 3 m from the load), who will limit swinging of the load using a bar or a rope. Ensure that this person is always clearly in view.
- The lateral attitude must not exceed 5%, the bubble in the level must be kept between the two "MAX." marks
- The longitudinal attitude must not exceed 15%, with the load facing uphill, and 10%, with the load facing downhill.
- The jib angle must not exceed 45°.
- If the first red LED of the longitudinal stability limiter and warning device (see: 2 - DESCRIPTION: INSTRUMENTS AND CONTROLS) comes on while travelling, gently bring the lift truck to a stop and stabilise the load. Retract the telescope to reduce the offset of the load.

PLATFORM OPERATING INSTRUCTIONS

For PLATFORM-fitted lift trucks



Installation of the platform on the lift truck is only possible if the shields “operating the platform” of the lift truck and the platform are identical (see: 2 - DESCRIPTION: OPERATING THE PLATFORM).

A - AUTHORISATION FOR USE

- Operation of the platform requires further authorisation in addition to that of the lift truck.

B - SUITABILITY OF THE TRUCK FOR USE

- MANITOU has ensured that this lift truck is suitable for use under the standard operating conditions defined in this operator's manual, with a **STATIC test coefficient of 1.25** and a **DYNAMIC test coefficient of 1.1**, as specified in harmonised standard **EN 280** for “mobile elevating work platforms”.
- Before commissioning, the company manager must make sure that the platform is appropriate for the work to be done, and perform certain tests (in accordance with current legislation).

C - PRECAUTIONS WHEN USING THE PLATFORM

- Wear clothes suited for operating the platform, avoid loose clothes.
- Never operate the platform when hands or feet are wet or soiled with greasy substances.
- Always pay attention when using the platform. Do not listen to the radio or music using headphones or earphones.
- For increased comfort, adopt the correct position at the platform's operator station.
- The platform's guard rail exempts the operator from wearing a safety harness under normal operating conditions. As a result, you are responsible deciding whether to wear a safety harness.
- The controls must not be used for any other than their intended purpose (e.g. getting in and out of the lift truck, coat hanger etc.).
- Safety helmets must be worn.
- The operator must always be in the normal operator's position. It is prohibited to have arms or legs, or generally any part of the body, protruding from the basket.
- Ensure that any materials loaded onto the platform (pipes, cables, containers, etc.) cannot fall out. Do not pile these materials to the point where it is necessary to step over them.

D - USING THE PLATFORM

- However experienced they may be, operators must acquaint themselves with the emplacement and operation of all control instruments prior to operating the platform.
- Check before operating that the platform has been correctly assembled and locked onto the lift truck.
- Check before operating the platform that the access gate has been properly locked.
- The platform should be operated in an area free of any obstructions or danger when it is lowered to the ground.
- The operator using the platform must be aided on the ground by a person with adequate training.
- You should stay within the limits set out in the platform load chart.
- The lateral stresses are limited pressure (see: 2 - DESCRIPTION: CHARACTERISTICS).
- It is strictly forbidden to hand a load from the platform or the lift truck jib without a specially designed attachment (see: INSTRUCTIONS FOR HANDLING A LOAD: H - TAKING UP AND LAYING DOWN A SUSPENDED LOAD).
- The platform cannot be used as a crane or a lift for permanently transporting people or materials, nor as jacks or supports.
- The lift truck must not be moved with one (or more) person(s) in the platform.
- It is forbidden to transport people on the platform using the hydraulic controls in the lift truck's driver's cab (except in case of rescue).
- The operator must not get in or out of the platform when it is not on ground level (jib retracted and in the down position).
- The platform must not be fitted with attachments that increase the unit's wind load.
- Do not use ladders or improvised structures in the platform to gain extra height.
- Do not climb onto the sides of the platform to gain extra height.

E - ENVIRONMENT



Operating the platform close to electricity cables is forbidden. Maintain the specified safe distances.

NOMINAL VOLTAGE	DISTANCE ABOVE THE GROUND OR THE FLOOR IN METRES
50 < U < 1000	2,30 M
1000 < U < 30000	2,50 M
30000 < U < 45000	2,60 M
45000 < U < 63000	2,80 M
63000 < U < 90000	3,00 M
90000 < U < 150000	3,40 M
150000 < U < 225000	4,00 M
225000 < U < 400000	5,30 M
400000 < U < 750000	7,90 M



Operation of the platform is strictly forbidden in the event of wind speeds of over 45 km/h.

- The following scale is given for an empiric evaluation of the wind speed:

BEAUFORT scale (wind speed at a height of 10 m from flat ground)						
Force	Type of wind	Speed (knots)	Speed (kph)	Speed (m/s)	Effects on Land	Sea condition
0	Calm	0 - 1	0 - 1	< 0,3	Smoke rises vertically.	Sea like a mirror.
1	Light air	1 - 3	1 - 5	0,3 - 1,5	The wind bends the smoke.	Ripples but without foam crests.
2	Light breeze	4 - 6	6 - 11	1,6 - 3,3	The wind can be felt on the face, shakes the leaves.	Small but evident wavelets.
3	Gentle breeze	7 - 10	12 - 19	3,4 - 5,4	The wind continuously shakes the leaves and twigs.	Large wavelets Perhaps scattered white horses.
4	Moderate breeze	11 - 16	20 - 28	5,5 - 7,9	The wind raises dust and scraps of paper, shakes the twigs.	Small waves. Fairly frequent white horses.
5	Fresh breeze	17 - 21	29 - 38	8 - 10,7	Leafy shrubs sway.	Small waves form on inland waters. Moderate waves, many white horses.
6	Strong breeze	22 - 27	39 - 49	10,8 - 13,8	Shakes thick branches, metal wires hum, it becomes difficult to keep an umbrella open.	Large waves begin to form, white foam crests, probably spray.
7	Near gale	28 - 33	50 - 61	13,9 - 17,1	Whole trees sway, it is difficult to walk against the wind.	Sea heaps up and white foam blown in streaks along the direction of the wind.
8	Gale	34 - 40	62 - 74	17,2 - 20,7	Breaks the branches of trees, it is almost impossible to walk against the wind.	Moderately high waves, crests begin to break into spindrift.
9	Strong gale	41 - 47	75 - 88	20,8 - 24,4	Causes slight damage to buildings (stacks, tiles, etc..).	High waves. Dense foam along the direction of the wind. Crests of waves begin to roll over. Spray may affect visibility.
10	Storm	48 - 55	89 - 102	24,5 - 28,4	Rare inland, uproots trees, causes considerable damage to buildings.	Very high waves with long overhanging crests. Visibility affected.
11	Violent storm	56 - 63	103 - 117	28,5 - 32,6	Very rare, causes extensive devastation.	Exceptionally high waves that may hide medium sized ships. Visibility affected.
12	Hurricane	64 +	118 +	32,7 +	Causes very serious catastrophes.	The air is filled with foam and spray. Sea completely white with driving spray. Visibility very seriously affected.

F - MAINTENANCE



Your platform must be periodically inspected to ensure its continued compliance. The inspection frequency is defined by the current legislation in the country in which the platform is used.

INSTRUCTIONS FOR USING THE RADIO-CONTROL

For lift trucks with RC radio control

HOW TO USE THE RADIO-CONTROL

SAFETY INSTRUCTIONS

- This radio-control consists of electronic and mechanical safety elements. It cannot receive commands from another transmitter because the internal encoding is unique to each radio-control.



If it is used improperly or incorrectly, there is a risk of danger to:

- The physical and mental health of the user or others.***
- The lift truck and other neighbouring items.***



Everyone working with this radio-control:

- Must be qualified in line with current regulations and therefore appropriately trained.***
- Must follow this instruction manual as closely as possible.***

- The system is used to control the lift truck remotely via radio waves. Commands are also transmitted if the lift truck is out of sight (behind an obstacle or a building for example), this is why:
 - After stopping the truck and removing the key button (only possible when it is stationary), always place the transmitter in a safe, dry place.
 - Before performing any installation, servicing or repair work, always switch off power sources (in particular, electric welding devices and electric head units on hydraulic distributors must be disconnected at each section).
 - Never remove or alter the safety devices (such as the hand-guard frame, key, emergency stop button, etc.).



Never drive the lift truck if it is not continuously and perfectly within view of the operator!

- Before leaving the transmitter, the operator must make sure that it cannot be used by an unauthorized third person: either by removing the key button from the transmitter or locking it in an inaccessible place.
- The user must ensure that the instruction manual is accessible at all times and that operators have read and understood it.

INSTRUCTIONS

- Take up position in a stable place with no risk of slipping.
- Before using the transmitter, make sure there is nobody within the working area.
- Only use the transmitter with its carrying device or installed correctly on the platform.



When you remove the transmitter, remove the accumulator and key button so that it cannot be used accidentally or deliberately by anyone else.

PROTECTIVE DEVICES

- The lift truck will be immobilised within 450 milliseconds (approx. 0.5 second) at most:
 - If the transmitter emergency stop button (50 milliseconds), or the one on the lift is pressed.
 - If the transmission distance of the radio waves is exceeded.
 - If the transmitter is faulty.
 - If an interfering radio signal is received from elsewhere.
 - If the accumulator is removed from its housing in the transmitter.
 - If the accumulator reaches the end of its autonomy.
 - If the transmitter is switched off by turning the key button to stop.
- These protective devices are provided for the safety of personnel and property and must never be altered, removed or bypassed in any way whatsoever!
- The hand-guard frame prevents external action on a manipulator (if the transmitter falls, for example, or if the operator leans on a guard-rail).
- An electronic safety device prevents radio transmission from being initiated if the manipulators are not mechanically and electrically at rest and if the internal combustion engine speed selector is not set to idle.



In an emergency, press the transmitter emergency stop button immediately ; then follow the manual's instructions (see: 2 - DESCRIPTION: INSTRUMENTS AND CONTROLS).

MAINTENANCE INSTRUCTIONS OF THE LIFT TRUCK

GENERAL INSTRUCTIONS

- Ensure the area is sufficiently ventilated before starting the lift truck.
- Wear clothes suitable for the maintenance of the lift truck, avoid wearing jewellery and loose clothes. Tie and protect your hair, if necessary.
- Stop the I.C. engine and remove the ignition key, when an intervention is necessary.
- Read the operator's manual carefully.
- Carry out all repairs immediately, even if the repairs concerned are minor.
- Repair all leaks immediately, even if the leak concerned is minor.
- Make sure that the disposal of process materials and of spare parts is carried out in total safety and in a ecological way.
- Be careful of the risk of burning and splashing (exhaust, radiator, I.C. engine, etc.).

MAINTENANCE

- Perform the periodic service (see: 3 - MAINTENANCE) to keep your lift truck in good working conditions. Failure to perform the periodic service may cancel the contractual guarantee.

MAINTENANCE LOGBOOK

- The maintenance operations carried out in accordance with the recommendations given in part: 3 - MAINTENANCE and the other inspection, servicing or repair operations or modifications performed on the lift truck or its attachments shall be recorded in a maintenance logbook. The entry for each operation shall include details of the date of the works, the names of the individuals or companies having performed them, the type of operation and its frequency, if applicable. The part numbers of any lift truck items replaced shall also be indicated.

LUBRICANT AND FUEL LEVELS

- Use the recommended lubricants (never use contaminated lubricants).
- Do not fill the fuel tank when the I.C. engine is running.
- Only fill up the fuel tank in areas specified for this purpose.
- Do not fill the fuel tank to the maximum level.
- Do not smoke or approach the lift truck with a flame, when the fuel tank is open or is being filled.

HYDRAULIC

- Any work on the load handling hydraulic circuit is forbidden except for the operations described in part: 3 - MAINTENANCE.
- Do not attempt to loosen unions, hoses or any hydraulic component with the circuit under pressure.



BALANCING VALVE: *It is dangerous to change the setting and remove the balancing valves or safety valves which may be fitted to your lift truck cylinders. These operations must only be performed by approved personnel (consult your dealer).*



HYDRAULIC ACCUMULATORS: *The HYDRAULIC ACCUMULATORS that may be fitted on your lift truck are pressurized units. Removing these accumulators and their pipework is a dangerous operation and must only be performed by approved personnel (consult your dealer).*

ELECTRICITY

- Do not short-circuit the starter relay to start the IC engine. If the forward/reverse selector is not in neutral and the parking brake is not engaged, the lift truck may suddenly start to move.
- Do not drop metallic items on the battery.
- Disconnect the battery before working on the electrical circuit.

WELDING

- Disconnect the battery before any welding operations on the lift truck.
- When carrying out electric welding work on the lift truck, connect the negative cable from the equipment directly to the part being welded, so as to avoid high tension current passing through the alternator.
- Never carry out welding or work which gives off heat on an assembled tyre. The heat would increase the pressure which could cause the tyre to explode.
- If the lift truck is equipped with an electronic control unit, disconnect this before starting to weld, to avoid the risk of causing irreparable damage to electronic components.

WASHING THE LIFT TRUCK

- Clean the lift truck or at least the area concerned before any intervention.
- Remember to close and lock all accesses to the lift truck (doors, windows, cowl...).)
- During washing, avoid the articulations and electrical components and connections.
- If necessary, protect against penetration of water, steam or cleaning agents, components susceptible of being damaged, particularly electrical components and connections and the injection pump.
- Clean the lift truck of any fuel, oil or grease trace.

FOR ANY INTERVENTION OTHER THAN REGULAR MAINTENANCE, CONSULT YOUR DEALER.

IF THE LIFT TRUCK IS NOT TO BE USED FOR A LONG TIME

INTRODUCTION

The following recommendations are intended to prevent the lift truck from being damaged when it is withdrawn from service for an extended period.

For these operations, we recommend the use of a MANITOU protective product, reference 603726.

Instructions for using the product are given on the packaging.



Procedures to follow if the lift truck is not to be used for a long time and for starting it up again afterwards must be performed by your dealership.

PREPARING THE LIFT TRUCK

- Clean the lift truck thoroughly.
- Check and repair any leakage of fuel, oil, water or air.
- Replace or repair any worn or damaged parts.
- Wash the painted surfaces of the lift truck in clear and cold water and wipe them.
- Touch up the paintwork if necessary.
- Shut down the lift truck (see: OPERATING INSTRUCTIONS UNLADEN AND LADEN).
- Make sure the jib cylinder rods are all in retracted position.
- Release the pressure in the hydraulic circuits.

PROTECTING THE I.C. ENGINE

- Fill the tank with fuel (see: 3 - MAINTENANCE: A - DAILY OR EVERY 10 HOURS SERVICE).
 - Empty and replace the cooling liquid (see: 3 - MAINTENANCE: F - EVERY 2000 HOURS SERVICE).
 - Leave the I.C. engine running at idling speed for a few minutes, then switch off.
 - Replace the I.C. engine oil and oil filter (see: 3 - MAINTENANCE: D - EVERY 500 HOURS SERVICE).
 - Add the protective product to the engine oil.
 - Run the I.C. engine for a short time so that the oil and cooling liquid circulate inside.
 - Disconnect the battery and store it in a safe place away from the cold, after charging it to a maximum.
 - Remove the injectors and spray the protective product into each cylinder for two seconds with the piston in low neutral position.
 - Turn the crankshaft once slowly and refit the injectors (see I.C. engine REPAIR MANUAL).
 - Remove the intake hose from the manifold or turbocharger and spray the protective product into the manifold or turbocharger.
 - Cap the intake manifold or turbocharger hole with waterproof adhesive tape.
 - Remove the exhaust pipe and spray the protective product into the exhaust manifold or turbocharger.
 - Refit the exhaust pipe and block the outlet with waterproof adhesive tape.
- NOTE: The spray time is noted on the product packaging and must be increased by 50 % for turbo engines.
- Open the filler plug, spray the protective product around the rocker arm shaft and refit the filler plug.
 - Cap the fuel tank using waterproof adhesive tape.
 - Remove the drive belts and store them in a safe place.
 - Disconnect the engine cut-off solenoid on the injection pump and carefully insulate the connection.

PROTECTING THE LIFT TRUCK

- Set the lift truck on axle stands so that the tyres are not in contact with the ground and release the handbrake.
- Protect cylinder rods which will not be retracted, from corrosion.
- Wrap the tyres.

NOTE: If the lift truck is to be stored outdoors, cover it with a waterproof tarpaulin.

BRINGING THE LIFT TRUCK BACK INTO SERVICE

- Remove the waterproof adhesive tape from all the holes.
- Refit the intake hose.
- Refit and reconnect the battery.
- Remove the protection from the cylinder rods.
- Perform the daily service (see: 3 - MAINTENANCE: A - DAILY OR EVERY 10 HOURS SERVICE).
- Put the handbrake on and remove the axle stands.
- Empty and replace the fuel and replace the fuel filter (see: 3 - MAINTENANCE: D - EVERY 500 HOURS SERVICE).
- Refit and set the tension in the drive belts (see: 3 - MAINTENANCE: C - EVERY 250 HOURS SERVICE).
- Turn the I.C. engine using the starter, to allow the oil pressure to rise.
- Reconnect the engine cut-off solenoid.
- Lubricate the lift truck completely (see: 3 - MAINTENANCE: SERVICING SCHEDULE).



Make sure the area is adequately ventilated before starting up the lift truck.

- Start up the lift truck, following the safety instructions and regulations (see: OPERATING INSTRUCTIONS UNLADEN AND LADEN).
- Run all the jib's hydraulic movements, concentrating on the ends of travel for each cylinder.

2 - DESCRIPTION

TABLE OF CONTENTS

« EC » DECLARATION OF CONFORMITY	2-4
IDENTIFICATION OF THE LIFT TRUCK	2-6
CHARACTERISTICS	2-8
FRONT AND REAR TIRES	2-10
DIMENSIONS AND LOAD CHARTS	2-12
INSTRUMENTS AND CONTROLS	2-14
TOWING PIN AND HOOK	2-34
DESCRIPTION AND USE OF THE OPTIONS	2-36

1) **DECLARATION "CE" DE CONFORMITE (originale)**
" EC " DECLARATION OF CONFORMITY (original)

2) La société, *The company* : **MANITOU C.I.**

3) Adresse, *Address* : **Via Cristoforo Colombo 2, 41013 Cavazzona in Castelfranco Emilia -ITALIE**

4) Dossier technique, *Technical file* : Manitou C.I., Via Cristoforo Colombo 2, 41013 Cavazzona in Castelfranco Emilia (MO) , Italie

5) Constructeur de la machine décrite ci-après, *Manufacturer of the machine described below* :
CHARIOT ELEVATEUR MLT.....

6) Déclare que cette machine, *Declares that this machine* :

☐ 7)- Est conforme aux directives suivantes et à leurs transpositions en droit national, *Complies with the following directives and their transpositions into national law* :

8) - Pour les machines annexe IV , *For annex IV machines* :

9) - Numéro d'attestation, *Certificate number*: /

10) - Organisme notifié, *Notified body* : /

11) -Procédure appliquée, *Applied procedure* : **Annexe VI – 2000 / 14 / CE proc.I**

10) - Organisme notifié, *Notified body* : **ECO s.p.a. EUROPEAN CERTIFYNG**
ORGANIZATION,

Via Mengolina 33 48018 Faenza- Ravenna - Italia -
Organismo notificato n° 0714

12) - Niveau de puissance acoustique, *Sound power level* :

13) Mesuré, *Measured* : 105 dB (A)

14) Garanti, *Guaranteed* : 106 dB (A)

☐ 15)-Normes harmonisées utilisées, *Harmonised standards used* : **EN 12895**

☐ 16)-Normes ou dispositions techniques utilisées, *Standards or technical provisions used* :
EN 1459 : 1999 + A1 : 2007

17) - Fait à, *Done at* : CASTELFRANCO EMILIA 18) - Date, *Date* : 04/10/2010

19) - Nom du signataire, *Name of signatory* : FELICANI DANIELE

20) - Fonction, *Function* : DIRECTEUR TECHNIQUE

21) - Signature, *Signature* :

bg : 1) удостоверение за « CE » съответствие (оригинална), 2) Фирмата, 3) Адрес, 4) Техническо досие, 5) Фабрикант на описаната по-долу машина, 6) Обявява, че тази машина, 7) Отговаря на следните директиви и на тяхното съответствие национално право, 8) За машините към допълнение IV, 9) Номер на удостоверението, 10) Наименувана фирма, 15) хармонизирани стандарти използвани, 16) стандарти или технически правила, използвани, 17) Изработено в, 18) Дата, 19) Име на разписалия се, 20) Функция, 21) Функция.

cs : 1) ES prohlášení o shodě (původní), 2) Název společnosti, 3) Adresa, 4) Technická dokumentace, 5) Výrobce níže uvedeného stroje, 6) Prohlašuje, že tento stroj, 7) Je v souladu s následujícími směrnici a směrnici transponovanými do vnitrostátního práva, 8) Pro stroje v příloze IV, 9) Číslo certifikátu, 10) Notifikační orgán, 15) harmonizované normy použity, 16) Norem a technických pravidel používaných, 17) Místo vydání, 18) Datum vydání, 19) Jméno podepsaného, 20) Funkce, 21) Podpis.

da : 1) EF Overensstemmelseserklæring (original), 2) Firmaet, 3) Adresse, 4) tekniske dossier, 5) Konstruktor af nedenfor beskrevne maskine, 6) Erklærer, at denne maskine, 7) Overholder nedennævnte direktiver og disses gennemførelse til national ret, 8) For maskiner under bilag IV, 9) Certifikat nummer, 10) Bemyndigede organ, 15) harmoniserede standarder, der anvendes, 16) standarder eller tekniske regler, 17) Udfærdiget i, 18) Dato, 19) Underskrivers navn, 20) Funktion, 21) Underskrift.

de : 1) EG-Konformitätserklärung (original), 2) Die Firma, 3) Adresse, 4) Technischen Unterlagen, 5) Hersteller der nachfolgend beschriebenen Maschine, 6) Erklärt, dass diese Maschine, 7) den folgenden Richtlinien und deren Umsetzung in die nationale Gesetzgebung entspricht, 8) Für die Maschinen laut Anhang IV, 9) Bescheinigungsnummer, 10) Benannte Stelle, 15) angewandten harmonisierten Normen, 16) angewandten sonstigen technischen Normen und Spezifikationen, 17) Ausgestellt in, 18) Datum, 19) Name des Unterzeichners, 20) Funktion, 21) Unterschrift.

el : 1) Δήλωση συμμόρφωσης CE (πρωτότυπο), 2) Η εταιρεία, 3) Διεύθυνση, 4) τεχνικό φάκελο, 5) Κατασκευάστρια του εξής περιγραφόμενου μηχανήματος, 6) Δηλώνει ότι αυτό το μηχάνημα, 7) Είναι σύμφωνο με τις εξής οδηγίες και τις προσαρμογές τους στο εθνικό δίκαιο, 8) Για τα μηχανήματα παραρτήματος IV, 9) Αριθμός δήλωσης, 10) Κοινοποιημένος φορέας, 15) εναρμονισμένα πρότυπα που χρησιμοποιούνται, 16) Πρότυπα ή τεχνικούς κανόνες που χρησιμοποιούνται, 19) Είναι σύμφωνο με τα εξής πρότυπα και τεχνικές διατάξεις, 17) Εν, 18) Ημερομηνία, 19) Όνομα του υπαγράφοντος, 20) Θέση, 21) Υπογραφή.

es : 1) Declaración DE de conformidad (original), 2) La sociedad, 3) Dirección, 4) expediente técnico, 5) Constructor de la máquina descrita a continuación, 6) Declara que esta máquina, 7) Está conforme a las siguientes directivas y a sus transposiciones en derecho nacional, 8) Para las máquinas anexo IV, 9) Número de certificación, 10) Organismo notificado, 15) normas armonizadas utilizadas, 16) Otras normas o especificaciones técnicas utilizadas, 17) Hecho en, 18) Fecha, 19) Nombre del signatario, 20) Función, 21) Firma.

et : 1) EÜ vastavusdeklaratsioon (algupärane), 2) Äriühing, 3) Aadress, 4) Tehniline dokumentatsioon, 5) Seadme tootja, 6) Kinnitab, et see toode, 7) On vastavuses järgmiste direktiivide ja nende riigisisesele õigussesse ülevõtmiseks vastuvõetud õigusaktidega, 8) IV lisas loetletud seadmete puhul, 9) Tunnistuse number, 10) Sertifitseerimisasutus, 15) kasutatud ühtlustatud standardite, 16) Muud standardites või spetsifikatsioonides kasutatakse, 17) Väljaandmise koht, 18) Väljaandmise aeg, 19) Allkirjastaja nimi, 20) Amet, 21) Allkiri.

fi : 1) EY-vaatimustenmukaisuusvakuutus (alkuperäiset), 2) Yritys, 3) Osoite, 4) teknisen eritelmän, 5) Jäljessä kuvatus koneen valmistaja, 6) Vakuuttaa, että tämä kone, 7) Täyttää seuraavien direktiivien sekä niitä vastaavien kansallisten säännösten vaatimukset, 8) Liitteen IV koneiden osalta, 9) Todistuksen numero, 10) Ilmoitettu laitos, 15) yhdenmukaistettuja standardeja käytetään, 16) muita standardeja tai, 17) Paikka, 18) Aika, 19) Allekirjoittajan nimi, 20) Toimi, 21) Allekirjoitus.

ga : 1) « EC » dearbhú comhréireachta (bunaidh), 2) An comhlacht, 3) Seoladh, 4) comhad teicniúil, 5) Déantóir an innill a thuairiscítear thíos, 6) Dearbhaíonn sé go bhfuil an t-inneall, 7) Go gcloíonn sé le na treoracha seo a leanas agus a trasúlmh isteach i ndlí náisiúnta, 8) Le haghaidh innill an aghuisín IV, 9) Uimhir teastais, 10) Comhlacht a chuireadh i bhfios, 15) caighdeán comhchuíbhithe a úsáidtear, 16) caighdeán eile nó sonraíochtaí teicniúla a úsáidtear, 17) Déanta ag, 18) Dáta, 19) Ainm an tsinitheora, 20) Feidhm, 21) Siniú.

hu : 1) CE megfelelősségi nyilatkozat (eredeti), 2) A vállalat, 3) Cím, 4) műszaki dokumentáció, 5) Az alábbi gép gyártója, 6) Kijelenti, hogy a gép, 7) Megfelel az alábbi irányelveknek valamint azok honosított előírásainak, 8) A IV. melléklet gépeihez, 9) Bizonylati szám, 10) Értéситett szervezet, 15) felhasználó harmonizált szabványok, 16) egyéb felhasználó szabványok és előírások hivatkozásai, 17) Kelt (hely), 18) Dátum, 19) Aláírás neve, 20) Funkció, 21) Aláírás.

is : 1) (Samræmisvottorð ESB (upprunalega), 2) Fyrirtækið, 3) Aðsetur, 4) Tæknilegar skrá, 5) Smíður tækisins sem lýst er hér á eftir, 6) Staðfestir að tækið, 7) Samræmist eftirfarandi stöðlum og staðfærslu þeirra með hljóðjón af þjóðarrétti, 8) Fyrir tækin í aukakafla IV, 9) Staðfestingarnúmer, 10) Tilkynt til, 15) samhæfða staðla sem notaðir, 16) önnur staðlar eða forskriftir notað, 17) Staður, 18) Dagsetning, 19) Nafn undirritaðs, 20) Staða, 21) Undirskrift.

it : 1) Dichiarazione CE di conformità (originale), 2) La società, 3) Indirizzo, 4) fascicolo tecnico, 5) Costruttore della macchina descritta di seguito, 6) Dichiaro che questa macchina, 7) È conforme alle direttive seguenti e alle relative trasposizioni nel diritto nazionale, 8) Per le macchine Allegato IV, 9) Numero di Attestazione, 10) Organismo notificato, 15) norme armonizzate applicate, 16) altre norme e specifiche tecniche applicate, 17) Stabilita a, 18) Data, 19) Nome del firmatario, 20) Funzione, 21) Firma.

lt : 1) CE atitikties deklaracija (originalas), 2) Bendrovė, 3) Adresas, 4) Techninė byla, 5) Žemiau nurodytas įrenginio gamintojas, 6) Pareiškia, kad šis įrenginys, 7) Atitinka toliau nurodytas direktyvas ir į nacionalinius teisės aktus perkeltas jų nuostatas, 8) IV priedas dėl mašinų, 9) Sertifikuoto Nr., 10) Paskelbtąjį įstaigą, 15) suderintus standartus naudojamas, 16) Kiti standartai ir techninės specifikacijos, 17) Pasirašyta, 18) Data, 19) Pasirašiusio asmens vardas ir pavardė, 20) Pareigos, 21) Parašas.

lv : 1) EK atbilstības deklarācija (oriģināls), 2) Uzņēmums, 3) Adrese, 4) tehniskās lietas, 5) Tālāk aprakstītās iekārtas ražotājs, 6) Apliecinā, ka šī iekārta, 7) Ir atbilstoša tālāk norādītajām direktīvām un to transpozīcijai nacionālajā likumdošanā, 8) Iekārtām IV pielikuma, 9) Apliecināšanas numurs, 10) Reģistrētā organizācija, 15) lietotajiem saskaņotajiem standartiem, 16) lietotajiem tehniskajiem standartiem un specifikācijām, 17) Sastādīts, 18) Datums, 19) Parakstītāja vārds, 20) Amats, 21) Paraksts.

mt : 1) Dikjarazzjoni ta' Konformità KE (originali), 2) Il-kumpanija, 3) Indirizz, 4) fajl tekniku, 5) Manifattriċi tal-magna deskritta hawn isfel, 6) Tiddikjara li din il-magna, 7) Hija konformi hija konformi mad-Direttivi segwenti u l-ligijiet li jimplimentawhom fil-liġi nazzjonali, 8) Għall-magni fl-Anness IV, 9) Numru taċ-certifikat, 10) Entità nnotifikata, 15) l-istandards armonizzati użati, 16) standards tekniċi u speċifikazzjonijiet oħra użati, 17) Magħmul f', 18) Data, 19) Isem il-firmatarju, 20) Kariga, 21) Firma.

nl : 1) EG-verklaring van overeenstemming (oorspronkelijke), 2) Het bedrijf, 3) Adres, 4) technisch dossier, 5) Constructeur van de hierna genoemde machine, 6) Verklaart dat deze machine, 7) In overeenstemming is met de volgende richtlijnen en hun omzettingen in het nationale recht, 8) Voor machines van bijlage IV, 9) Goedkeuringsnummer, 10) Aangezegde instelling, 15) gehanteerde geharmoniseerde normen, 16) andere gehanteerde technische normen en specificaties, 17) Opgemaakt te, 18) Datum, 19) Naam van ondergetekende, 20) Functie, 21) Handtekening.

no : 1) CE-samsvarserklæring (original), 2) Selskapet, 3) Adresse, 4) tekniske arkiv, 5) Fabrikant av følgende maskin, 6) Erklærer at denne maskinen, 7) Oppfyller kravene i følgende direktiver, med nasjonale gjennomføringsbestemmelser, 8) For maskinene i tillegg IV, 9) Attestnummer, 10) Notifisert organ, 15) harmoniserte standarder som brukes, 16) Andre standarder og spesifikasjoner brukt, 17) Utstedt i, 18) Dato, 19) Underskriverens navn, 20) Stilling, 21) Underskrift.

pl : 1) Deklaracja zgodności CE (oryginalne), 2) Spółka, 3) Adres, 4) dokumentacji technicznej, 5) Wykonawca maszyny opisanej poniżej, 6) Oświadczam, że ta maszyna, 7) Jest zgodna z następującymi dyrektywami i odpowiadającymi przepisami prawa krajowego, 8) Dla maszyn załącznik IV, 9) Numer certyfikatu, 10) Jednostka certyfikująca, 15) zastosowanych norm zharmonizowanych, 16) innych zastosowanych norm technicznych i specyfikacji, 17) Sporządzono w, 18) Data, 19) Nazwisko podpisującego, 20) Stanowisko, 21) Podpis.

pt : 1) Declaração de conformidade CE (original), 2) A empresa, 3) Morada, 4) processo técnico, 5) Fabricante da máquina descrita abaixo, 6) Declara que esta máquina, 7) Está em conformidade às directivas seguintes e às suas transposições para o direito nacional, 8) Para as máquinas no anexo IV, 9) Número de certificado, 10) Entidade notificada, 15) normas harmonizadas utilizadas, 16) outras normas e especificações técnicas utilizadas, 17) Elaborado em, 18) Data, 19) Nome do signatário, 20) Cargo, 21) Assinatura.

ro : 1) Declarație de conformitate CE (originală), 2) Societatea, 3) Adresa, 4) cărții tehnice, 5) Constructor al mașinii descrise mai jos, 6) Declară că prezenta mașină, 7) Este conformă cu directivele următoare și cu transpunerea lor în dreptul național, 8) Pentru mașinile din anexa IV, 9) Număr de atestare, 10) Organism notificat, 15) standardele armonizate utilizate, 16) alte standarde și specificații tehnice utilizate, 17) Întocmit la, 18) Data, 19) Numele persoanei care semnează, 20) Funcția, 21) Semnătura.

sk : 1) ES vyhlásenie o zhode (pôvodný), 2) Názov spoločnosti, 3) Adresa, 4) technické dokumentácie, 5) Výrobca nižšie opísaného stroja, 6) Vyhlasuje, že tento stroj, 7) Je v súlade s nasledujúcimi smernicami a smernicami transponovanými do vnútroštátneho práva, 8) Pre stroje v prílohe IV, 9) Číslo certifikátu, 10) Notifikačný orgán, 15) použité harmonizované normy, 16) použité iné technické normy a predpisy, 17) Miesto vydania, 18) Dátum vydania, 19) Meno podpisujúceho, 20) Funkcia, 21) Podpis.

sl : 1) ES Izjava o ustreznosti (izvirna), 2) Družba, 3) Naslov, 4) tehnične dokumentacije, 5) Proizvajalac tukaj opisanega stroja, 6) Izjavlja, da je ta stroj, 7) Ustreza naslednjim direktivam in njihovi transpoziciji v državno pravo, 8) Za stroje priloga IV, 9) Številka potrdila, 10) Obvestilo organu, 15) uporabljene harmonizirane standarde, 16) druge uporabljene tehnične standarde in zahteve, 17) V, 18) Datum, 19) Ime podpisnika, 20) Funkcija, 21) Podpis.

sv : 1) CE-försäkran om överensstämmelse (original), 2) Företaget, 3) Adress, 4) tekniska dokumentationen, 5) Konstruktor av nedan beskrivna maskin, 6) Försäkrar att denna maskin, 7) Överensstämmer med nedanstående direktiv och införlivandet av dem i nationell rätt, 8) För maskinerna i bilaga IV, 9) Nummer för godkännande, 10) Organism som underrättats, 15) Harmoniserade standarder som använts, 16) andra tekniska standarder och specifikationer som använts, 17) Upprättat i, 18) Datum, 19) Namn på den som undertecknat, 20) Befattning, 21) Namnteckning.

IDENTIFICATION OF THE LIFT TRUCK

As our policy is to promote a constant improvement of our products, our range of telescopic lift trucks may undergo certain modifications, without obligation for us to advise our customers.


When you order parts, or when you require any technical information, always specify:

NOTE: For the owner's convenience, it is recommended that a note of these numbers is made in the spaces provided, at the time of the delivery of the lift truck.

LIFT TRUCK MANUFACTURER'S PLATE (FIG. A)


- Model
- Series
- Serial Nr
- Year of manufacture

For any further technical information regarding your lift truck refer to chapter: 2 - DESCRIPTION: CHARACTERISTICS.

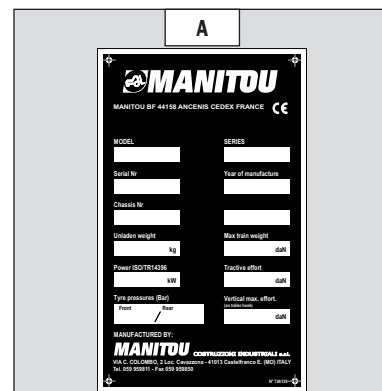


I.C. ENGINE (FIG. B)

- I.C. engine Nr

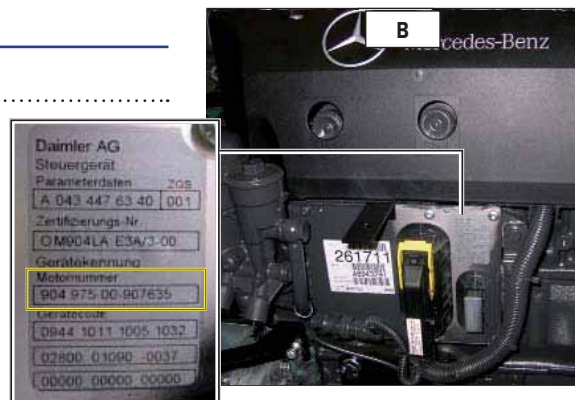


GEAR BOX (FIG. C)

- Type
- MANITOU reference
- Serial Nr

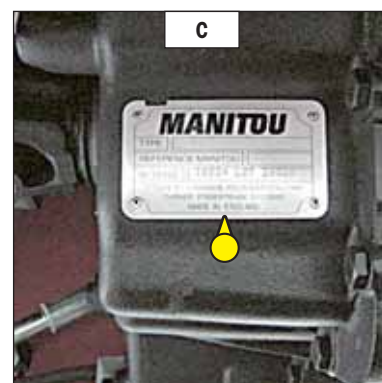


ANGLE GEAR BOX (FIG. D)

- Type
- MANITOU reference
- Serial Nr

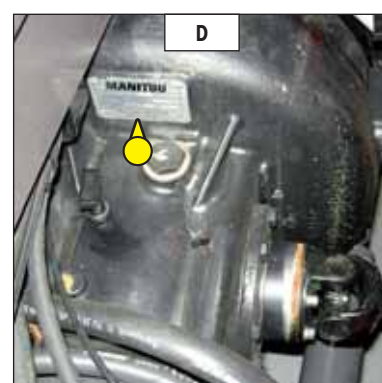


FRONT AXLE (FIG. E)

- Type
- Serial Nr
- MANITOU reference

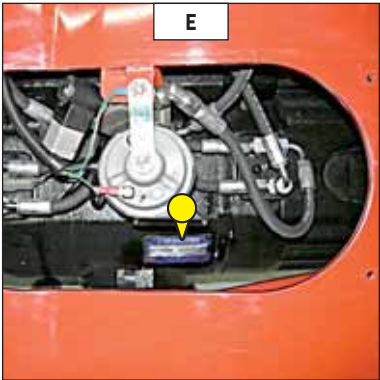

REAR AXLE (FIG. F)

- Type
- Serial Nr
- MANITOU reference

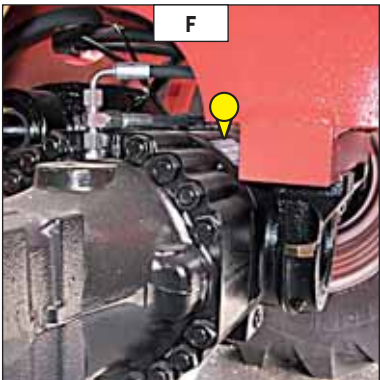

CAB (FIG. G)

- Type
- Serial Nr




JIB (FIG. H)

- MANITOU reference
- Date of manufacture



ATTACHMENT MANUFACTURER'S PLATE (FIG. I)

- Model
- Serial Nr
- Year of manufacture

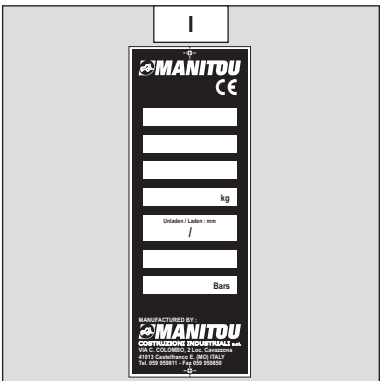

CHARACTERISTICS

I.C. ENGINE		
Type		MERCEDES-BENZ OM 904 LA.E3A/3
Fuel		Diesel
Number of cylinders		4 in line
Suction		Supercharged
Injection system		Direct
Ignition sequence		1.3.4.2
Capacity	cm ³	4250
Bore and stroke	mm	102 x 130
Compression ratio		18
Nominal rating loaded	rpm	a
Rating slow unladen	rpm	800
Max. rating unladen	rpm	2700 (+60/-250)
Power ISO/TR 14396	cv- kW	123 - 90
Power SAE J 1995	cv- kW	123 - 90
Maximum torque ISO/TR 14396	Nm	470 from 1200 to 1600 rpm
Air cleaner	µm	3
Type of cooling		By water
Fan		Puller (2600 min ⁻¹)

TRANSMISSION		
Gear box		TURNER POWERTRAIN SYSTEMS
Type		Mechanical
Forward/reverse selector		Electro-hydraulic
Torque converter		SACHS
Number of forward speeds		4
Number of reverse speeds		4
Angle gear box		TURNER POWERTRAIN SYSTEMS
Front axle		DANA
Differential		45 % limited slip differential
Rear axle		DANA
Differential		45 % limited slip differential
Drive wheels		4RM Permanent
Switch for 2/4 drive wheels		No
Front tyres		MICHELIN
Size		460/70 R24 XMCL 159A8 TUBELESS
Pressure	bar	4
Rear tyres		MICHELIN
Size		460/70 R24 XMCL 159A8 TUBELESS
Pressure	bar	4

ELECTRIC CIRCUIT		
Battery		120 Ah - 850 A EN
Alternator		12 V - 75 A
Starter		12 V - 3,3 kW

BRAKE CIRCUIT		
Service brake		Hydraulic power brake
Type of brake		Multidisk brake immersed in oil
Type of control		Foot-operated for the front and rear axles
Parking brake		Low pressure brake
Type of brake		Multidisk brake immersed in oil
Type of control		Electro-hydraulic

SOUND AND VIBRATION		
Level of sound pressure in the driver's cab LpA (according to standard NF EN 12053)	dB	79,9 (cab closed)
Level of sound power ensured in the LwA environment (according to directive 2000/14/EC modified by directive 2005/88/EC)	dB	105 (measured) 106 (ensured)
Average weighted acceleration on driver's body (according to standard NF EN 13059)	m/s ²	
The average weighted acceleration transmitted to the driver's hand/arm system (according to standard ISO 5349-2)	m/s ²	< 2,5

HYDRAULIC CIRCUIT		
Hydraulic pump		
Type		Variable volume piston pump
Capacity	cm ³	63
Max. rating capacity unladen	l/mn	149
Flow rate at 1600 rpm	l/mn	101
Filtration		
Return	µm	10
Suction	µm	125
Maximum service pressure		
Telescoping circuit	bar	200/270
Lifting circuit	bar	280/200
Tilt circuit	bar	190/280
Attachment circuit	bar	270
Steering circuit	bar	140

HYDRAULIC MOVEMENTS		
Longitudinal stability limiter and warning device		Electronic
Lifting motions (jib retracted)		
Unladen lifting	s - m/mn	9,5 - 30,4
Laden lifting	s - m/mn	10,4 - 27,7
Unladen lowering	s - m/mn	6,1 - 47,3
Laden lowering	s - m/mn	5,6 - 51,5
Telescoping motions (jib raised)		
Unladen extending	s - m/mn	9,7 - 18,7
Laden extending	s - m/mn	10,1 - 19,5
Unladen retracting	s - m/mn	7,8 - 24,2
Laden retracting	s - m/mn	7,9 - 23,9
Tilting movements		
Unladen digging	s - °/s	3,7 - 38,4
Forward tilting unladen	s - °/s	3,2 - 44,4

SPECIFICATIONS AND WEIGHTS		
Speed of movement for lift truck in standard configuration on flat ground (except particular conditions)		
Front unladen	1	km/h
	2	km/h
	3	km/h
	4	km/h
Rear unladen	1	km/h
	2	km/h
	3	km/h
	4	km/h
Standard attachment		PFB 45 N MT-1260
Weight of equipment	kg	200
Weight of forks (each one)	kg	78
Rated capacity with standard attachment	kg	4500
Tipping load at maximum reach on tyres	kg	1610
Distance from the centre of gravity from the load to the lug of the forks	mm	500
Standard lifting height	mm	7550
Lift truck weight without attachment	kg	8460
Lift truck weight with standard attachment		
Unladen	kg	8816
At rated load	kg	13316
Weight per axle with standard attachment (transport position)		
Front unladen	kg	3916
Rear unladen	kg	4900
Front rated load	kg	11576
Rear rated load	kg	1740
Weight per axle with standard attachment (jib extended)		
Front rated load	kg	8996
Rear rated load	kg	1070
Contact pressure on the ground for the whole surface of each stabilizer at maximum load when tilting	kg/cm ²	
Drag strain on the coupling hook		
Unladen (sliding)	daN	6605
At rated load (transmission setting)	daN	10355
Pull strain with open carrier (according to standard ISO 8313)	daN	6650





FRONT AND REAR TIRES

		PRESSURE (bar)	LOAD PER TYRE (kg)			
			FRONT UNLADEN	FRONT LADEN	REAR UNLADEN	REAR LADEN
DUNLOP	440/80-24 T37 STAB 158B TUBELESS	4,1	1950	5800	2450	900
GOODYEAR	15,5/25 12PR SGL DL 2A TUBELESS	4,5				
	15,5/80-24 SGI 16PR TUBELESS	5,1				
	445/70R24 IT510 151G TUBELESS	4,1				
MICHELIN	460/70R24 XMCL 159A8 TUBELESS	4				
	1200R24 XKA	7				
	15,5R25 XHA TUBELESS	4				
	445/65R22,5 XZY 169K TUBELESS	4,5				
	500/70R24 XMCL 164A8 TUBELESS	4,4				
NOKIAN	480/65R24 SF 151A8/146D TUBELESS	3,8				


		PRESSURE (bar)	LOAD (kg)	GROUND CONTACT PRESSURE (kg/cm2)		GROUND CONTACT AREA (cm2)	
				HARD SOIL	LOOSE SOIL	HARD SOIL	LOOSE SOIL
DUNLOP	440/80-24 T37 STAB 158B TUBELESS	4,1	900	6,08	1,68	144	520
			1950	7,65	2,14	255	910
			2450	8,24	2,29	297	1070
			5800	12,10	3,34	480	1735
GOODYEAR	15,5/25 12PR SGL DL 2A TUBELESS	4,5	900	6,43	3,46	140	260
			1950	6,96	3,75	280	520
			2450	6,81	3,71	360	660
			5800	8,44	4,56	690	1278
	15,5/80-24 SGI 16PR TUBELESS	5,1	900				
			1950				
			2450				
			5800				
	445/70R24 IT510 151G TUBELESS	4,1	900				
			1950				
			2450				
			5800				
MICHELIN	460/70R24 XMCL 159A8 TUBELESS	4	900				
			1950				
			2450				
			5800				
	1200R24 XKA	7	900				
			1950				
			2450				
			5800				
	15,5R25 XHA TUBELESS	4	900	1,76	0,83	482	1030
			1950	2,77	1,29	675	1446
			2450	3,09	1,44	793	1699
			5800	3,63	1,64	1600	3540
	445/65R22,5 XZY 169K TUBELESS	4,5	900	2,64		339	
			1950	3,40		573	
			2450	3,66		669	
			5800	4,83		1200	
	500/70R24 XMCL 164A8 TUBELESS	4,4	900				
			1950				
			2450				
			5800				
NOKIAN	480/65R24 SF 151A8/146D TUBELESS	3,8	900	2,95	0,50	298	1711
			1950	3,18	0,95	613	2033
			2450	3,25	1,13	754	2167
			5800	3,32	1,98	1746	2931

DIMENSIONS AND LOAD CHARTS

A	mm	1200
B	mm	2770
C	mm	1409
C1	mm	1487
D	mm	5229
D1	mm	5307
D2	mm	4410
E	mm	6429
F	mm	1950
F1	mm	1950
G	mm	455
G1	mm	450
G2	mm	455
I	mm	1050
J	mm	950
K	mm	1260
L	mm	50
N	mm	1865/1915
O	mm	125
P2	°	43,5
P3	°	40
R	mm	3930
S	mm	8159
T	mm	3703
U1	mm	2580
U2	mm	2760
V	mm	5173
V1	mm	1470
V2	mm	4165
W	mm	2420
Y	°	12
Z	°	130

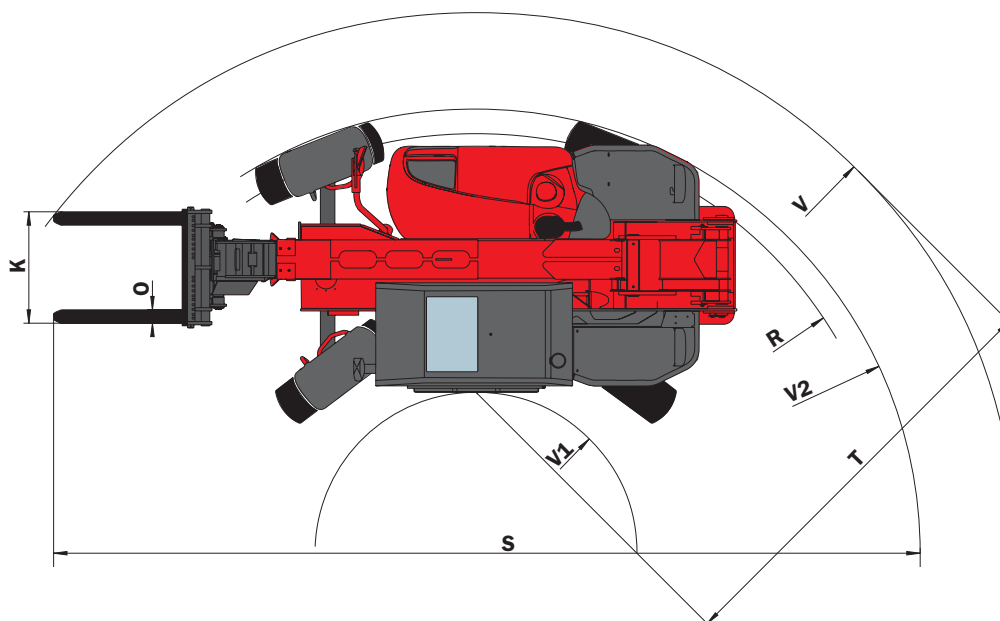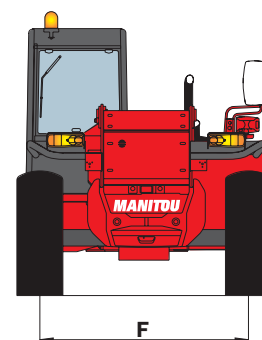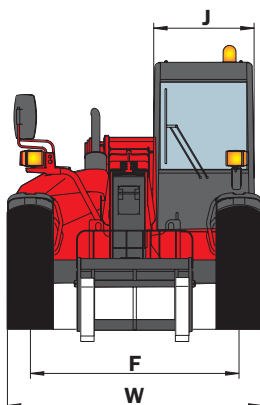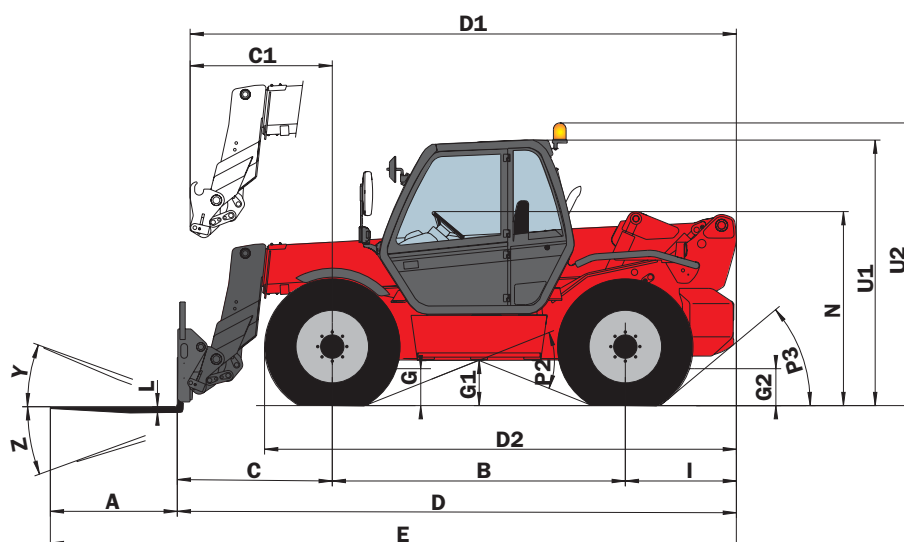




MLT/MT 845

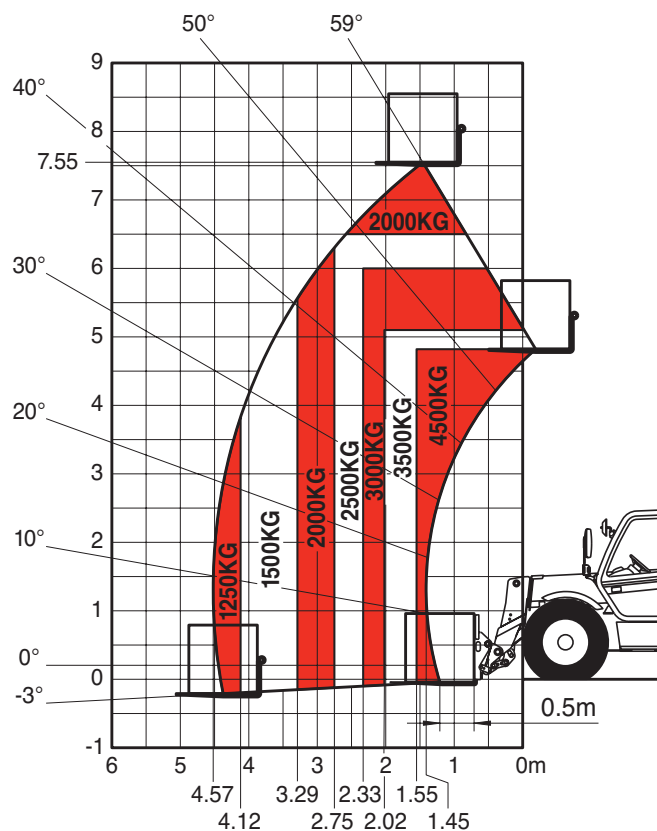

SUIVANT NORME EN 1459 annexe B.

N°245143

INSTRUMENTS AND CONTROLS

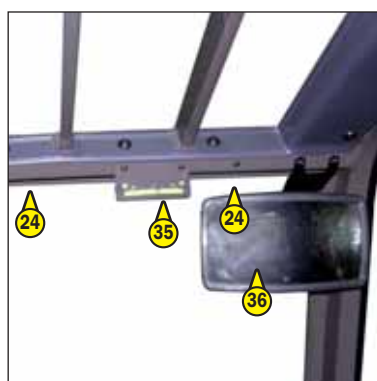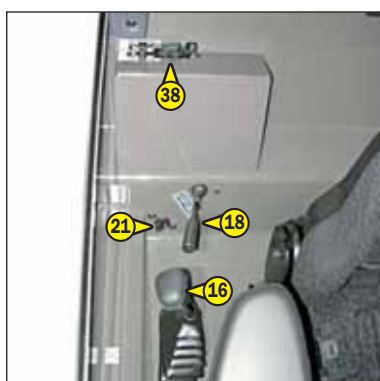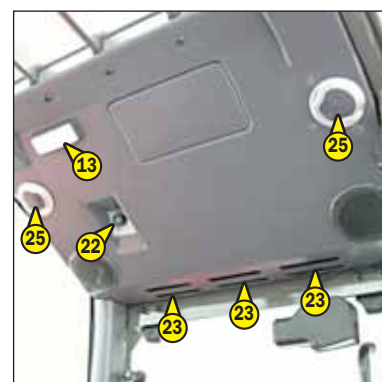

DESCRIPTION

- 1 - DRIVER'S SEAT**
- 2 - SAFETY BELT**
- 3 - CONTROL AND SIGNAL LIGHTS PANEL**
- 4 - LONGITUDINAL STABILITY LIMITER AND WARNING DEVICE**
- 5 - SWITCHES**
- 6 - LIGHTR SWITCH, HORN AND INDICATOR SWITCH**
- 7 - IGNITION SWITCH**
- 8 - BRAKING OIL TANK, FUSES AND RELAY ACCESS PANEL**
- 9 - BRAKING OIL TANK**
- 10 - FUSES AND RELAYS IN THE CAB**
- 11 - FUSES AND RELAYS UNDER THE ENGINE HOOD**
- 12 - WINDSCREEN WASHER TANK**
- 13 - ROOF LIGHT**
- 14 - ACCELERATOR PEDAL**
- 15 - SERVICE BRAKE PEDAL AND TRANSMISSION CUT-OFF**
- 16 - GEAR LEVER AND TRANSMISSION CUT-OFF**
- 17 - FORWARD/NEUTRAL/REVERSE GEAR SELECTION**
- 18 - STEERING SELECTION**
- 19 - HYDRAULIC CONTROLS**
- 20 - FUNCTION FILES**
- 21 - HEATER CONTROL**
- 22 - AIR CONDITIONING CONTROLS (AIR CONDITIONING OPTION)**
- 23 - RECYCLING INTAKES (AIR CONDITIONING OPTION)**
- 24 - WINDSCREEN DEMISTER VENTS**
- 25 - HEATING VENTS**
- 26 - BUTTON FOR OPENING HYDRAULIC FLUID AND FUEL FILLER ACCESS PANEL**
- 27 - DOOR LOCK**
- 28 - LOCKING HANDLE FOR UPPER HALF-DOOR**
- 29 - UNLOCKING BUTTON FOR UPPER HALF DOOR**
- 30 - HANDLE FOR REAR WINDOW OPENING**
- 31 - DOCUMENT HOLDER**
- 32 - FRONT LIGHTS (NOT ILLUSTRATED)**
- 33 - REAR LIGHTS (NOT ILLUSTRATED)**
- 34 - FLASHING LIGHT (NOT ILLUSTRATED)**
- 35 - LEVEL INDICATOR**
- 36 - INSIDE REAR-VIEW MIRROR**
- 37 - STEERING WHEEL ADJUSTMENT LEVER**
- 38 - DIAGNOSTIC CONNECTOR**
- 39 - EMERGENCY STOP BUTTON**

NOTE: All the terms such as: RIGHT, LEFT, FRONT, REAR are meant for an observer seated on driver's seat and looking in front of him.

1 - DRIVER'S SEAT

Designed for maximum comfort, this seat can be adjusted as follows.

LONGITUDINAL ADJUSTMENT

- Pull the locking lever 1 upwards.
- Slide the seat to the desired position.
- Release the lever and be sure it returns to the lock position.

SEAT CUSHION ADJUSTMENT

The front and the back of the seat cushion can be adjusted separately.


- To adjust the front, push the lever 2 downwards.
- Release it into one of the five possible positions.
- Same procedure to adjust the back by pulling the lever 2 upwards.

SEAT SUSPENSION ADJUSTMENT

- Turn the button 3 and adjust according to your weight.

ANGLE ADJUSTMENT OF THE BACK-REST

- Lean the back against the back-rest.
- Pull the lever 4 and place the back-rest into one of the possible positions.

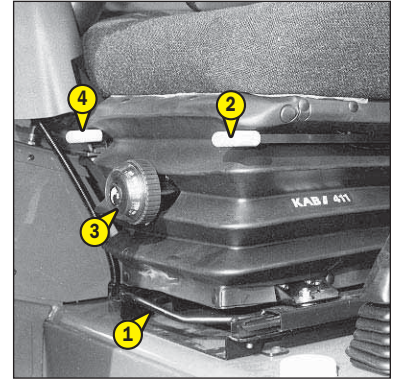

1 - DELUXE PNEUMATIC DRIVER'S SEAT (OPTION)

DESIGNED FOR MAXIMUM COMFORT, THIS SEAT CAN BE ADJUSTED AS FOLLOWS.

WEIGHT ADJUSTMENT (FIG. A)

It is advised that you adjust the seat according to your weight when sitting.

- Switch on lift truck ignition.
- Pull or push lever 1 briefly. Adjustment is automatic.

NOTE: To avoid any health problems, it is recommended that the weight should be checked and adjusted before starting up the lift truck.

SEAT HEIGHT ADJUSTMENT (FIG. B)

When weight adjustment has been carried out, you can then modify seat height.

- Keep the ignition on in the lift truck.
- Pull or push lever 1 and adjust the seat height.



To avoid causing any damage, do not activate the compressor for over 1 minute.

SEAT BACK-REST ANGLE ADJUSTMENT (FIG. C)

The back-rest angle of the seat may be adjusted to suit the individual.

- Press the left-hand button while pushing on the seat or relaxing pressure on the seat to find a comfortable position.






SEAT DEPTH ADJUSTMENT (FIG. D)

The depth of the seat may be adjusted to suit the individual.

- Press the right-hand button while raising or lowering the seat to find the desired position.

EXTENDING THE HEAD-REST (FIG. E)

- The height of the back-rest can be adjusted by pulling it upwards (the notches will click) up to the stop.
- The head-rest can be removed by applying sufficient pressure to pull it off the stop.

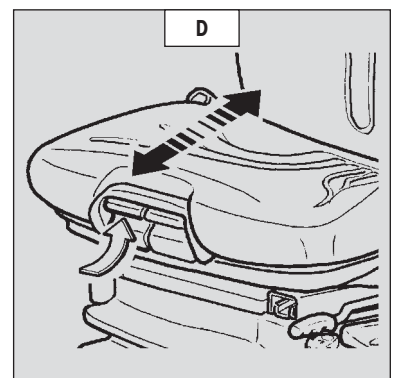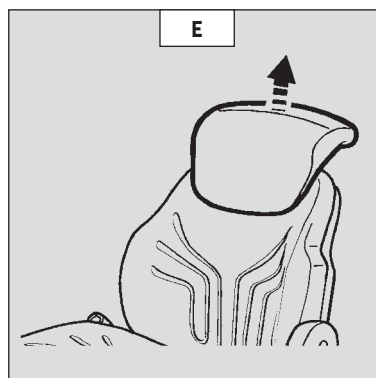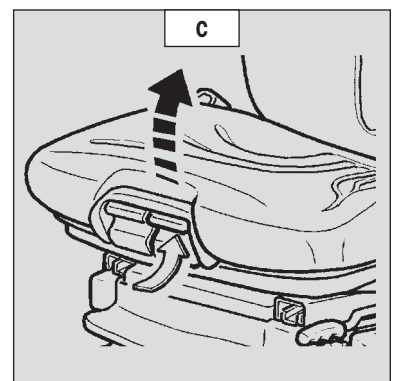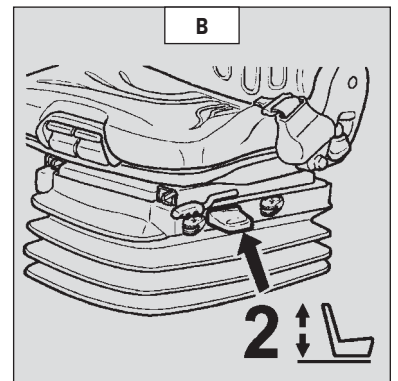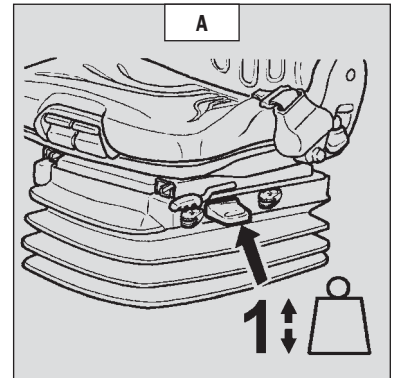

LUMBAR ADJUSTMENT (FIG. F)

This increases the comfort of the seat and the driver's freedom of movement.

- Press the raise and lower switches to adjust the curvature of the seat back to your requirements.

ADJUSTMENT OF THE ANGLE OF THE BACK-REST (FIG. G)

- Support the back-rest, pull the lever and position the back-rest to find the desired position.

! *If you do not support the back-rest when making adjustments, it swings completely forwards.*

HORIZONTAL SHOCK ABSORBER (FIG. H)

In certain conditions (e.g. driving with a trailer) it is advised that a horizontal shock absorber be used. The driver's seat is thus better able to absorb jerks in the direction of travel.

- Position 1: Horizontal shock absorber fitted.
- Position 2: Horizontal shock absorber removed.

DAMPING (FIG. I)

The damping of the seat can be adjusted to suit the nature of the terrain. The comfort of the seat is thus adjustable to suit your requirements.

- Position 1: Soft damping.
- Position 2: Hard damping.

LONGITUDINAL ADJUSTMENT (FIG. J)

- Adjust the locking lever until you reach the position required. This then locks and the seat will not shift into another position.







MAINTENANCE (FIG. K)

Dirt may adversely affect the correct functioning of the seat. For this reason, make sure your seat is always clean.

- To clean or change the cushions, simply remove them from the seat frame.

! *A rocking head-rest increases the risk of an accident!*

Avoid wetting the cushion fabric when cleaning. Check the resistance of the fabric on a small hidden area before using any fabric or plastic cleaner.

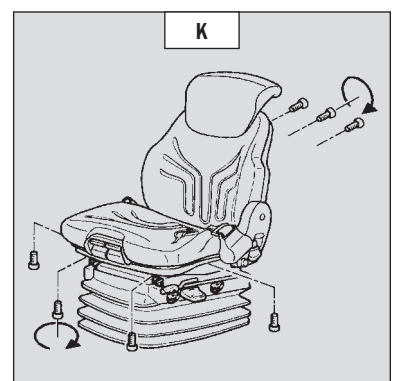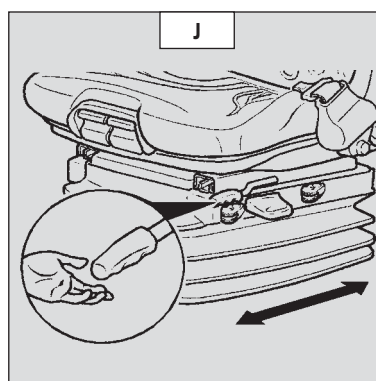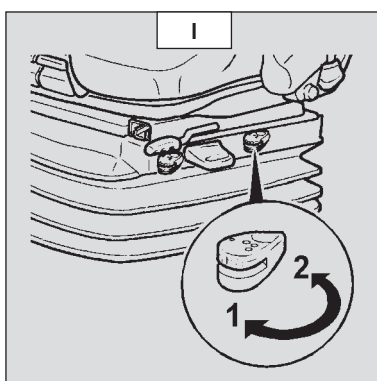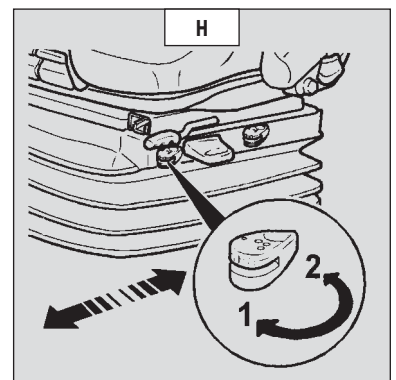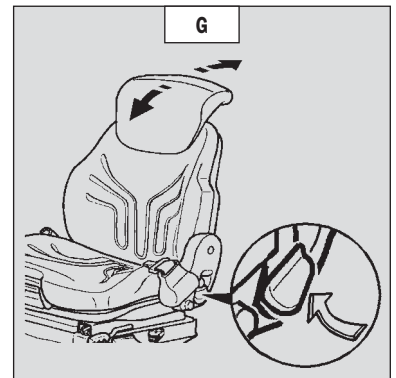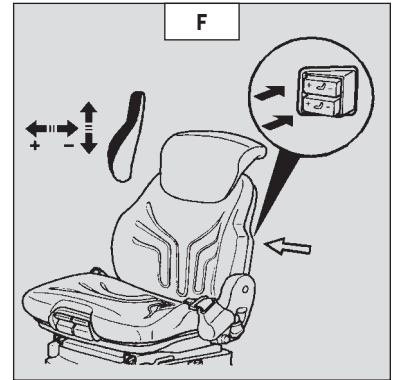


2 - SAFETY BELT

- Sit correctly on the seat.
- Check that seat belt is not twisted.
- Place the seat belt at hip level.
- Attach the seat belt and check that it locks.
- Adjust the seat belt to your body shape without squeezing your hip and without over-slack.

! *In no event should the lift truck be used if the seat belt is defective (fixing, locking, cuts, tears, etc.). Repair or replace the seat belt immediately.*

3 - CONTROL AND SIGNAL LIGHTS PANEL

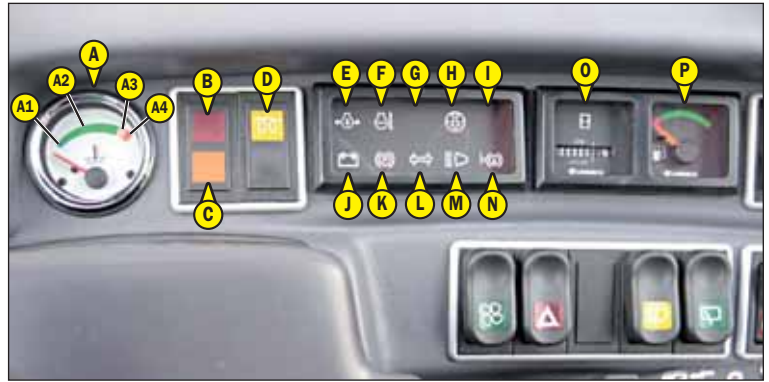

! A permanently lit or flashing warning lamp, with the engine running, is the sign of an operating fault. The lighting of some lamps may be accompanied by an audible signal. Do not ignore this warning, consult your dealer without delay.

If one of the warning lamps comes on while the lift truck is in motion, stop the lift truck under the safest possible conditions.

When activating the electrical system of the lift truck, all the red and orange lamps and the panel's buzzer must light to indicate their good working order. If one of the red lamps or the buzzer does not function, carry out the necessary repairs.

A - I.C. ENGINE WATER TEMPERATURE

Temperature zone

A1 - Blue zone (0° - 50°) Use the lift truck with moderation, wait for temperature to increase before normal operation.

A2 - Green zone (50° - 100°) Use lift truck normally.

A3 - White/red zone (100° - 105°) Use lift truck with moderation, monitor the temperature.

A4 - Red zone (105° - 120°) Stop the lift truck, look for the cause of overheating.

NOTE: Red indicator light "F" comes on between zone A3 and A4.

B - RED I.C. ENGINE FAULT INDICATOR LIGHT

If the lamp comes on or flashes, when the lift truck is running, stop the I.C. engine immediately and consult your dealer.

C - ORANGE I.C. ENGINE FAULT INDICATOR LIGHT

If the lamp comes on or flashes while the lift truck is in operation, a diagnostic fault has been detected. The lift truck will operate in reduced mode. Consult your dealer without delay.

D - ORANGE I.C. ENGINE PREHEATING INDICATOR LIGHT

Preheating is necessary. When the lift truck is switched on, the lamp comes on for 2 seconds and off as soon as preheating is ended. Start the lift truck's I.C. engine.

E - RED I.C. ENGINE OIL PRESSURE INDICATOR LIGHT

If the lamp and the buzzer come on when the lift truck is running, stop the I.C. engine immediately and look for the cause (see oil level in I.C. engine crankcase).

F - RED I.C. ENGINE WATER TEMPERATURE INDICATOR LIGHT

If the lamp and the buzzer come on when the lift truck is running, stop the I.C. engine immediately and investigate the cooling circuit for the cause of the malfunction.

G - RED GEAR BOX OIL PRESSURE INDICATOR LIGHT

This lamp and buzzer come on when there is an abnormal drop in gear box pressure, in forward gear. Stop the lift truck and look for the cause (e.g., Low oil level in the transmission, internal leak in the transmission, etc.).

NOTE: The signal light operates in forward travel conditions only, the signal should not be taken into account when the I.C. engine is running at idle or is stopped.

H - RED AIR FILTER CLOGGED INDICATOR LIGHT

The lamp and the buzzer come on when the air filter cartridge is clogged up. Stop the lift truck and carry out the necessary repairs (see cleaning and replacement requirements in chapter: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS).

I - RED TRANSMISSION OIL TEMPERATURE INDICATOR LIGHT

The lamp and the buzzer come on when the gear box oil temperature is abnormally high. Stop the lift truck and look for the cause of this overheating.

J - RED BATTERY CHARGE INDICATOR LIGHT

If the lamps G - G - H - I - J - N and the buzzer come on, when the lift truck is running, stop the I.C. engine immediately and check the electrical circuit as well as the alternator belt.

K - RED PARKING BRAKE INDICATOR LIGHT

This lamp comes on when the parking brake is applied.

L - GREEN DIRECTION INDICATOR LAMP**M - BLUE MAIN BEAM LAMP****N - RED BRAKINGNG OIL LEVEL LAMP**

If the lamp and the buzzer come on, when the lift truck is running, stop the I.C. engine immediately and check the braking oil level. In the event of an abnormal dropping of the level, consult your dealer.

O - HOUR METER**P - FUEL LEVEL**

4 - LONGITUDINAL STABILITY LIMITER AND WARNING DEVICE

This device warns the operator of the lift truck's longitudinal stability limits. However, lateral stability can reduce the load chart in the upper part, and this reduction is not detected by the device.

According to the type of work required, the longitudinal stability limiter and warning device allows the operator to operate the lift truck in complete safety.



The operator must respect the lift truck's load chart, and the operating mode according to the attachment.

A	"HANDLING" MODE	
B	"BUCKET" MODE 	
C	"SUSPENDED LOAD" MODE 	

A - "HANDLING" MODE

Use on forks (TFF, PFB, TDL), and adjustable accessories on forks (BB, GL).

- By default, the device is in "HANDLING" MODE when the lift truck is started-up, except if the "SUSPENDED LOAD" MODE has been selected before shutting-down the engine.

A1 - A2 - A3: There is a significant reserve of longitudinal stability.


A4 - A5: The lift truck is nearing the limit of longitudinal stability. The alarm sounds simultaneously with a very slow intermittent sound. Move with care.

A6: The lift truck is near at the limit of longitudinal stability. The alarm sounds with slow intermittent sound. Move with care.

A7: The lift truck is very near at the limit of longitudinal stability. The alarm sounds with fast intermittent sound. Move with extreme care.

A8: The lift truck is at the authorized limit of longitudinal stability. The alarm sounds with very fast intermittent sound. All "AGGRAVATING" hydraulic movements are cut-off. Cut-off may be preceded by automatic slowing of hydraulic movements. Only perform hydraulic movements that increase stability in the following order; retract and raise the jib.

NOTE: When the jib is retracted, the function for cutting-off "AGGRAVATING" hydraulic movements is disconnected.

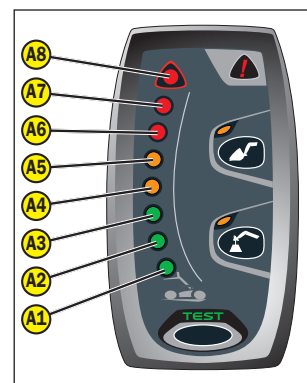

B - "BUCKET" MODE

Use with a bucket (CB, CBA, CBC, CBG, CBR, CBM, FFGR).

- Place the lift truck in the transport position.

- Press the button for 2 seconds, the "BUCKET" MODE is confirmed by an audible beep and the lighting of the lamp.

- Return to "HANDLING" MODE by pressing the button , or loss of driver presence for a few seconds, or shutting down the engine.

A1 - A2 - A3: There is a significant reserve of longitudinal stability.



A4 - A5: The lift truck is approaching the limit of longitudinal stability. Move with care.

A6: The lift truck is approaching the limit of longitudinal stability. An audible beep is sounded. Move with care.

A7 - The lift truck is very close to the limit of longitudinal stability. Move with extreme care.

A8: The lift truck is at the authorized limit of longitudinal stability. Jib raising and lowering movements are cut-off, the other movements remain available. Cut-off may be preceded by an automatic slowing of hydraulic movement.


NOTE: When the jib is retracted, the function for cutting-off "AGGRAVATING" hydraulic movements is disconnected.

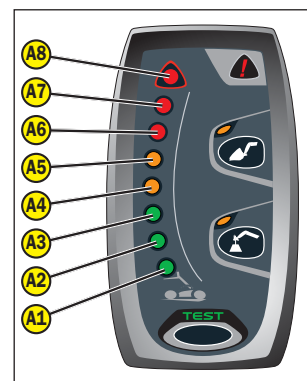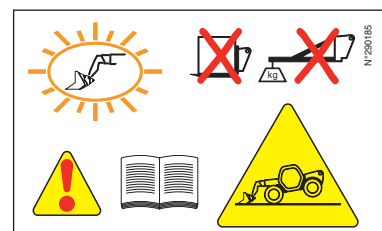

C - "SUSPENDED LOAD" MODE

Providing a higher margin of safety, use with short crane jib or lifting ring.

- Place the lift truck in the transport position.

- Press the button  for 2 seconds, "SUSPENDED LOAD" MODE is validated by an audible beep and the lighting of the lamp.

- Return to "HANDLING" MODE by pressing the button .

A1 - A2 - A3: There is a significant reserve of longitudinal stability.

A4 - A5: The lift truck is nearing the limit of longitudinal stability. The alarm sounds simultaneously with a very slow intermittent sound. Move with care.


A6: The lift truck is near at the limit of longitudinal stability. The alarm sounds with slow intermittent sound. Move with care.

A7: The lift truck is very near at the limit of longitudinal stability. The alarm sounds with fast intermittent sound. Move with extreme care.

A8: The lift truck is at the authorized limit of longitudinal stability. The alarm sounds with very fast intermittent sound. All "AGGRAVATING" hydraulic movements are cut-off. Cut-off may be preceded by automatic slowing of hydraulic movements.

Only perform hydraulic movements that increase stability in the following order; retract and raise the jib.

NOTE: When the jib is retracted, the function for cutting-off "AGGRAVATING" hydraulic movements is disconnected.

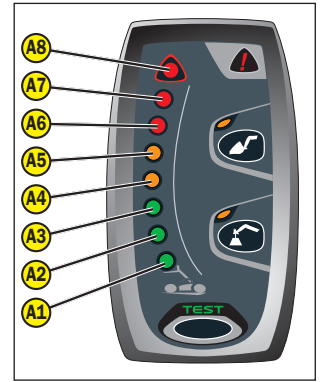

D - DISABLING "AGGRAVATING" HYDRAULIC MOVEMENT CUT-OFF


In certain cases, in order to get out of a difficult situation, the operator can bypass this safety system. Button D temporarily disables the cutting-off of "AGGRAVATING" hydraulic movements.

- Hold down button D, lamp D1 will light, and simultaneously perform the necessary "AGGRAVATING" hydraulic movement with extreme care. The combined use of these two actions is limited to 60 seconds.

 **Remain very vigilant during this operation. The only information available to the operator is the lift truck's dynamic stability.**



E - TESTING OF THE LONGITUDINAL STABILITY LIMITER AND WARNING DEVICE


- Short press the button  at any time to check the correct operation of the longitudinal stability warning device.


- Correct operation: All the leds light for two seconds and an audible beep is sounded.


NOTE: This test does not check the proper adjustment of the longitudinal stability limiter device that must be inspected daily or after every 10 hours of service (see: 3 - MAINTENANCE: A - DAILY OR EVERY 10 HOURS SERVICE).

F - FAULT INDICATOR LAMP

A permanently lit fault indicator lamp F, together with a combination of illuminated leds, indicates a major fault liable to affect the safety of the lift truck. Refer to your agent or dealer.

- The fault indicator lamp  plus leds A1 and A7 lighting alternately with A4 and A8 indicates a defective link in the operation of the longitudinal stability limiter and warning device.

- The fault indicator lamp  plus continuously lit leds A7 and A8 indicate a faulty box.

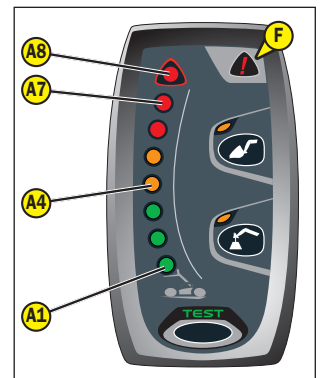

G - STRAIN GAUGE

 **Disassembly or calibration of the strain gauge is prohibited, this must only be done by specially trained personnel, consult your dealer.**



5 - SWITCHES

NOTE: The location of the switches may vary depending on the options.

A - HEATER BLOWER

This two speed switch allows warm or cold air to pass through the heating ventilators.

B - WARNING LIGHTS

This switch enables the L.H. and R.H. Indicators to be switched on simultaneously, with the ignition off. The signal light indicates that the switch is being used.

C - OPTION ELECTROVALVE ON JIB HEAD + ATTACHMENT HYDRAULIC LOCKING DEVICE

See: 2 - DESCRIPTION: DESCRIPTION AND USE OF THE OPTIONS.

D - FRONT WINDSCREEN WIPER AND WINDSCREEN WASHER

This switch, when set to the “intermediate” position, the windscreen wiper to be operated and the “down” position and simultaneously pressed, the windscreen-washer to be operated.

E - REAR WINDSCREEN WIPER + OPTIONAL ROOF WINDSCREEN WIPER

F - FLASHING LIGHT

G - OPTION WORKING HEAD LIGHT

H - DISABLING “AGGRAVATING” HYDRAULIC MOVEMENT CUT-OFF

See: 2 - DESCRIPTION: 4 - LONGITUDINAL STABILITY LIMITER AND WARNING DEVICE.

I - PARKING BRAKE

- Lower the button 1 and press the bottom of the switch to connect the parking brake. The signal lamp shows it is being used.
- Press the top of the switch to disconnect the parking brake.

J - TRANSMISSION CUT-OFF

The switch sets transmission cut-off to the service brake pedal or the forward/reverse selector.

Position A: Indicator light on, transmission cut-off to service brake pedal effected.

Position B: Indicator light off, transmission cut-off to forward/reverse selector effected.

NOTE: In all cases transmission cut-off can be effected using the gear lever.

USE OF TRANSMISSION CUT-OFF

Transmission cut-off to brake pedal (position A).

- When loading.

Transmission cut-off to forward/reverse selector (position B).

- When driving.
- For inching and continuous stopping and starting (delicate handling). In order to optimise hydraulic movements, cut off transmission to the forward/reverse selector.
- Starting up on a slope.


K - OPTION WORKING TAIL LIGHT

L - OPTION SELF-CLEANING FAN

See: 2 - DESCRIPTION: DESCRIPTION AND USE OF THE OPTIONS.

M - OPTION JIB SUSPENSION

See: 2 - DESCRIPTION: DESCRIPTION AND USE OF THE OPTIONS.

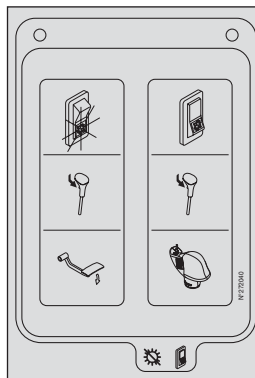


6 - LIGHT SWITCH, HORN AND INDICATOR SWITCH

The switch controls the visual and sound alarms.

- A - All lights are off, the direction indicators do not flash.
- B - The right hand direction indicators flash.
- C - The left hand direction indicators flash.
- D - The sidelights and the rear lights are on.
- E - The dipped headlights and the rear lights are on.
- F - The main beam headlights and the rear lights are on.
- G - Headlight signal.

Pressing the switch sounds the horn.

NOTE: The positions D - E - F - G can be carried out without the ignition being on.

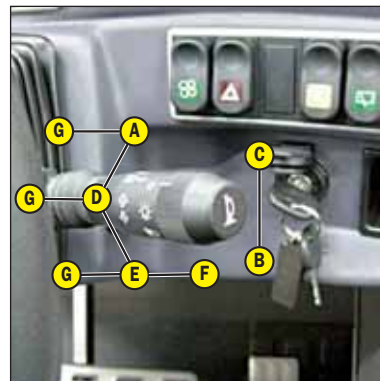

7 - IGNITION SWITCH

The key switch has five positions:

- P - Ignition off, parking position.
- O - Ignition switched off and I.C. engine stopped.
- I - Ignition and pre-heating.
- II - Not used.
- III - The I.C. engine starts, return to position I as soon as the key is released.

8 - BRAKING OIL TANK, FUSES AND RELAY ACCESS PANEL

9 - BRAKING OIL TANK





See: 3 - MAINTENANCE: B - EVERY 50 HOURS SERVICE.

10 - FUSES AND RELAYS IN THE CAB

A sticker on the protective lid gives a quick indication of the use of the panel's components described below.




Always replace a faulty fuse with another of equivalent rating. Never use a fuse that has been repaired.

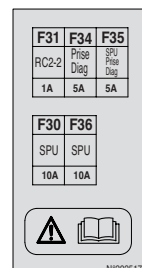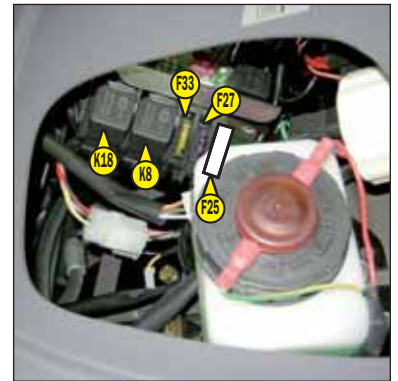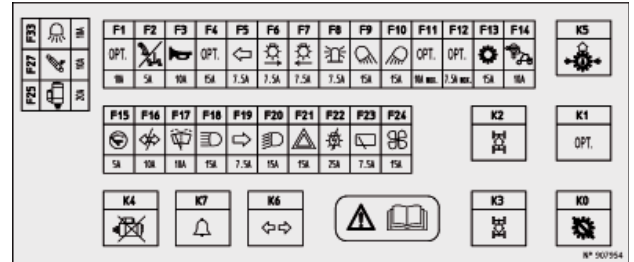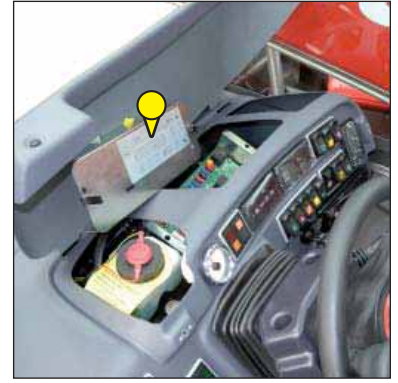

- F1 - OPTION Pneumatic seat (10A).
- F2 - Wheel alignment (5A).
 - Electrical control unit (5A).
 - Diagnostic connector (5A).
- F3 - Sound alarm (10A).
 - Stop switch (10A).
- F4 - OPTION Self-cleaning fan (15A).
- F5 - Left indicators (7,5A).
- F6 - Right sidelight (7,5A).
 - Fuel gauge lighting (7,5A).
 - Engine water temperature lighting module (7,5A).
 - Hour meter lighting (7,5A).
 - OPTIONAL Number plate lighting (7,5A).
- F7 - Left sidelights (7,5A).
- F8 - Revolving light (7,5A).
- F9 - OPTION Working tail light (15A).
- F10 - OPTION Front working head light (15A).
- F11 - Insulation of the compensation cylinders (10A).
 - Brake pressure indicator (10A).
 - OPTION Jib suspension (10A).
- F12 - Parking brake electrovalve (7,5A).
- F13 - Forward/reverse selector (15A).
 - Transmission cut-off (15A).
 - Reverse lights (15A).
 - OPTION Reverse buzzer alarm (15A).
- F14 - Longitudinal stability limiter and warning device (10A).
 - Disable aggravating hydraulic movement cut-off (10A).
 - Jib retraction and angle sensor (10A).
 - OPTION Anti-theft device provision (10A).
 - OPTION Anti-theft system (10A).
 - OPTION Anti-start system (10A).
- F15 - Signal lamp panel (5A).
 - Fuel gauge (5A).
 - Hour meter (5A).
 - Engine water temperature module (5A).
- F16 - Indicator power supply (10A).
- F17 - Front windscreen wiper and windscreen washer (10A).
- F18 - Main beam (15A).
 - Main beam lamp (15A).
- F19 - Right indicators (7,5A).
- F20 - Low beam (15A).
- F21 - Hazard warning lights power supply (15A).
 - Roof light (15A).
 - OPTIONAL (+)permanent (15A).
- F22 - Light switch power supply, horn and indicators (25A).
- F23 - Rear windscreen wiper (7,5A).
 - OPTION Roof windscreen wiper (7,5A).
- F24 - Heating (15A).
 - OPTION Air conditioning (15A).
- F25 - Starter (20A).
- F27 - OPTION Electrovalve on jib head (10A).
 - OPTION Electrovalve on jib head + attachment hydraulic locking device (10A).
 - OPTION Electrical jib provision (10A).
- F30 - Hydraulic movement control unit power supply (10A).
- F31 - Electronic control unit (1A).
- F32 - Engine control unit power supply (30A).
- F33 - OPTION Jib head light (10A).
- F34 - Diagnostic socket (5A).
- F35 - Diagnostic socket (5A).
 - Hydraulic movement control unit (5A).
- F36 - Hydraulic movement control unit power supply (10A).
 - Engine fault indicator lamp (10A).

- K0 - Transmission cut-off relay.
- K1 - Not used.
- K2 - Forward gear relay.
- K3 - Reverse gear relay.
- K4 - Safety system starting switch relay.
- K5 - Gear box oil pressure relay.
- K6 - Flashing unit.
- K7 - Buzzer.
- K8 - Hydraulic movement cut-off relay.
- K18 - Hand brake indicator lamp relay.
- K19 - Jib suspension cut-off relay.
- K20 - Jib suspension relay.
- K21 - Brake system pressure fault.
- K22 - Oil cooler relay.
- K23 - OPTION Jib head electrovalve relay.
 - OPTION Jib head electrovalve relay + attachment hydraulic locking device.
 - OPTION Electrical jib provision.

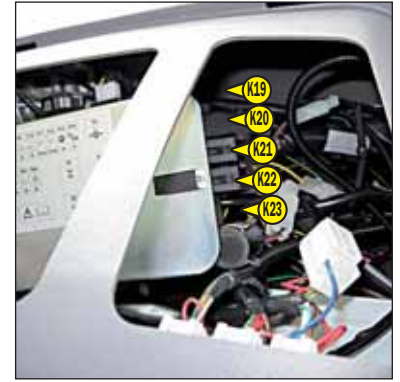


11 - FUSES AND RELAYS UNDER THE DASHBOARD

Remove casing 1 and cover 2 for access to fuses and relays.

⚠ Always replace a faulty fuse with another of equivalent rating. Never use a fuse that has been repaired.

- F32 - I.C engine electronic control unit (30A).
- F40 - Lift truck electrical equipment (40A).
- F41 - Lift truck electrical equipment (40A).
- F42 - Preheating I.C. engine (80A).
- F43 - Alternator (80A).

K10 - Preheating I.C. engine relay.

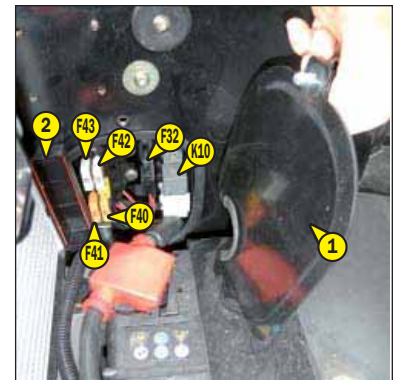

12 - WINDSCREEN WASHER TANK

See: 3 - MAINTENANCE: B - EVERY 50 HOURS SERVICE.

13 - ROOF LIGHT

14 - ACCELERATOR PEDAL

15 - SERVICE BRAKE PEDAL AND TRANSMISSION CUT-OFF

The pedal acts on the front and rear wheels by a power assisted hydraulic brake system, and allows the lift truck to be slowed down and stopped. Depending on the position of the transmission cut-off switch, it enables the transmission to be cut off during the free travel (see: 2 - DESCRIPTION: 5 - SWITCHES).

16 - GEAR LEVER AND TRANSMISSION CUT-OFF

In order to change speeds, it is necessary to cut the transmission by pressing the button 1 on the lever.

- 1st gear: To the right, forwards.
- 2nd gear: To the right, backwards.
- 3rd gear: To the left, forwards.
- 4th gear: To the left, backwards.


Using the gears on the gearbox

- On these lift trucks with a torque converter, it is not necessary to automatically start up in 1st speed and progress up the gears.

⚠ The choice of transmission gear ratio should be made carefully according to the nature of the work being carried out. A poor choice may result in the extremely rapid rise of the transmission oil temperature through excessive slipping of the converter, which could lead to serious damage to the transmission (it is essential to stop and change the working conditions if the transmission oil temperature indicator light comes on). This poor choice may also result in a reduction in the lift truck's performance in forward gear. When the forward force increases, the forward speed in the r gear (for example, in 3rd gear) may be lower than the forward speed that could be obtained with the r-1 gear (in 2nd instead of 3rd).

In general, we would advise you to use the following gears according to the nature of the work being carried out.

- On the road: Set off in 3rd gear and go up to 4th if the conditions and state of the road permit it. In hilly areas, set off in 2nd gear and go up to 3rd if the conditions and state of the road permit it.
- With a trailer on the road: Set off in 2nd gear and switch to 3rd if the conditions and state of the road permit it.
- Handling: 3rd gear.
 - 2nd gear in restricted spaces.
- Earth moving: 1st gear.
- Loading (reclaiming with bucket, manure fork, etc.): 2nd gear.

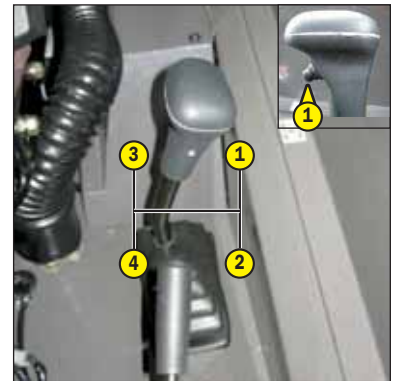

17 - FORWARD/NEUTRAL/REVERSE GEAR SELECTION

FORWARD: Push the knob forward (position A).

REVERSE: Pull the knob backwards (position B).

NEUTRAL: The knob must be in the intermediate position to start the lift truck (position C).

When operating this control, the lift truck should be travelling at slow speed and not accelerating.

NOTE: The reverse lights indicate that the lift truck is running in reverse motion. An OPTIONAL audible reversing alarm can also be fitted.

SAFETY FOR MOVING THE LIFT TRUCK

Authorization to move the lift truck is controlled by an electronic unit. The operator must observe the following sequence to move the truck forwards or backwards:

- 1 - sit down correctly in the driver's seat,
- 2 - release the parking brake,
- 3 - engage forward or reverse movement.

To stop the lift truck, he must observe the following sequence:

- 1 - set the forward/reverse selector to neutral.
- 2 - engage the parking brake,
- 3 - get out of the lift truck.

NOTE: If the operator leaves the driving cab with forward or reverse engaged, a continuous alarm will sound. While this alarm sounds, the operator can simply sit back in the seat and continue advancing or reversing.

If the alarm becomes discontinuous, the operator must sit back in the seat, put the forward/reverse selector back in neutral and select forward or reverse if he wishes to continue moving.



18 - STEERING SELECTION

A - GREEN WHEEL ALIGNMENT LAMPS

These lamps come on to indicate the alignment of the wheels in relation to the lift truck. Lamp A1 for the front wheels and lamp A2 for the rear wheels.

! Before selecting one of the three possible steering positions, bring all 4 wheels into alignment with regards to the lift truck axle. Never change the steering mode whilst driving.

B - STEERING SELECTION LEVER

B1 - Front drive wheels (highway traffic).



B2 - Front and rear drive wheels in opposite direction (short steering lock).



B3 - Front and rear drive wheels in the same direction (crab steering).




C - SWITCH FOR ALIGNMENT OF THE WHEELS

This switch enables the use or not of the device for alignment of the wheels. The indicator light indicates its use.

CONTROL FOR ALIGNMENT OF THE WHEELS

- Connect the switch (signal light ON).
- Shift the steering selection lever B into position B2 (short steering lock).
- Turn the steering wheel and bring the rear wheels into alignment until lamp A2 lights up.
- Shift the steering selection lever B into position B1 (highway traffic).
- Turn the steering wheel and bring the front wheels into alignment until lamp A1 lights up.

! Before driving on roads, it is necessary to check the alignment of the rear wheels and to drive in front wheel steer. The control of the alignment of the rear wheels must be regularly done with the help of the green lamps, while driving the lift truck. In case of anomalies, consult your dealer.

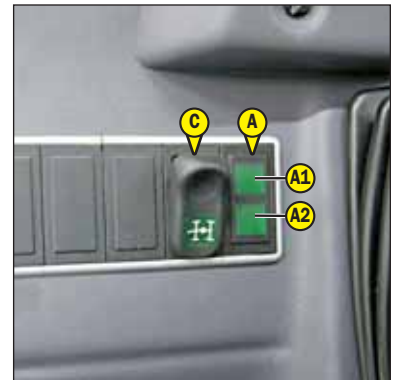

19 - HYDRAULIC CONTROLS

! Do not attempt to alter the hydraulic system pressure by interfering with the pressure regulating valve. In the event of suspected malfunction, contact your dealer. **ANY ALTERATION MAY RENDER THE WARRANTY NULL AND VOID.**

! Use the hydraulic controls carefully without jerking, to avoid accidents caused by shaking the lift truck.

NOTE: If necessary use the steering to reset the hydraulic control steering accumulator.

- A - Lifting and tilting control lever.
- B - Telescoping control button.
- C - Attachment control button.
- D - Attachment control button.

LIFTING THE LOAD

- The lever A backwards when lifting.
- The lever A forwards when lowering.

TILT OF CARRIAGE

- The lever A to the left for reverse tilt.
- The lever A to the right for forward tilt.

TELESCOPING


- Button B forwards for extending.
- Button B backwards for retracting.

ATTACHMENT

- The button C forwards or backwards.

OPTION JIB HEAD ELECTROVALVE

- Button D (see: 2 - DESCRIPTION: DESCRIPTION AND USE OF OPTIONS).

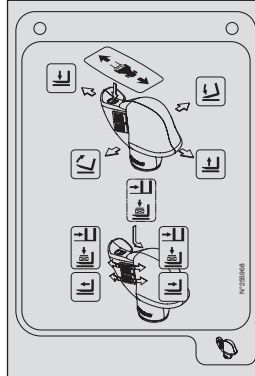

NOTE: When driving on the road, it is highly recommended that you cut-off all the hydraulic movements (see: 2 - DESCRIPTION: 5 - SWITCHES).

20 - FUNCTION FILES

These files contain the description of the hydraulic controls and the load charts for the attachments used on the lift truck.

21 - HEATER CONTROL

A - HEATING FAN CONTROL

This 2-speed control regulates warm or cold air through the heating ventilators.

In position 0, the fan is off.

In position 1, the fan is set to minimum speed.

In position 2, the fan is set to maximum speed.

B - HEATING TEMPERATURE CONTROL

Allows the temperature inside the cab to be adjusted.

In position 1, the valve is closed, the fan delivers fresh air.

In position 2, the valve is fully open, the fan delivers warm air.

The intermediate positions allow the temperature to be adjusted.



22 - AIR CONDITIONING CONTROLS (OPTION AIR CONDITIONING)

! The air conditioning only comes on when the forklift truck has been started up. When using your air conditioning, you must work with the doors and windows closed.

In winter: So as to ensure correct operation and complete efficiency of the air conditioning unit, start up the compressor once a week, if only for a short spell, so as to lubricate the internal seals.

In cold weather: Warm the I.C. engine before switching on the compressor, so as to allow the coolant that has collected in the liquid state at the lowest point of the compressor circuit to turn into gas under the effect of the heat given off by the I.C. engine, as the compressor is liable to be damaged by coolant in the liquid state.

! If your air conditioning does not seem to be working properly, have it examined by your dealer (see: 3 - MAINTENANCE: F - EVERY 2000 HOURS OF SERVICE). Never try to repair any possible problems by yourself.



C - CONDITIONED AIR TEMPERATURE CONTROL

Allows the temperature inside the cab to be adjusted.

In position 0, the air-conditioning system is switched off.

In position 1, the air-conditioning system runs on minimum.

In position 2, the air-conditioning system runs on maximum.

The intermediate positions allow the temperature to be adjusted.

NOTE: Possible losses of water under the lift truck are due to condensate discharges caused by the drying effect of the installation, especially with high outside temperatures and high relative humidity.

For the air conditioning to perform properly, the air intakes must not be blocked by frost, snow or leaves.

When the facility is running, at least one of the cab air grilles must be open so as to avoid any risk of freezing to the evaporator.



CONDITIONED AIR MODE

The controls must be adjusted in the following way:

A - At the required position 1 or 2.

B - At the position 1 (heater valve closed).

C - At the required temperature.

DEMISTING MODE

The controls must be adjusted in the following way:

A - At the required position 1 or 2.

B - At the required temperature.

C - At the required temperature.



23 - RECYCLING INTAKES (AIR CONDITIONING OPTION)

24 - WINDSCREEN DEMISTER VENTS

For optimum effectiveness, close the heating ventilators.

25 - HEATING VENTS

These heating vents enable the air to be directed to the interior of the cabin and onto the side windows.

26 - BUTTON FOR OPENING HYDRAULIC FLUID AND FUEL FILLER ACCESS PANEL

- Push the button to open the access panel.
- Push the panel to close it.

27 - DOOR LOCK

Two keys are provided with the lift truck to enable the cabin to be locked.

28 - LOCKING HANDLE FOR UPPER HALF-DOOR

29 - UNLOCKING BUTTON FOR UPPER HALF DOOR

30 - HANDLE FOR REAR WINDOW OPENING

EMERGENCY EXIT

Use the rear window as an emergency exit, if it is impossible to leave the cab by the door.




31 - DOCUMENT HOLDER

Ensure that the operator's manual is in its place in the document holder.


32 - FRONT LIGHTS

- A - Left front indicator.
- B - Left front dipped headlight.
- C - Left front main beam.
- D - Left front sidelight.
- E - Right front indicator.
- F - Right front dipped headlight.
- G - Right front main beam.
- H - Right front sidelight.

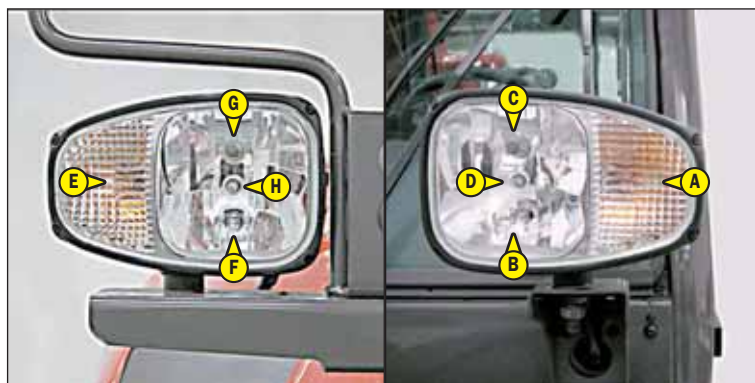

33 - REAR LIGHTS

- A - Left rear indicator.
- B - Left rear stoplight.
- C - Left tail light.
- D - Left rear reverse light.
- E - Left rear fog light. (OPTION)
- F - Right rear fog light. (OPTION)
- G - Right rear reverse light.
- H - Right tail light.
- I - Right rear stoplight.
- J - Right rear indicator.

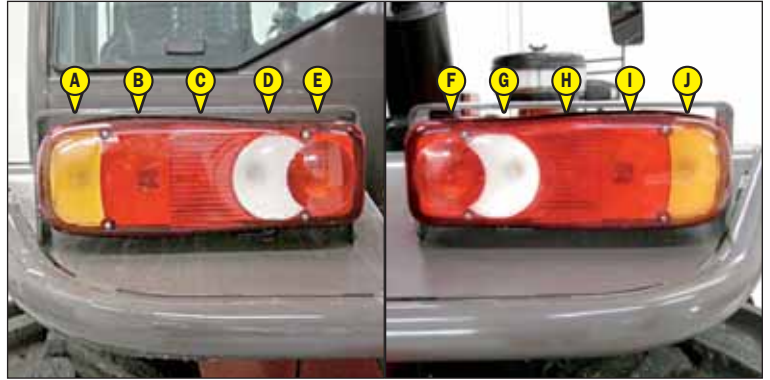

34 - REVOLVING LIGHT

The revolving light is dismantable to make it possible, for example, to reduce the bulkiness of the lift truck or to avoid being stolen.


- Loosen nut 1 and remove the revolving light.
- Protect mounting 2 with cap 3.



35 - LEVEL INDICATORS

A - SPIRIT LEVEL

Enables the operator to check that the lift truck is in the horizontal position.

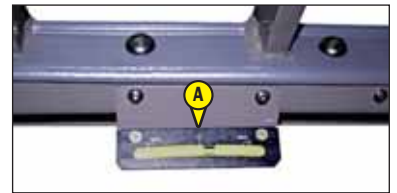


36 - INSIDE REAR-VIEW MIRROR

37 - STEERING WHEEL ADJUSTMENT LEVER

This handle enables the angle and height of the steering wheel to be adjusted.

- Turn handle 1 towards A to loosen and adjust steering wheel.
- Turn handle 1 towards B to lock steering wheel in the position required.

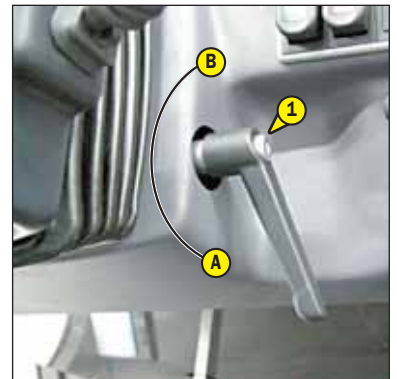

38 - DIAGNOSTIC SOCKET



39 - EMERGENCY STOP BUTTON

- In the event of danger, it lets you stop the I.C. Engine and thereby cut out all hydraulic movements.
- Pull the button to disable it before restarting the lift truck.

 ***Be ready for hydraulic movements suddenly stopping when you press this button.***



TOWING PIN AND HOOK

Located at the rear of the lift truck, this device is used to attach a trailer. Its capacity is limited for each lift truck by the authorised gross vehicle weight, tractive effort and maximum vertical force on the coupling point. This information is given on the manufacturer's plate fixed to each lift truck (see: 2 - DESCRIPTION: IDENTIFICATION OF THE LIFT TRUCK).

- To use a trailer, see current regulations in your country (maximum running speed, braking, maximum weight of trailer, etc.).
- Verify the trailer's condition before using it (tyre condition and pressures, electrical connection, hydraulic hose, brake system...).

! *Do not tow a trailer or attachment which is not in perfect working order. Using a trailer in poor condition may affect the lift truck's steering and braking, and hence safety.*

! *If a third party helps in coupling or uncoupling the trailer, this person must be permanently visible to the driver and wait until the lift truck has stopped, the handbrake is on and the I.C. engine is switched off before performing the operation.*


NOTE: There is an OPTIONAL rear-view mirror which allows the lift truck to be approached more closely to the trailer ring.

A - TOWING PINROCHE (STANDARD)

COUPLING AND UNCOUPLING THE TRAILER

- To couple the trailer, position the lift truck as close as possible to the trailer ring.
- Put the handbrake on and switch off the I.C. engine.
- Remove the clip 1, lift the trailer pin 2 and place or remove the trailer ring.


! *Be careful not to get your fingers caught or crushed during this operation.
Do not forget to put clip 1 back in place.
When uncoupling, make sure that the trailer is supported independently.*

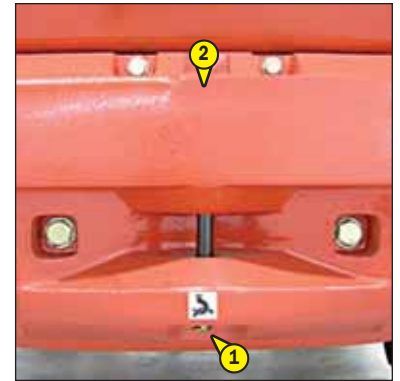

B - REAR ELECTRIC SOCKET (STANDARD)

- Connect the male plug to the female socket 1 on the lift truck and make sure the lights of the trailer or the light bar are working properly.

- A - Left rear indicator.
- C - Earth.
- D - Right rear indicator.
- E - Right tail light.
- F - Rear stoplight.
- G - Left tail light.

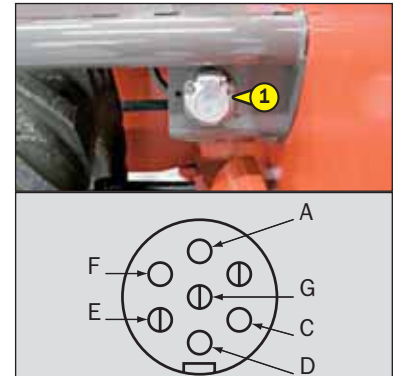

C - ADJUSTABLE PROJECTING HOOK (OPTION)


COUPLING AND UNCOUPLING THE TRAILER

- To couple the trailer, position the lift truck as close as possible to the trailer ring.
- Put the handbrake on and switch off the I.C. engine.
- Set the coupling fitting 1 according to the height of the trailer ring.

! *Do not forget to put rods and clip back in place.*

- Remove the clip 2, lift the trailer pin 3 and place or remove the trailer ring.

! *Be careful not to get your fingers caught or crushed during this operation.
Do not forget to put clip 2 back in place.
When uncoupling, make sure that the trailer is supported independently.*

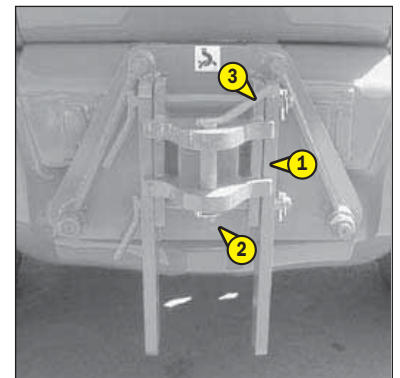

D - ADJUSTABLE PROJECTING HOOK (OPTION)

COUPLING AND UNCOUPLING THE TRAILER

- To couple the trailer, position the lift truck as close as possible to the trailer ring.
- Put the handbrake on and switch off the I.C. engine.

ON THE FIXED PIN

- Remove pin 1, remove rod 2 and raise latch 3.
- Insert or remove the trailer ring, lower latch 3 and refit rod 2.

! *Be careful not to get your fingers caught or crushed during this operation.
Do not forget to put clip 1 back in place.
When uncoupling, make sure that the trailer is supported independently.*


ON THE COUPLING LADDER

- Set the coupling fitting 4 according to the height of the trailer ring.

! *Do not forget to put rods and clip back in place.*

- Remove the clip 5, lift the trailer pin 6 and place or remove the trailer ring.

! *Be careful not to get your fingers caught or crushed during this operation.
Do not forget to put clip 5 back in place.
When uncoupling, make sure that the trailer is supported independently.*



E - HYDRAULIC TRAILER HOOK (OPTION)


NOTE: The rear-view mirror OPTION is mandatory with the hydraulic trailer tow hook.

! *Never use the tow hook to raise the rear of the lift truck (when changing the rear wheel for example).*

- Valve 1 in position B.
- Raise the hydraulic tow hook to release the hook lock 4 by moving switch 3 forwards.
- Pull knob 5, hold in this position and move switch 3 backwards to lower the tow hook.
- Release knob 5.
- Couple or uncouple the trailer.

! *When uncoupling, make sure that the trailer is supported independently.*

- Raise the hydraulic tow hook by moving switch 3 forwards.
- Lower the hook slightly to verify that the lock pin is in proper contact with the hook lock 4.

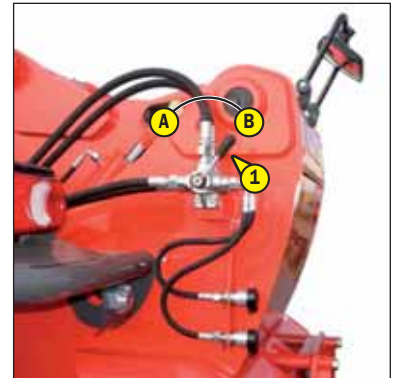

F - CONNECTING THE BRAKE SYSTEM (OPTION)

- Connect the brake hose to the provided brake unit 1 on the lift truck.
- Make sure the trailer brakes are working properly and test the effects of braking before taking the trailer onto the public highway.



DESCRIPTION AND USE OF THE OPTIONS

1 - BATTERY CUT-OFF



2 - REVERSE BUZZER ALARM

3 - NUMBER PLATE

4 - NUMBER PLATE LIGHTING



5 - PREHEATING ELEMENT

Enables the engine to be kept warm during prolonged periods of stoppage and thus improves engine starting.

Supply characteristics of preheating system:


- Rated range of power: 220-240V; 50-60Hz
- Current consumed: 4,5A
- Equipment in class 1
- Equipment connectable only on feeder circuit TT or TN
- Category of insulation 2

Environmental conditions for use:

- Maximum ambient temperature for using preheating: +25° C
- Pollution level 2

Conditions for connection and use of preheating:

- The preheating system should not be used for an external ambient temperature higher than + 25° C.
- It is essential that the power supply to the preheating system is:
 - Effected with a cable that conforms to the installation standards in force and contains a protective earth conductor.
 - Contains an appropriate sectioning system.
 - Incorporates an appropriate safety system against short circuits (fuses or circuit breaker) and a differential circuit breaker with 30mA sensitivity.
- Only connect to and disconnect from the power supply while the unit is off and the I.C. engine is stopped.

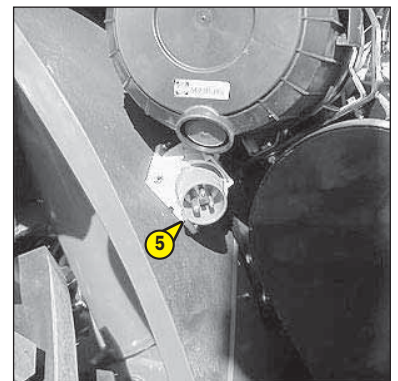

6 - MODCOD ANTI-THEFT SYSTEM

OPERATION

- Switch on the lift truck: the red indicator 1 will flash.
- Enter your user code followed by "V" to validate: the green indicator 2 will come on.
- Start the lift truck within the next 60 seconds; otherwise the anti-theft system will be reactivated and the red indicator will flash.

NOTE:

- If you make a mistake when entering the code, press key "A" to cancel and re-enter the code in full.
- If you wait more than 5 seconds between key presses or do not complete entering the code, the anti-theft system will be reactivated and the red indicator will flash.




7 - FINTRONIC ANTI-START SYSTEM

OPERATION

- Switch on the lift truck and set the black key A next to the antenna B (maximum 80 mm).
- Wait a few seconds for red LED C to go out before starting the lift truck.

NOTE: You can restart the lift truck within 20 seconds of stopping it: after this time, the anti-start system reacts and LED C flashes red.

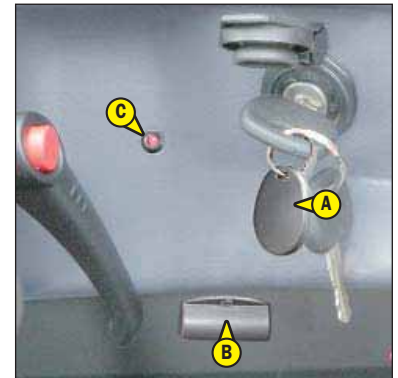


8 - MODCLÉ ANTI-START SYSTEM

OPERATION

- Switch on lift truck ignition, red led 1 will flash.
- Apply key 2 to its base 3, and withdraw the moment the system emits a continuous beep, and led 1 turns green.
- Start the lift truck within the next 20 seconds; otherwise the anti-theft system will be reactivated and red led 1 will flash.

NOTE: You can restart the lift truck within 20 seconds of stopping it; after this time, the anti-start system reacts and red led 1 flashes.

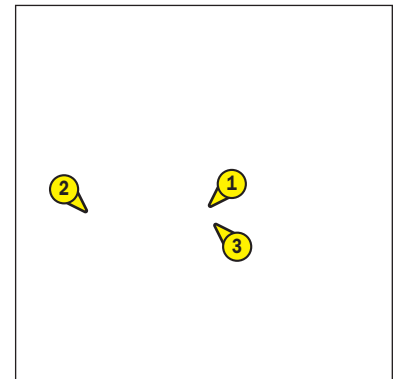

9 - CLEANFIX SELF-CLEANING FAN

This system, operated by switch 1, cleans the radiator core and the grille of the engine cover by reversing the air flow.

! When in use, beware of the risk of projection into the eyes.

Position A: The indicator light is on, the fan operates in self-cleaning mode for a few seconds once every 3 minutes.

Position B: The indicator light is off, the fan is in normal operating mode.



10 - ELECTRICAL JIB PROVISION

Enables an electrical function to be used at the head of the jib foot.

OPERATION

- Hold button 2 down and button 3 forwards or backwards.



11 - EXTERIOR DRAIN-BACK

Enables connection of an attachment for which drain-back is required.



12 - HYDRAULIC ATTACHMENT LOCKING

Enables the attachment to be locked onto the carriage and a hydraulic attachment to be used by the same hydraulic circuit.

ATTACHMENT LOCKING CONTROL


- Set valve 1 to position A.
- Push button 3 forward to lock the attachment and backward to release it.



Once the attachment is locked, return valve 1 to position B to prevent accidental release of the attachment.

HYDRAULIC ATTACHMENT CONTROL

- Set valve 1 to position B.
- Push button 3 forward or backward.

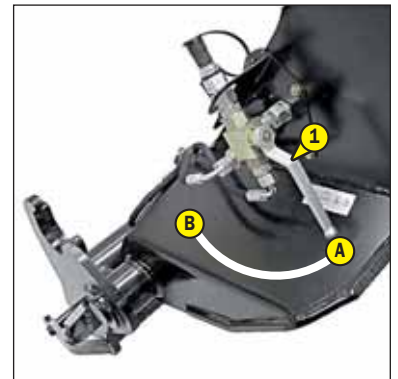

13 - JIB HEAD ELECTROVALVE

Enables use of two hydraulic functions on the attachment circuit.


! To make connection of the rapid connectors easier, decompress the hydraulic circuit by pressing button 1 on the electrovalve.

ATTACHMENT LINE L1 CONTROL

- Push button 3 forward or backward.

ATTACHMENT LINE L2 CONTROL

- Hold button 2 down and button 3 forwards or backwards.

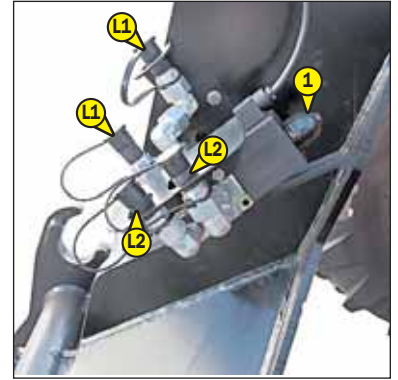

14 - JIB HEAD ELECTROVALVE + HYDRAULIC ATTACHMENT LOCKING

The addition of these two options on the attachment line allows two hydraulic functions to be used and locks the attachment onto the carriage.

! To make connection of the rapid connectors easier, decompress the hydraulic circuit by pressing button 1 on the electrovalve.

ATTACHMENT LINE L1 CONTROL

- Set valve 4 to position B.
- Set switch 2 to position A (indicator light off).
- Push button 3 forward or backward.

ATTACHMENT LINE L2 CONTROL + HYDRAULIC ATTACHMENT LOCKING


LOCKING AN ATTACHMENT

- Set valve 4 to position A.
- Set switch 2 to position B (indicator light on).
- Hold button 5 down and push button 3 forward to lock the attachment and backward to release it.

! Once the attachment is locked, return valve 4 to position B to prevent accidental release of the attachment.

HYDRAULIC ATTACHMENT

- Set valve 4 to position B.
- Set switch 2 to position B (indicator light on).
- Hold button 5 down and push button 3 forwards or backwards.

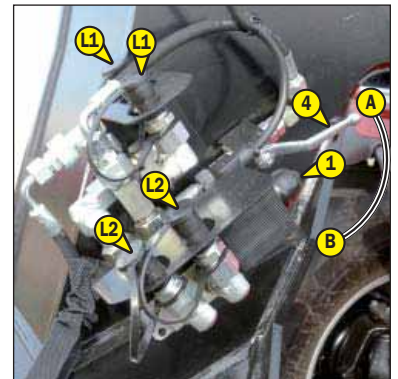

15 - SINGLE OR DUAL EFFECT REAR HYDRAULIC CONTROL PREDISPOSITION

Enables the use of a hydraulic rear hook or of a trailer with hydraulic tipping.

- Single or double effect rear hydraulic control functions with hydraulic control of the additional attachment (see chapter: 2 - DESCRIPTION: 19 - HYDRAULIC CONTROLS) according to the position of tap 1.

- Position A: Hydraulic control of the additional attachment at the front of the lift truck.
- Position B: Hydraulic control of the additional attachment at the rear of the lift truck.



16 - ATTACHMENT HYDRAULIC CONTROL FORCED OPERATION

! This OPTION must only be used with an attachment requiring continuous hydraulic movement of type: brush, supply bucket, mixer, spray... It is strictly forbidden in handling operations and at all other events (winch, crane jib, crane jib with winch, hook, etc.).


CONTINUOUS HYDRAULIC MOVEMENT OF THE ATTACHMENT

- Make sure the potentiometer C is set to 0 %.
- Switch button A to the front or the back (depending on the type of attachment), press button B and release button A. The red indicator 1, flashes to indicate that it is in operation.
- Set the required flowrate using potentiometer C.

- To stop continuous hydraulic movement of the attachment, move switch A forwards or backwards or press button B. Indicator 1 goes out.
- Set potentiometer C to 0 %.

! Never leave the driver's cab without resetting the potentiometer C to 0 %. Before starting the lift truck, make sure the potentiometer is set to 0 %.

NOTE: If the operator leaves the driver's cab, the continuous hydraulic movement will automatically stop and must be restarted.

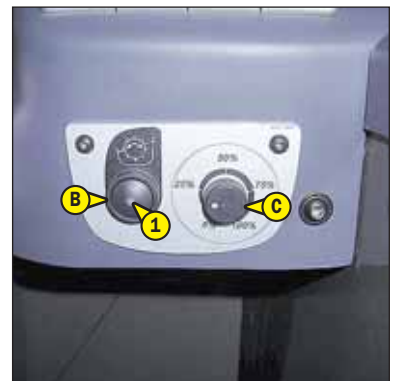

17 - JIB SUSPENSION

The jib is suspended to reduce shaking of the lift truck on rough ground (e.g. moving straw in a field).

OPERATION

- Set the forks or attachment on the ground and relieve the front wheels a few centimetres only.
- Press switch 1 set to position A, the visual indicator comes on indicating that jib suspension is activated.
- Press switch 1 set to position B, the visual indicator goes out indicating that jib suspension is deactivated.

! Jib suspension is active to a lifting height of 3m00 from the axis of articulation of the carriage with respect to the ground with the jib retracted. When you move beyond this height or make another hydraulic movement (tilting, telescoping, attachment), jib suspension is momentarily deactivated and the visual indicator of switch 1 goes out.

- When the I.C. engine is off, jib suspension is automatically deactivated.




18 - ATTACHMENT EASY HYDRAULIC CONNECTION

For easily connecting and disconnecting the attachment.

OPERATION

- Switch on lift truck ignition.
- Press the push-button 1 to release the attachment circuit hydraulic pressure.
- Connect or disconnect the rapid connectors of the hydraulic attachment.

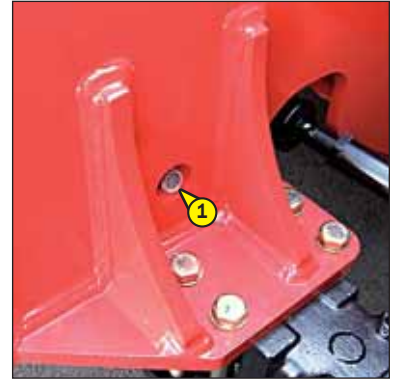

19 - ANGULAR SECTOR ON JIB

The angular sector displays the jib angle, and thus improves the reading of the load charts.




20 - LIFTING RING ON SINGLE CARRIAGE

CONDITIONS OF USE



! Follow the instructions given in your lift truck's instruction manual (see: 1 - OPERATING AND SAFETY INSTRUCTIONS ON HANDLING LOADS), in addition to those given below.

- The lifting ring must be used WITHOUT FORKS AND ATTACHMENTS, but the angle of inclination of the carriage must be the same as when the forks are used in the horizontal position.
- Check the maximum permitted angle, which is 45°.
- Do not change the angle of the carriage while using the lifting ring.
- The lifting hook, the chains and slings shall have a minimum capacity of 3000 kg with a factor of safety against breakage of 4.

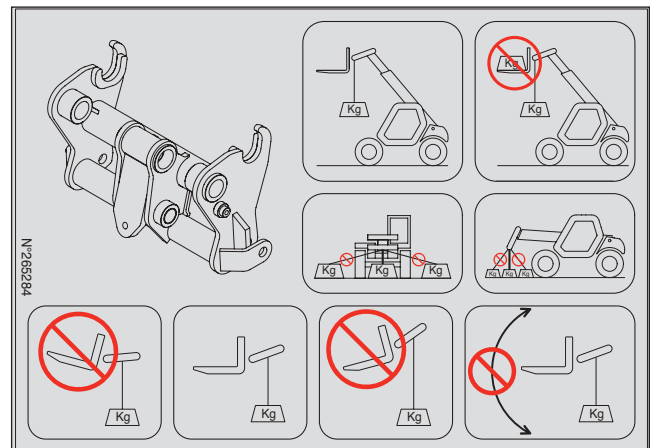

LOAD CHARTS AND FUNCTION SHEETS

! The load charts are given for use without forks and without attachments.

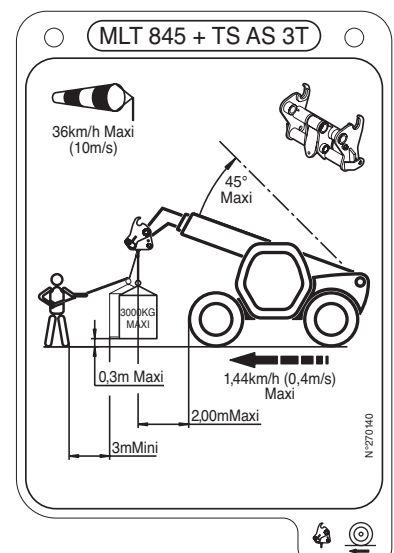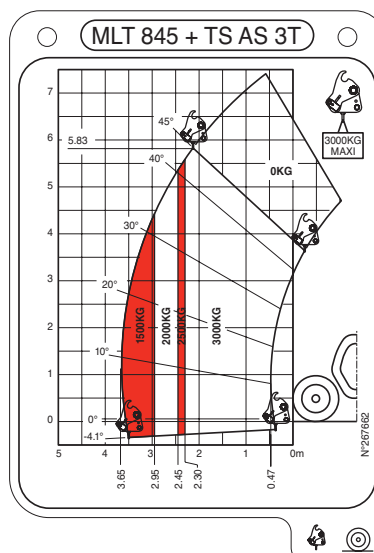

3 - MAINTENANCE

TABLE OF CONTENTS

<u>MANITOU ORIGINAL SPARE PARTS AND EQUIPMENT</u>	<u>3-4</u>
<u>START-UP CHECKLIST</u>	<u>3-5</u>
<u>FILTERS CARTRIDGES AND BELTS</u>	<u>3-7</u>
<u>LUBRICANTS AND FUEL</u>	<u>3-8</u>
<u>SERVICING SCHEDULE</u>	<u>3-10</u>
<u>A - DAILY OR EVERY 10 HOURS SERVICE</u>	<u>3-12</u>
<u>B - EVERY 50 HOURS SERVICE</u>	<u>3-18</u>
<u>C - EVERY 250 HOURS SERVICE</u>	<u>3-24</u>
<u>D - EVERY 500 HOURS SERVICE</u>	<u>3-28</u>
<u>E - EVERY 1000 HOURS SERVICE</u>	<u>3-36</u>
<u>F - EVERY 2000 HOURS OF SERVICE</u>	<u>3-40</u>
<u>G - OCCASIONAL MAINTENANCE</u>	<u>3-42</u>

MANITOU ORIGINAL SPARE PARTS AND EQUIPMENT

OUR LIFT TRUCKS MUST BE SERVICED USING ORIGINAL MANITOU PARTS.

IF YOU USE PARTS WHICH ARE NOT ORIGINAL MANITOU PARTS,

YOU RISK

- Legally - to be held responsible in the event of an accident.
- Technically - to generate operating failure or shorten the life of the lift truck.

**THE USE OF COUNTERFEIT PARTS OR COMPONENTS NOT APPROVED BY THE MANUFACTURER,
MEANS YOU LOSE THE BENEFIT OF THE CONTRACTUAL GUARANTEE.**

BY USING ORIGINAL MANITOU PARTS FOR MAINTENANCE OPERATIONS,

YOU BENEFIT EXPERTISE

- Through its network, MANITOU provides the user with
- Know-how and competence.
 - The guarantee of high-quality work.
 - Original replacement components.
 - Help with preventive maintenance.
 - Efficient help with diagnosis.
 - Improvements due to experience feedback.
 - Operator training.
- Only the MANITOU network has detailed knowledge of the design of the lift truck and therefore the best technical ability to provide maintenance.

ORIGINAL REPLACEMENT PARTS ARE DISTRIBUTED EXCLUSIVELY BY MANITOU AND ITS DEALER NETWORK.
the dealer network list is available on manitou web site www.manitou.com

START-UP CHECKLIST













0 = OK 1 = Missing 2 = Incorrect

100	ENGINE	
01	Air filter	
02	Fuel tank	
03	Fuel lines - Filter	
04	Injection or carburetion system	
05	Radiator and cooling system	
06	Belts	
07	Hoses	
101	TRANSMISSION	
01	Direction reversal system	
02	Gear shift	
03	Cut-off pedal	
04	Clutch	
102	AXLES/TRANSFER GEAR BOX	
01	operation and seal	
02	Stop settings	
103	HYDRAULIC/HYDROSTATIC CIRCUIT	
01	Tank	
02	Pumps and couplings	
03	Tightening of connections	
04	Lift cylinder(s)	
05	Tilt cylinder(s)	
06	Attachment cylinder(s)	
07	Telescope cylinder(s)	
08	Compensation cylinder(s)	
09	Steering cylinder(s)	
10	Control Valve	
11	Balancing valve	
104	BRAKE SYSTEM	
01	Service brake and parking brake operation	
02	Brake fluid level	
105	LUBRICATION AND GREASING	
106	JIB/MANISCOPIC/MANIACCESS ASSEMBLY	
01	Beam and telescope(s)	
02	Skid	
03	Hinges	
04	Carriage	
05	Forks	
107	MAST ASSEMBLY	
01	Fixed and mobile uprights	
02	Carriage	
03	Chains	
04	Rollers	
05	Forks	

108	ATTACHMENTS	
01	Fitting on machine	
02	Hydraulic couplings	
109	CABIN/PROTECTOR/ELECTRIC CIRCUIT	
01	Seat	
02	Dashboard and radio	
03	Sound and visual alarm/safety system	
04	Heating/Air conditioning	
05	Windscreen wiper/windscreen washer	
06	Road horn	
07	Reversing horn	
08	Road lights	
09	Additional lights	
10	Rotating beacon light	
11	Battery	
110	WHEEL	
01	Rims	
02	Tyre/Pressure	
111	SCREWS	
112	FRAME AND BODYWORK	
113	PAINTING	
114	GENERAL OPERATION	
115	OPERATOR'S MANUAL	
116	CUSTOMER INSTRUCTIONS	


FILTERS CARTRIDGES AND BELTS

I.C. ENGINE





	I.C. ENGINE OIL FILTER Part number: 709666 Change: 500 H		CLEANFIX COMPRESSOR FILTER (OPTION) Part number: 781443 Change: 500 H
	DRY AIR FILTER CARTRIDGE Part number: 907330 Clean: 50 H* Change: 500 H*		ALTERNATOR BELT Part number: 741906
	SAFETY DRY AIR FILTER CARTRIDGE Part number: 907331 Change: 1000 H*		COMPRESSOR BELT (OPTION AIR CONDITIONING) Part number: 907332
	FUEL FILTER CARTRIDGE Part number: 709664 Change: 500 H		CYCLONIC PREFILTER Part number: 224713 Clean: 10 H
	FUEL PRE-FILTER Part number: 709667 Change: 500 H		AUTOMATIC VACUUM-CLEANING PRE-FILTER (OPTION) Part number: 226611
	SAFETY CARTRIDGE FUEL PRE-FILTER Part number: 709663 Change: 500 H		AUTOMATIC VACUUM-CLEANING PRE-FILTER (OPTION) Part number: 223510

*: This periodicity is given for information only (see: 3 - MAINTENANCE: SERVICING SCHEDULE) for cleaning and changing.


TRANSMISSION

	GEAR BOX OIL FILTER Part number: 561749 Change: 500 H
---	---

HYDRAULIC

	HYDRAULIC RETURN OIL FILTER CARTRIDGE Part number: 221174 (Qty: 2) Change: 500 H		SUCTION STRAINER FOR HYDRAULIC OIL TANK Part number: 257603 Clean: 1000 H
	FILTER CAP FOR HYDRAULIC OIL TANK Part number: 62415 Change: 1000 H		DISTRIBUTOR CONTROL HEAD FILTER Part number: 254780 Change: 1000 H

CAB

	CAB VENTILATION FILTER (OPTION AIR CONDITIONING) Part number: 552552 Clean: 50 H Change: 250 H
---	---

LUBRICANTS AND FUEL



USE THE RECOMMENDED LUBRICANTS AND FUEL:

- For topping up, oils may not be miscible.
- For oil changes, MANITOU oils are perfectly appropriate.

DIAGNOSTIC ANALYSIS OF OILS

If a service or maintenance contract has been organized with the dealer, a diagnostic analysis of engine, transmission and axle oils may be requested depending on the rate of use.

(*) RECOMMENDED FUEL SPECIFICATION:

Use a high-quality fuel to obtain optimal performance of the I.C. engine.

- N590 diesel fuel type - Auto/C0/C1/C2/C3/C4
- BS2869 Class A2
- ASTM D975-91 Class 2-2DA, US DF1, US DF2, US DFA
- JIS K2204 (1992) Grades 1, 2, 3 and Special Grade 3.

I.C. ENGINE				
ORGANS TO BE LUBRICATED	CAPACITY	RECOMMENDATION	PACKAGING	PART NUMBER
I.C. ENGINE	15+0,8 Liters	MANITOU Oil API CH4	5 l	661706
			20 l	582357
			55 l	582358
			209 l	582359
			1000 l	490205
COOLING CIRCUIT	17,5 Liters	Cooling liquid (protection - 25)	2 l	788245
			5 l	788246
			20 l	788247
			210 l	788248
		Cooling liquid (protection - 30)	20 l	788249
			210 l	788250
			1000 l	788251
FUEL TANK	135 Liters	Diesel fuel (*)		

TRANSMISSION				
ORGANS TO BE LUBRICATED	CAPACITY	RECOMMENDATION	PACKAGING	PART NUMBER
GEAR BOX	15,1 Liters	MANITOU Oil Automatic transmission	1 l	62148
			20 l	546332
			55 l	546217
			209 l	546195
			1000 l	720148
ANGLE GEAR BOX	2,2 Liters	MANITOU Oil SAE80W90 Mechanical transmission	1 l	62148
			20 l	546332
			55 l	546217
			209 l	546195
			1000 l	720148
TRANSMISSION UNIVERSAL JOINT		MANITOU Grease BLUE multi-purpose	400 g	161589
			1 kg	720683
			5 kg	554974
			20 kg	499233
			50 kg	489670

JIB			
ORGANS TO BE LUBRICATED	RECOMMENDATION	PACKAGING	PART NUMBER
JIB PADS	MANITOU Grease BLACK multi-purpose	400 g	545996
		1 kg	161590
		5 kg	499235
GREASING OF THE JIB	MANITOU Grease BLUE multi-purpose	400 g	161589
		1 kg	720683
		5 kg	554974
		20 kg	499233
		50 kg	489670

HYDRAULIC				
ORGANS TO BE LUBRICATED	CAPACITY	RECOMMENDATION	PACKAGING	PART NUMBER
HYDRAULIC OIL TANK	131 Liters	MANITOU Oil Hydraulic ISO VG 46	5 l	545500
			20 l	582297
			55 l	546108
			209 l	546109

BRAKE			
ORGANS TO BE LUBRICATED	RECOMMENDATION	PACKAGING	PART NUMBER
BRAKE CIRCUIT	MANITOU Oil Mineral brake fluid	1l	490408

CAB			
ORGANS TO BE LUBRICATED	RECOMMENDATION	PACKAGING	PART NUMBER
CAB DOOR	MANITOU Grease BLUE multi-purpose	400 g	161589
		1 kg	720683
		5 kg	554974
		20 kg	499233
		50 kg	489670
WINDSCREEN WASHER TANK	Windscreen washer fluid	1 l	490402
		5 l	486424

FRONT AXLE				
ORGANS TO BE LUBRICATED	CAPACITY	RECOMMENDATION	PACKAGING	PART NUMBER
FRONT AXLE DIFFERENTIAL	6,7 Liters	MANITOU Oil Special immersed brakes	5 l	545976
			20 l	582391
			209 l	546222
			1000 l	720149
FRONT WHEELS REDUCERS	1,8 Liter	MANITOU Oil SAE80W90 Mechanical transmission	2 l	499237
			5 l	720184
			20 l	546330
			55 l	546221
FRONT WHEELS REDUCERS PIVOTS		Graisse MANITOU Multi-usage NOIRE	209 l	546220
			400 g	545996
			1 kg	161590
			5 kg	499235


REAR AXLE				
ORGANS TO BE LUBRICATED	CAPACITY	RECOMMENDATION	PACKAGING	PART NUMBER
REAR AXLE DIFFERENTIAL	7,3 Liters	MANITOU Oil Special immersed brakes	5 l	545976
			20 l	582391
			209 l	546222
			1000 l	720149
FRONT/REAR REDUCING GEAR DIFFERENTIAL	1,8 Liter	MANITOU Oil SAE80W90 Mechanical transmission	2 l	499237
			5 l	720184
			20 l	546330
			55 l	546221
REAR WHEELS REDUCERS PIVOTS		MANITOU Grease BLACK multi-purpose	209 l	546220
			400 g	545996
			1 kg	161590
REAR AXLE OSCILLATION			5 kg	499235

SERVICING SCHEDULE


(1): MANDATORY 500 HOUR OR 6 MONTH SERVICE

This service must be carried out after approximately the first 500 hours of operation or within the 6 months following the start-up of the machine (whichever occurs first).

A = ADJUST, C = CHECK, G = GREASE, N = CLEAN,
P = BLEED, R = REPLACE, V = DRAIN

	PAGE	 (1)	DAILY OR EVERY 10 HOURS SERVICE	EVERY 50 HOURS SERVICE	EVERY 250 HOURS SERVICE	EVERY 500 HOURS SERVICE OR 6 MONTHS	EVERY 1000 HOURS SERVICE OR 1 YEAR	EVERY 2000 HOURS SERVICE OR 2 YEARS	EVERY 4000 HOURS SERVICE	OCCASIONALLY
I.C. ENGINE										
I.C. engine oil level	3-12	C	C	<<<	<<<	<<<	<<<	<<<	<<<	
Cooling liquid level	3-12	C	C	<<<	<<<	<<<	<<<	<<<	<<<	
Fuel level	3-12	C	C	<<<	<<<	<<<	<<<	<<<	<<<	
Fuel pre-filter	3-13	C	C	<<<	<<<	<<<	<<<	<<<	<<<	
Cyclonic pre-filter	3-13	N	N	<<<	<<<	<<<	<<<	<<<	<<<	
Dry air filter cartridge	3-18/27	R		N	<<<	R	<<<	<<<	<<<	
Radiator cores	3-18	N		N	<<<	<<<	<<<	<<<	<<<	
Condenser core (OPTION Air conditioning)	3-18	C/N		C/N	<<<	<<<	<<<	<<<	<<<	
Alternator/crankshaft belt tension	3-24	C/A			C/A	<<<	<<<	<<<	<<<	
Compressor belt tension (OPTION Air conditioning)	3-25	C/A			C/A	<<<	<<<	<<<	<<<	
I.C. engine oil	3-28	V				V	<<<	<<<	<<<	
I.C. engine oil filter	3-28	R				R	<<<	<<<	<<<	
Fuel pre-filter	3-29	R				R	<<<	<<<	<<<	
Fuel filter	3-30	R				R	<<<	<<<	<<<	
CLEANFIX compressor filter (OPTION)	3-31	R				R	<<<	<<<	<<<	
Fuel tank	3-32						N	<<<	<<<	
Safety dry air filter cartridge	3-32						R	<<<	<<<	
I.C. engine silent blocks							C**	<<<	<<<	
I.C. engine rates							C**	<<<	<<<	
Valves clearances	3-30	C**					C**	<<<	<<<	
Cooling liquid	3-36							V	<<<	
Radiator								C**	<<<	
Water pump and the thermostat								C**	<<<	
Alternator and the starter motor								C**	<<<	
Turbo compressor								C**	<<<	
TRANSMISSION										
Gear box oil level	3-13	C	C	<<<	<<<	<<<	<<<	<<<	<<<	
Transmission universal joint	3-19	G		G	<<<	<<<	<<<	<<<	G/C**	
Angle gear box oil level	3-25	C			C	<<<	<<<	<<<	<<<	
Gear box oil filter	3-30	R				R	<<<	<<<	<<<	
Gear box oil	3-32	V					V	<<<	<<<	
Gear box sump strainer	3-32	N					N	<<<	<<<	
Angle gear box oil	3-32	V					V	<<<	<<<	
Silentblocks in the gear box							C**	<<<	<<<	
Gear box controls							C**	<<<	<<<	
Gear box pressures								C**	<<<	
Converter pressure								C**	<<<	
TYRES										
Tyres pressure	3-13	C	C	<<<	<<<	<<<	<<<	<<<	<<<	
Wheel nuts torque	3-13	C	C	<<<	<<<	<<<	<<<	<<<	<<<	
Condition of wheels and tyres							C**	<<<	<<<	
Wheel	3-39									R
JIB										
Jib pads	3-14		G*	<<<	<<<	<<<	<<<	<<<	<<<	
Jib	3-20	G		G	<<<	<<<	<<<	<<<	<<<	
Jib pads wear							C**	<<<	<<<	
Condition of jib unit								C**	<<<	
Bearings and articulation rings								C**	<<<	
HYDRAULIC										
Hydraulic oil level	3-21	C		C	<<<	<<<	<<<	<<<	<<<	
hydraulic return oil filter cartridge	3-31	R				R	<<<	<<<	<<<	
Hydraulic oil	3-34						V	<<<	<<<	
Suction strainer for hydraulic oil tank	3-34						N	<<<	<<<	
Filter cap for hydraulic oil tank	3-34						R	<<<	<<<	
Distributor control head filter	3-34						R	<<<	<<<	
Speeds of hydraulic movements							C**	<<<	<<<	
Hydraulic pump tubular filter							N**	<<<	<<<	
Condition of hoses and flexible pipes							C**	<<<	<<<	
Condition of cylinders (leakage, shafts)							C**	<<<	<<<	
Hydraulic circuit pressures								C**	<<<	
Hydraulic circuit outputs								C**	<<<	
Hydraulic oil tank								N**	<<<	

A = ADJUST, C = CHECK, G = GREASE, N = CLEAN,
P = BLEED, R = REPLACE, V = DRAIN

	PAGE	 (1)	DAILY OR EVERY 10 HOURS SERVICE	EVERY 50 HOURS SERVICE	EVERY 250 HOURS SERVICE	EVERY 500 HOURS SERVICE OR 6 MONTHS	EVERY 1,000 HOURS SERVICE OR 1 YEAR	EVERY 2,000 HOURS SERVICE OR 2 YEARS	EVERY 4,000 HOURS SERVICE	OCCASIONALLY
BRAKE										
Brake oil level	3-21	C		C	<<<	<<<	<<<	<<<	<<<	
Brake oil							V**	<<<	<<<	
Brake system							P**	<<<	<<<	
Brake system pressure							C**	<<<	<<<	
Brake							A**	<<<	<<<	
Manually unblocking the parking brake	3-39									XXX
STEERING										
Steering								C**	<<<	
Steering swivel joints									C**	
CAB										
Windscreen washer liquid level	3-21	C		C	<<<	<<<	<<<	<<<	<<<	
Cab door	3-22	G		G	<<<	<<<	<<<	<<<	<<<	
Air conditioning filter (OPTION air conditioning)	3-22/26	R		N	R	<<<	<<<	<<<	<<<	
Seat belt	3-35						C	<<<	<<<	
Condition of the rear view mirrors							C**	<<<	<<<	
Structure							C**	<<<	<<<	
Air conditioning (OPTION)	3-37							N/C	<<<	
ELECTRICITY										
Longitudinal stability limiter and warning device	3-15/43	C	C	<<<	<<<	<<<	<<<	<<<	<<<	XXX
Condition of wiring harness and cables							C**	<<<	<<<	
Lights and signals							C**	<<<	<<<	
Warning indicators							C**	<<<	<<<	
Front headlights	3-40									A
FRONT AXLE										
Front wheels reducers pivots	3-22	G		G	<<<	<<<	<<<	<<<	G/C**	
Front axle differential oil level	3-26	C			C	<<<	<<<	<<<	<<<	
Front wheels reducers oil level	3-26	C			C	<<<	<<<	<<<	<<<	
Front axle differential oil	3-31	V				V	<<<	<<<	<<<	
Front wheels reducers oil	3-35	V					V	<<<	<<<	
Wear of front axle brake discs									C**	
Front wheels reducers universal joint									C**	
Front wheels reducers clearance									C**	
REAR AXLE										
Rear wheels reducers pivots	3-22	G		G	<<<	<<<	<<<	<<<	G/C**	
Rear axle oscillation	3-22	G		G	<<<	<<<	<<<	G/C**		
Rear axle differential oil level	3-26	C			C	<<<	<<<	<<<	<<<	
Rear wheels reducers oil level	3-26	C			C	<<<	<<<	<<<	<<<	
Rear axle differential oil	3-31	V				V	<<<	<<<	<<<	
Rear wheels reducers oil	3-35	V					V	<<<	<<<	
Wearing of rear axle brake discs									C**	
Rear wheels reducers universal joint									C**	
Rear wheels reducers clearance									C**	
CHASSIS										
Structure							C**	<<<	<<<	
Bearings and articulation rings								C**	<<<	
ATTACHMENTS										
Forks wear		C**				C**	<<<	<<<	<<<	
Attachment carriage							C**	<<<	<<<	
Condition of attachments							C**	<<<	<<<	
LIFT TRUCK										
Tow the lift truck	3-43									XXX
Sling the lift truck	3-43									XXX
Transport the lift truck on a platform	3-44									XXX

(*): Every 10 hours during the first 50 hours, then once at 250 hours.

(**): Consult your dealer.




A - DAILY OR EVERY 10 HOURS SERVICE

A1 - I.C. ENGINE OIL LEVEL

CHECK

Place the lift truck on level ground with the I.C. engine stopped, and let the oil drain into the sump.

- Open the I.C. engine bonnet.
- Remove the dipstick 1 (fig. A1-A1/1).
- Clean the dipstick and check the correct level between the two notches.
- If necessary, add oil (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) by the filler port 2 (fig. A1-A1/2).
- Check visually that there is no leakage or seepage of oil in the I.C. engine.

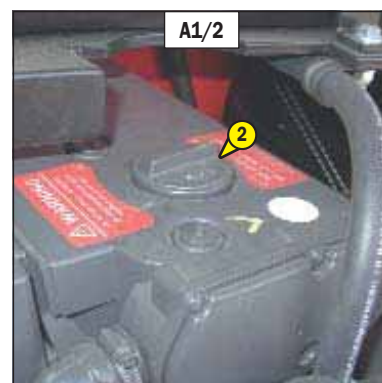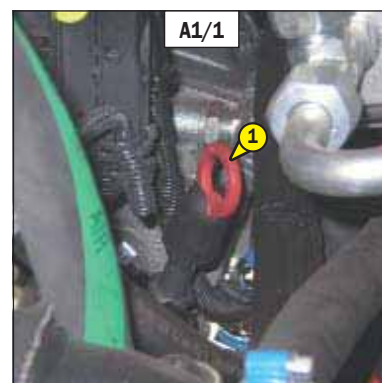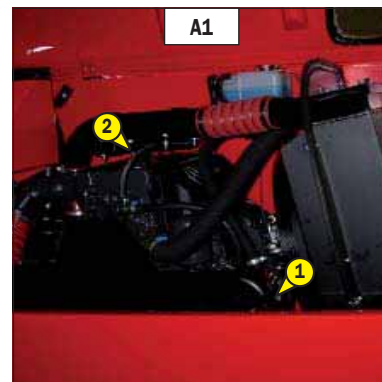


A2 - COOLING LIQUID LEVEL

CHECK

Place the lift truck on level ground with the I.C. engine stopped, and allow the I.C. engine to cool.

- Open the I.C. engine bonnet.
- Check the correct level in the middle of gauge 1 (fig. A2).
- If necessary, add cooling liquid (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL).
- Slowly turn the cap of the radiator 2 (fig. A2) up to the safety stop.
- Allow the pressure and the steam to escape.
- Press down and turn the cap so as to release it.
- Add cooling liquid via filler port 3 (fig. A2) up to the middle of gauge 1 (fig. A2).
- Lubricate slightly the filler neck in order to facilitate the setting and the removal of the radiator cap.
- Check visually that there is no leakage in the radiator and pipes.

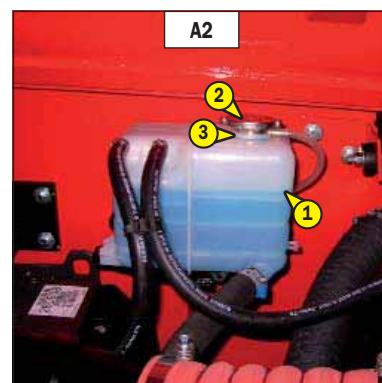


⚠ To avoid any risk of spraying or burning, wait until the I.C. engine has cooled down before removing the cooling circuit filler plug. If the cooling liquid is very hot, add only hot cooling liquid (80 °C). In an emergency, you can use water as a cooling liquid, then change the cooling circuit liquid as soon as possible (see: 3 - MAINTENANCE: F1 - COOLING LIQUID).

A3 - FUEL LEVEL

CHECK

Keep the fuel tank full, to reduce as much as possible any condensation due to the atmospheric conditions.

- Open the access panel for hydraulic oil filling.
- Remove cap 1 (fig. A3).
- Fill the fuel tank with clean fuel (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL), filtered through a strainer or a clean, lint free cloth, through filler port 2 (fig. A3).
- Put back the cap 1 (fig. A3) and close the fuel filler access panel.
- Check visually that there is no leakage in the tank and pipes.

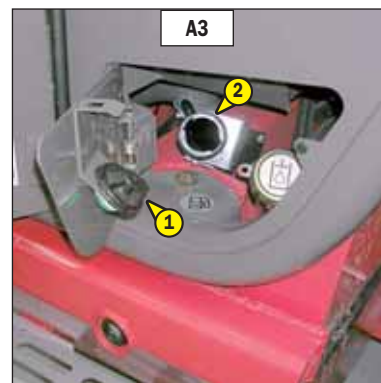


⚠ Never smoke or approach with a flame during filling operations or when the tank is open. Never refill while I.C. engine is running.

⚠ The fuel tank is degassed via the filler plug. When changing it, always use an original part, with degassing hole.

A4 - FUEL PRE-FILTER

CHECK

- Open the I.C. engine bonnet.
- Check for the presence of water in the pre-filter bowl 1 (fig. A4/2) and empty it out if necessary.
- Place a receptacle under the drain plug 2 (fig. A4/2) and loosen it in two to three thread turns.
- Allow the diesel fuel to flow out until it is free from impurities and water.
- Tighten the drain plug.
- Pressurise the circuit with the hand pump 3 (fig. A4/2).

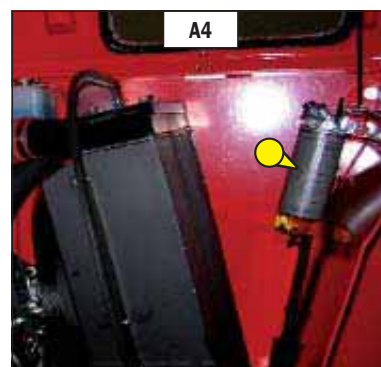

A5 - CYCLONIC PREFILTER

CLEAN

The cleaning interval is given as a guide, however the pre-filter must be emptied as soon as impurities reach the MAXI level on the tank.

- Loosen nut 1 (fig. A5), remove cover 2 (fig. A5) and empty the tank.
- Clean the pre-filter unit with a clean dry cloth and reassemble the unit.



When cleaning, take care not to let impurities into the dry air filter.




A6 - GEAR BOX OIL LEVEL

CHECK

Park the lift truck on level ground with the jib raised, the I.C. engine cold and stopped. Carry out the control within 5 minutes of the I.C. engine being stopped.

- Remove the plastic cap 1 (fig. A6).
- Remove the dipstick 2 (fig. A6).
- Wipe the dipstick and check the correct level between the two MIN and MAX. marks.
- If necessary, add oil (see: 3 - MAINTENANCE: E3 - GEAR BOX OIL).
- Check visually that there is no leakage or seepage of oil in the transmission.

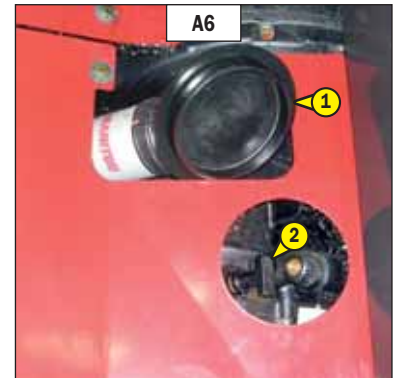

A7 - TYRES PRESSURE AND WHEEL NUTS TORQUE

CHECK

- Check the condition of the tyres, to detect cuts, protuberances, wear, etc.
- Check the torque load of the wheel nuts. Non compliance with this instruction can cause damage and rupture to the wheel bolts and distortion to the wheels.

Wheel nuts tightening torque

- Front tyres: 630 N.m \pm 15%
- Rear tyres: 630 N.m \pm 15%

- Check and adjust the tyre pressures if necessary (see: 2 - DESCRIPTION: FRONT AND REAR TYRES).



Check that the air hose is correctly connected to the tyre valve before inflating and keep all persons at a distance during inflation. Respect the recommended tyre pressures given.

NOTE: There is an OPTIONAL wheel toolkit.

A8 - JIB PADS

CLEAN - GREASE

To be carried out every 10 hours during the first 50 hours service, then once at 250 hours.

- Extend the jib completely.
- With a brush, apply a coat of grease (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) on the 4 sides of the telescope(s) (fig. A8).
- Telescope the jib several times in order to spread the coat of grease evenly.
- Remove the surplus of grease.




















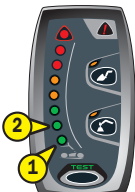If the lift truck is used in an abrasive environment (dust, sand, coal.) use lubricating varnish (MANITOU reference: 483536). Please consult your dealer.

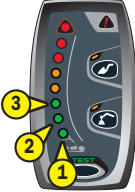


- These tests are essential for checking the correct operation and adjustment of the different components of the device.
- Place the lift truck on flat, level ground with the wheels straight.

! Use the test button  only when requested to do so, performing short presses (less than 1 second) and long presses (5 seconds) as instructed. If in doubt during the test procedure, exit cleanly by short pressing the "BUCKET" MODE  or "SUSPENDED LOAD" MODE button .

Long press on the test button. 	
STAGE 1  <ul style="list-style-type: none"> - An audible beep. - First green led flashing. - Test button lit. 	 <ul style="list-style-type: none"> - Place the lift truck without any attachment, with the jib fully retracted and raised.
 Short press the test button.	<ul style="list-style-type: none"> - One audible beep and progresses to stage 2. TEST NOT OK <ul style="list-style-type: none"> - Two audible beeps and lighting of the fault warning light . - Exit test mode. - Go to stage 4.
STAGE 2  <ul style="list-style-type: none"> - First green led continuously lit. - Second green led flashing. - Test button lit. 	 <ul style="list-style-type: none"> - Lower the jib with the engine running at full revs and the hydraulic control at the maximum setting. Lowering slows until movement is cut-off.
 Short press the test button.	<ul style="list-style-type: none"> - One audible beep and progresses to stage 3. TEST NOT OK <ul style="list-style-type: none"> - Two audible beeps and lighting of the fault warning light . - Exit test mode. - Go to stage 4.
STAGE 3  <ul style="list-style-type: none"> - First and second green leds continuously lit. - Third green led flashing. - Test button lit. 	<ul style="list-style-type: none"> - Lower the jib until the movement is cut-off. - Request the following, in order: a reverse tilt, a forward tilt (dumping) and a telescope extension. None of these 3 movements should be possible.
 Short press the test button.	<ul style="list-style-type: none"> - Conformity of aggravating movement cut-off. - Exit test mode. All the LEDs will light for 2 seconds and an audible beep will be sounded. TEST NOT OK <ul style="list-style-type: none"> - Fault warning light comes on . - Exit test mode. - Go to stage 4.
STAGE 4  <ul style="list-style-type: none"> - The fault warning light remains permanently on until the error is repaired. 	<ul style="list-style-type: none"> - The fault indicator  and a beep indicate a fault. - Press the button  briefly to view the error code. - If there are several error codes, press the button  briefly several times to loop through the error codes. <p>NOTE: A defective fuse can generate several error codes. If this is the case, check the fuses (see: 2 - DESCRIPTION: 10 - FUSES AND RELAYS IN THE CAB)</p>  <ul style="list-style-type: none"> - If error code "A3" is displayed, the problem may be resolved by resetting the longitudinal stability limiter and warning device (see: 3 - MAINTENANCE: G - OCCASIONAL MAINTENANCE). - Contact your dealer, stating the error code or error codes (see following table). <p>NOTE: For the stage 3 test, specify the non-conforming aggravating hydraulic movements, if necessary.</p>

The error codes are indicated by leds A3 to A7 on the warning device and longitudinal stability limiter.

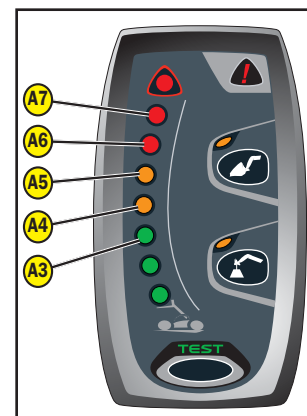

ERROR CODES					
DESIGNATIONS	LEDS				
	A7	A6	A5	A4	A3
Regulating fault (fault detected during the test).	☀	☀	☀	☀	☀
Lowering regulating valve fault.	☀	☀	☀	☀	○
Safety valve cut-off fault (fault detected during the test).	☀	☀	☀	○	☀
Safety valve fault.	☀	☀	☀	○	○
Gauge calibration fault (fault detected during the test). the problem may be resolved by resetting the longitudinal stability limiter and warning device (see: 3 - MAINTENANCE: G - OCCASIONAL MAINTENANCE).	☀	☀	○	☀	☀
Angle calibration fault (fault detected during the test).	☀	☀	○	☀	○
Inclination cut-off valve fault.	☀	☀	○	○	☀
Strain gauge fault.	☀	○	☀	☀	☀
Jib angle sensor fault.	☀	○	☀	☀	○
Telescope or attachment control fault.	☀	○	☀	○	☀
Telescope retracted sensor fault.	☀	○	☀	○	○
Computer earth output fault.	☀	○	○	☀	☀
Aggravating hydraulic movement cut-off disable fault.	☀	○	○	☀	○
Stability indicator fault.	○	☀	☀	☀	○
Electronic handling controller fault.	○	☀	☀	○	☀
Hydraulic control lever control setting fault.	○	☀	☀	○	○
Transmission cut-off output fault.	○	☀	○	☀	☀
Electronic handling controller supply fault.	○	☀	○	○	☀
Telescope retracted sensor fault (fault detected during the test).	○	☀	○	○	○
Jib head electrovalve fault. (OPTION)	○	○	☀	☀	○
Attachment easy hydraulic connection fault button. (OPTION)	○	○	☀	○	☀
Electrovalve attachment hydraulic control and electrical jib provision fault button. (OPTION)	○	○	☀	○	○
Attachment forced operation indicator fault. (OPTION)	○	○	○	☀	☀
Electric handling controller 10V output fault.	○	○	○	☀	○
Forced operation button fault. (OPTION)	○	○	○	○	☀

B - EVERY 50 HOURS SERVICE

Carry out the operations described previously as well as the following operations.

B1 - DRY AIR FILTER CARTRIDGE

CHECK - CLEAN

In case of use in a heavily dust laden atmosphere, there are pre-filtration cartridges (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS). Also, the checking and cleaning periodicity of the cartridge must be reduced.

⚠ *If the clogging indicator light comes on, this operation must be carried out as quickly as possible (1 hour maximum). The cartridge must not be cleaned more than seven times, after which the cartridge must be changed. Never use the lift truck without an air filter or with a damaged air filter.*

- For the disassembly and reassembly of the cartridge, see: 3 - MAINTENANCE: D3 - DRY AIR FILTER CARTRIDGE.
- Clean the filter cartridge using a compressed air jet (max. pressure 3 bar) directed from the top to the bottom and from the inside towards the outside at a minimum distance of 30 mm from the cartridge wall.
- Cleaning is completed when there is no more dust on the cartridge.

⚠ *Respect the safety distance of 30 mm between the air jet and the cartridge to avoid tearing or making a hole in the cartridge. The cartridge must not be blown anywhere near the air filter box. Never clean the cartridge by tapping it against a hard surface. Your eyes must be protected during this intervention.*

- Clean the cartridge seal surfaces with a damp, clean lint-free cloth and grease with a silicone lubricant (MANITOU reference: 479292).
- Check visually the outer condition of the air filter and its mounts. Verify the condition of the hoses and their mounts also.

⚠ *Never clean the dry air filter cartridge by washing it in liquid. Do not clean by any means the safety cartridge located inside the filter cartridge, change it for a new one if it is clogged or damaged.*




B2 - RADIATOR CORES

CLEAN

⚠ *In a polluting atmosphere, clean the radiator cores every day. Do not use a water jet or high-pressure steam as this could damage the radiator fins.*

- Open the I.C. engine bonnet.
- If necessary, clean the suction grid on the engine hood.
- Using a soft cloth, clean the radiator cores in order to remove as much dirt as possible.
- Undo the screw 1 (fig. B2/1) of the fuel radiator and pivot for easier cleaning.
- Clean the cores using a compressed air jet aimed in the same direction as the cooling air flow (fig. B2/1).
- Clean with the fan running for best results.

NOTE: An OPTIONAL straw defector and self-cleaning fan can also be fitted.

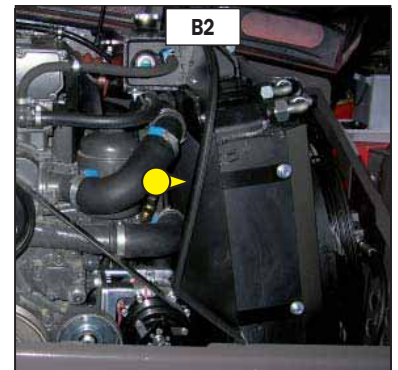

B3 - CONDENSER CORE (OPTION AIR CONDITIONING)

CHECK - CLEAN

⚠ *In a polluting atmosphere, clean the radiator core every day. Do not use a water jet or high-pressure steam as this could damage the condenser fins.*

- Visually check whether the condenser (fig. B3) is clean and clean it if necessary.
- Clean the condenser using a compressed air jet aimed in the same direction as the air flow.

NOTE: So as to enhance the cleaning, carry out this operation with the fans running.






B4 - TRANSMISSION UNIVERSAL JOINT

GREASE

Clean and lubricate the following points with grease (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) and remove the surplus of grease.

- 1 - Lubricators of the universal joint I.C. engine/Angle gear box (2 lubricators) (fig. B4/1).
- 2 - Lubricators of the universal joint Gear box/Front axle (3 lubricators) (fig. B4/2).
- 3 - Lubricators of the universal joint Gear box/Rear axle (3 lubricators) (fig. B4/3).






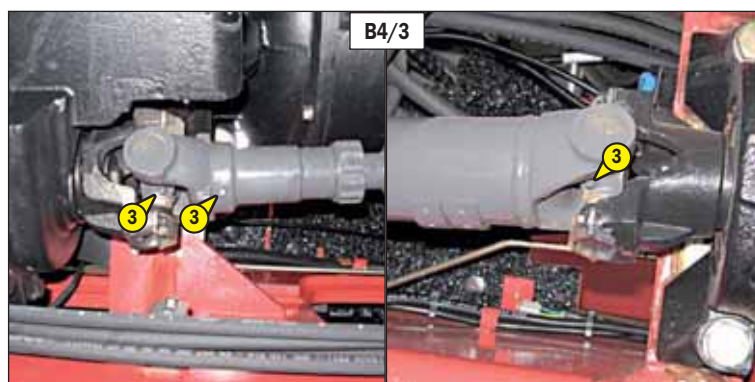
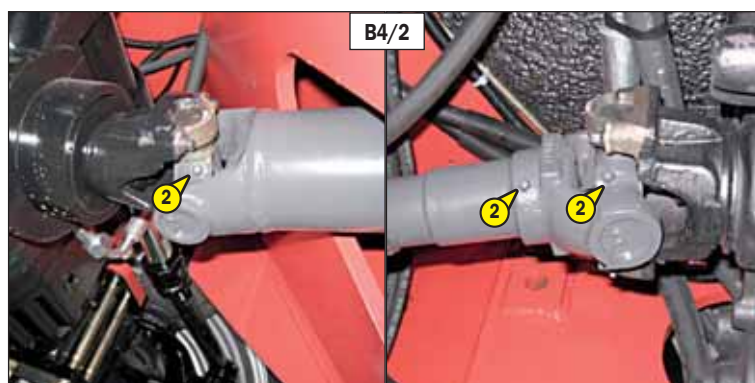
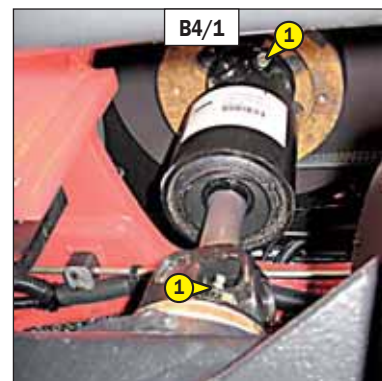


To be carried out weekly, if the lift truck has been operated for less than 50 hours during the week.

! *In the event of prolonged use in an extremely dusty or oxidising atmosphere, reduce this interval to 10 working hours or every day.*

Clean and lubricate the following points with grease (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) and remove the surplus of grease.

- 1 - Lubricators of the jib axle (2 lubricators) (fig. B5/1).
- 2 - Lubricators of the carriage axle (2 lubricators) (fig. B5/2).
- 3 - Lubricator of the tilt cylinder foot axle (1 lubricator) (fig. B5/3).
- 4 - Lubricator of the tilt cylinder head axle (1 lubricator) (fig. B5/4).
- 5 - Lubricators of the carriage connecting rod axle (3 lubricators) (fig. B5/2 and B5/5).
- 6 - Lubricators of the lifting cylinder foot axle (2 lubricators) (fig. B5/6).
- 7 - Lubricators of the lifting cylinder head axle (2 lubricators) (fig. B5/7).
- 8 - Lubricators of the compensation cylinder foot axle (2 lubricators) (fig. B5/8).
- 9 - Lubricators of the compensation cylinder head axle (2 lubricators) (fig. B5/9).

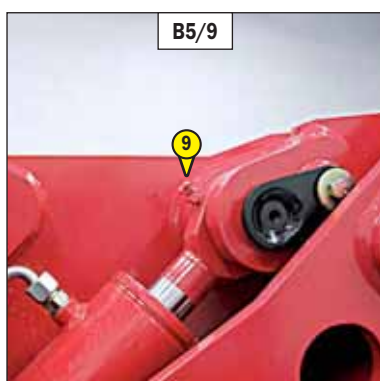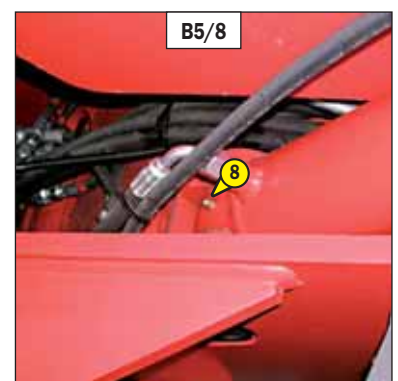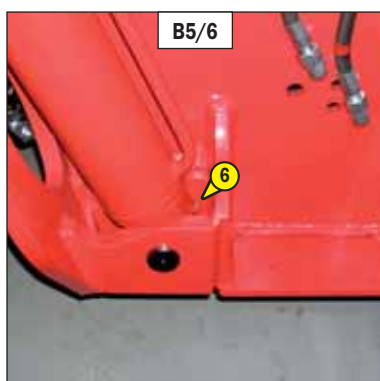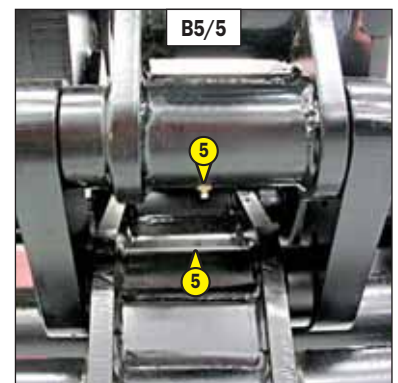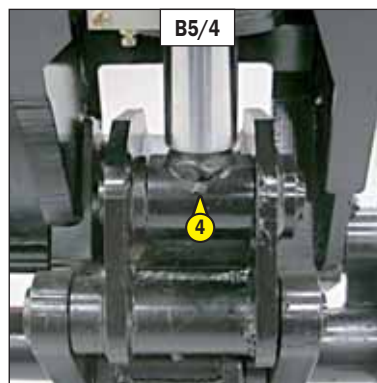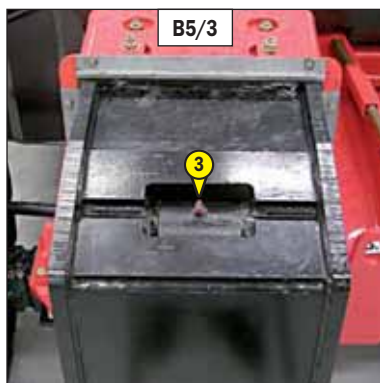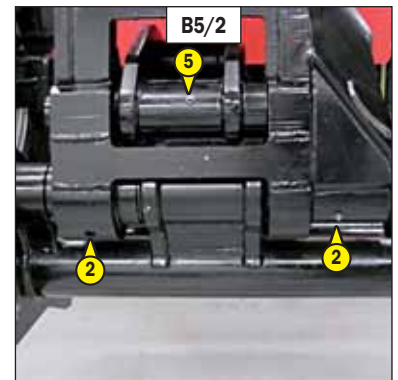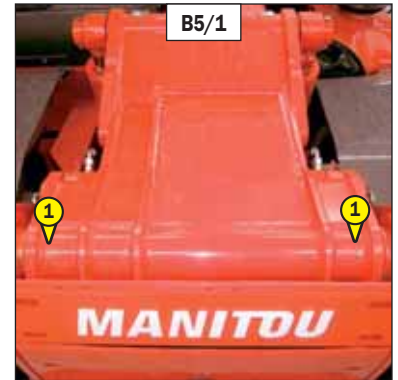

B6 - HYDRAULIC OIL LEVEL

CHECK

Place the lift truck on level ground with the I.C. engine stopped, and the jib retracted and lowered as far as possible.


- Refer to gauge 1 (fig. B6).
- The oil level is correct when it is at the level of the red point.
- If necessary, add oil (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL).
- Open the access panel for hydraulic oil filling.
- Remove cap 2 (fig. B6).
- Add oil through filler port 3 (fig. B6).



Use a clean funnel and clean the underside of the oil drum before filling.

- Put the cap back and close the access panel for hydraulic oil filling.
- Check visually that there is no leakage in the tank and pipes.

Always maintain the oil level at maximum as cooling depends on the oil flowing through the tank.

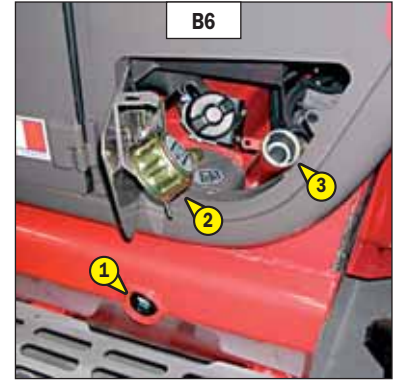

B7 - BRAKE OIL LEVEL


CHECK

Place the lift truck on level ground.

- Loosen screw 1 (fig. B7/1) and remove the braking oil tank access panel 2 (fig. B7/1).
- The level is correct when it is at the MAXI level on the tank.
- If necessary, add oil (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) by the filler port 3 (fig. B7/2).
- Check visually that there is no leakage in the tank and pipes.




If the braking oil level is abnormally low, consult your dealer.

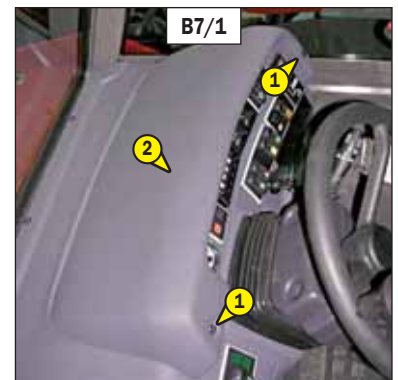

B8 - WINDSCREEN WASHER LIQUID LEVEL

CHECK


- Remove the filler cap 1 (fig. B8).
- Check visually the level.
- If necessary add windscreen washer liquid (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) by filler port 2 (fig. B8).

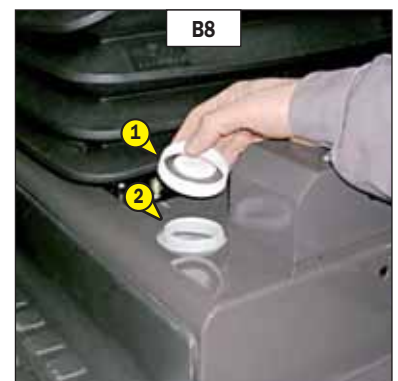

B9 - CAB DOOR

GREASE


Clean and lubricate the points 1 (4 lubricators) (fig. B9) with grease (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) and remove the surplus of grease.

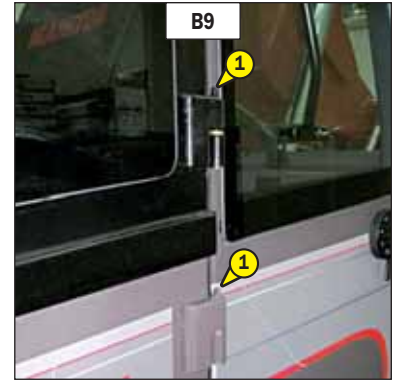

B10 - AIR CONDITIONING FILTER (OPTION AIR CONDITIONING)

CLEAN

- Lift up protective casing 1 (fig. B10).
- Lift out cabin air conditioning filter 2 (fig. B10).
- Clean the filter with a compressed air jet.
- Check its condition and change if necessary (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS).
- Refit the filter and protective casing.

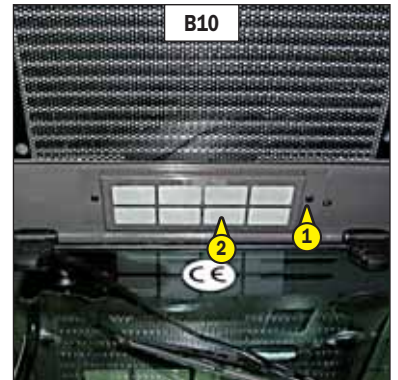

B11 - FRONT AND REAR WHEEL REDUCER PIVOTS

GREASE


Clean and lubricate the points 1 (8 lubricators) (fig. B11) with grease (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) and remove the surplus of grease.



B12 - REAR AXLE OSCILLATION

GREASE

Clean and lubricate the points 1 (2 lubricators) (fig. B13) with grease (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) and remove the surplus of grease.

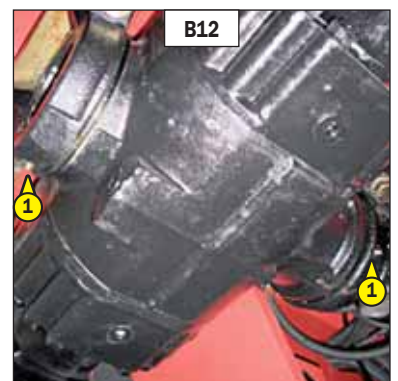

C - EVERY 250 HOURS SERVICE

Carry out the operations described previously as well as the following operations.


C1 - POLY-V RIBBED BELT TENSION

CHECK - ADJUST

Open the engine hood and remove crank case 1 (Fig.C1).


Check for the presence of damage on ribbed belt 2 (Fig.C1/2) moving one section at a time; to carry out this check:

- Make a mark with chalk on the ribbed belt;
- Make the engine run in bursts or move the ribbed belt by means of a rotation device up to the chalk mark;
- Replace ribbed belt 2 (Fig.C1/2) if one of the following types of damage mentioned are present (Fig.C1/3).

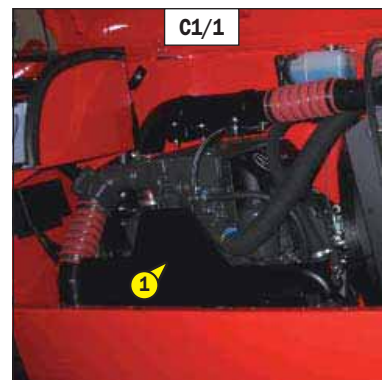

The damage (Fig.C1/3)

- 1 – New belt (comparison; ribbing)
- 2 – Wear on the sides: wedge-shaped ribbing
- 3 – Frame visible at the bottom of the ribbing
- 4 – Ribbing broken
- 5 – Transverse cracks in different ribs
- 6 – Rubber nodules at the bottom of the belt
- 7 – Dirt or rubble deposits
- 8 – Ribbing detached from the bottom of the belt
- 9 – Wires of the frame torn on the sides
- 10 – Outer wires of the frame frayed
- 11 – Transverse cracks on the back
- 12 – Transverse cracks in different ribs

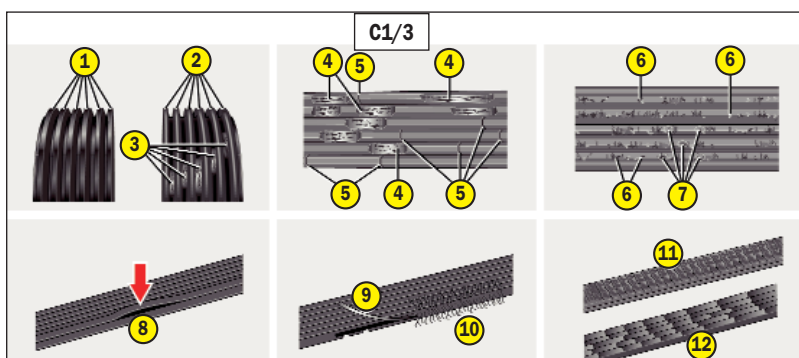


For assembling and disassembling the ribbed belt, see point **D3**.

C2 – AIR CONDITIONING FILTER (OPTION AIR CONDITIONING)

CHANGE

- Lift up protective casing 1 (fig. C2).
- Lift out the air conditioning filter 2 (fig. C2) and fit new replacement filter (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS).
- Refit the protective casing.

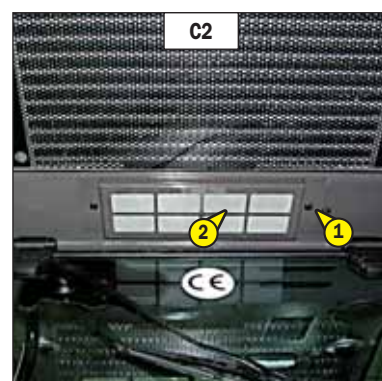



C3 - COMPRESSOR BELT TENSION (OPTION AIR CONDITIONING)

CHECK - ADJUST

- Open the I.C. engine bonnet.
- Unscrew the fastening screws 1 (fig. C3/1).
- Lay down the protective guard 2 (fig. C3/1).
- Check the belt for signs of wear and cracks and change if necessary (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS).
- Check the belt tension between the pulleys of the crankshaft and of the compressor.
- Under a normal pressure exerted with the thumb (45 N), the belt should move approximately 10 mm.
- Carry out adjustments if necessary.
- Untighten screws 3 (fig. C3/2) with two to three thread turns.
- Swivel the compressor assembly so as to obtain the belt tension required.
- Retighten screws 3 (fig. C3/2).
- Put the protective guard back 2 (fig. C3/1).



If the compressor belt has to be changed, check the tension again after the first 20 hours of operation.

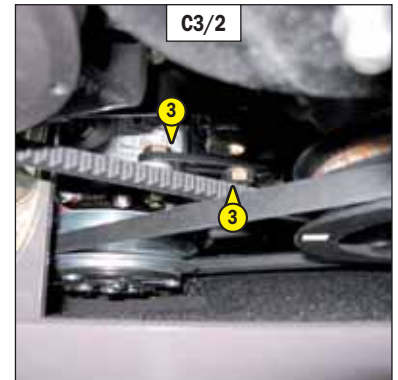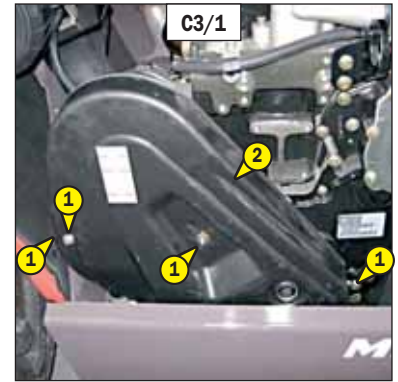

C4 - ANGLE GEAR BOX LEVEL

CHECK

Park the lift truck on level ground with the jib raised and the I.C. engine stopped.


- Remove the plastic cap 1 (fig. C4).
- Remove level plug 2 (fig. C4).
- Wipe the dipstick and check the correct level between the MINI and MAX. marks.
- If necessary, add oil by the filler port 3 (fig. C4) (see: 3 - MAINTENANCE: LUBRICANT AND FUEL).



C5 - AIR CONDITONING FILTER (OPTION AIR CONDITIONING)

CHANGE

- Lift up protective casing 1 (fig. C5).
- Lift out the air conditioning filter 2 (fig. C5) and fit new replacement filter (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS).
- Refit the protective casing.

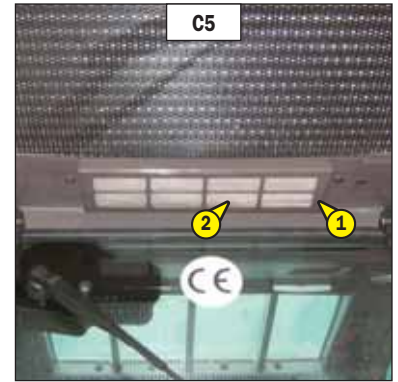


C6 - FRONT AND REAR AXLE DIFFERENTIAL OIL LEVEL

CHECK

Place the lift truck on level ground with the I.C. engine stopped.

- Remove level plug 1 (fig. C6). The oil should be flush with the edge of the hole.
- If necessary, add oil (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) by the filler port 2 (fig. C6).
- Replace and tighten the level plug 1 (fig. C6) (tightening torque 34 to 49 N.m).

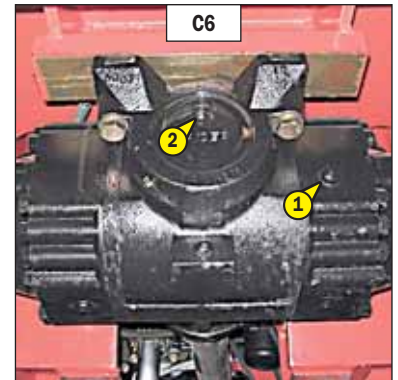


C7 - FRONT AND REAR WHEELS REDUCERS OIL LEVEL

CHECK

Place the lift truck on level ground with the I.C. engine stopped.

- Check the level on each front wheel reducer.
- Place level plug 1 (fig. C7) in the horizontal position.
- Remove the level plug, the oil should be flush with the edge of the hole.
- If necessary, add oil (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) by the same hole.
- Replace and tighten the level plug 1 (fig. C7) (tightening torque 34 to 49 N.m).
- Repeat this operation on each rear wheel reducer.

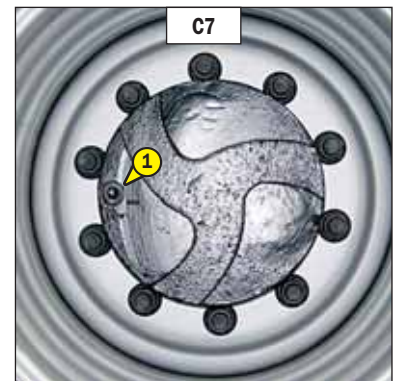

D - EVERY 500 HOURS SERVICE

Carry out the operations described previously as well as the following operations.

D1 - I.C. ENGINE OIL

DRAIN

D2 - I.C. ENGINE OIL FILTER

CHANGE

Change the oil only with the engine at operating temperature.

ENGINE OIL FILTER

Unscrew the threaded oil filter cap using a 36mm pipe wrench. Drain the oil out of the filter casing.

Remove threaded cap "1" (fig. D2/1) together with oil filter cartridge "3" (Fig. D2/1) and release cartridge "3" (Fig. D2/1) by pressing on the sides of the lower edge.

Make sure no foreign bodies enter the filter casing. The filter casing must not be wiped with cloth or anything similar.


Change sealing ring "2" (Fig. D2/1) present on threaded cap "1" (Fig. D2/1).

Grease sealing ring "2" slightly (Fig. D2/1).

Introduce the new cartridge "3" (fig. D2/1) in threaded cap "1" (Fig. D2/1) and press to fit it in place.

Screw the threaded cap on the oil filter casing and lock it tight.

Tightening torque: 40 Nm.

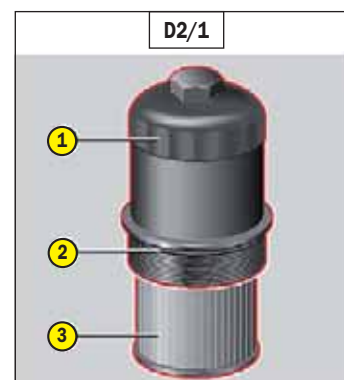

DRAIN THE ENGINE OIL

Place a suitable container under the oil drainage screw "4" (fig. D2/2) present on the lower part of the oil cup.

Unscrew the drainage screw carefully and allow the oil to flow out.

The engine oil and the filter must be disposed off in compliance with the legal prescriptions applicable in the place where the engine is used.

Refit the drainage screw with a new sealing ring and tighten it.

Tightening torque:

M20 x 1.5 – 60 Nm

M26 x 1.5 – 85 Nm



CHANGE THE ENGINE OIL


Pour fresh oil into the engine through filler plug "5" (fig. D2/3), until the level reaches the max. notch on level rod "6" (Fig. D2/3).

Start up the engine at minimum speed and observe the oil low pressure indicator.

Keep the engine running at minimum speed until the low pressure indicator switches off. Switch off the engine immediately if the low pressure indicator does not switch off after about 10 seconds and check for the cause of the oil pressure failure in the engine.

Check the oil filter seal and the discharge screw seal.

About 5 minutes after switching off the engine, check the oil level and, if necessary, top up with oil up to the max. notch on level rod "6" (Fig. D2/3).

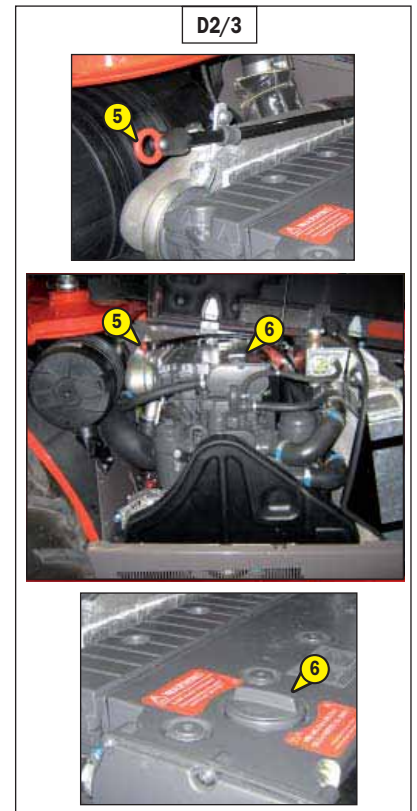

D3 - POLY-V RIBBED BELT

REPLACER

Replace the ribbed V-belt if one of the following types of damage illustrated is present (C1/3).

Take great care while disassembling and assembling the ribbed V-belt, keeping the fingers well out of the area between the pulley and the belt.

Insert release lever "2" (fig. D3) using a 17 mm wrench on the hex head screw of the belt tightener roller "1" (Fig. D3) .

Tip the belt-tightener roller upwards and remove the ribbed V-belt. Reposition the belt-tightener device.

Check to make sure the belt-tightener device and the pulleys are in perfect condition (for example, that there are no damaged bearings on the belt-tightener device, the belt-tightener roller and the return rollers and that the pulley profile is not worn); replace the components if necessary.

Apply the ribbed V-belt (new) on all the pulleys, except on the belt-tightener roller (observe Fig. D3 which shows the route of the ribbed V-belt).

Rise the belt-tightener roller by means of a lever, apply the ribbed V-belt and then bring the belt-tightener roller backwards.

Remove the release lever and check to ensure the ribbed V-belt is lodged correctly on the pulleys.

Route of the ribbed V-belt (Fig. D3):

- 3 Alternator
- 4 Belt-tightener roller
- 5 Cooling liquid pump
- 6 Engine shaft



D4 - VALVE CLEARANCE

CHECK - ADJUST

Operation to be performed the first time on reaching 500 hours of service, **periodically every 1500 hours of service.**



Adjust the valve clearance with the engine cold.



Disassembling/assembling the cover of the head end "1" (Fig. D4).

If the head covers are excessively smeared, wipe and then remove them.

Disassembly:

Remove the engine vent tube "6" (fig. D4/1) from the cover of the cylinders head "2" (Fig. D4/1).

Unscrew and remove the hollow, hex head screw "3" (fig. D4/1) from the cover of the cylinders head together with sealing ring "4" (Fig. D4/1).

Remove the head cover "2" (Fig. D4/1).


Assembly:

Clean the sealing surfaces of the cylinder heads and relative cover "2" (Fig. D4/1).

Always replace gasket "5" (fig. D4/1) between the cover of the cylinder head and the head.


Fit the cylinders head cover "2" (Fig. D4/1).

Insert the hollow, hex head screw "3" (Fig. D4/1) with new sealing rings "4" (Fig. D8/1) and tighten: tightening torque: 30 Nm.

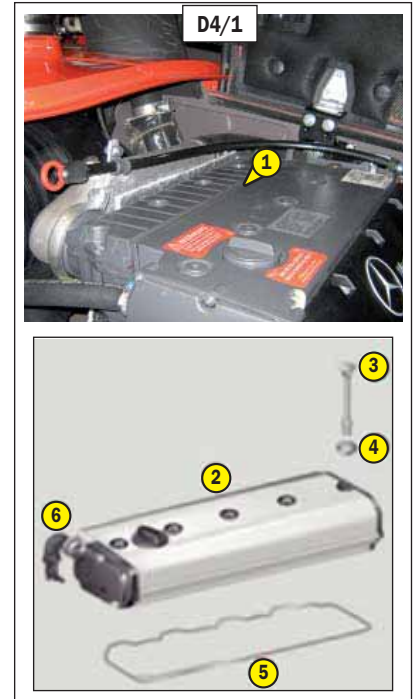

Layout of cylinders and valves (Fig. D4/2)

- ⇨ = suction valve
⇐ = discharge valve
X = handwheel side

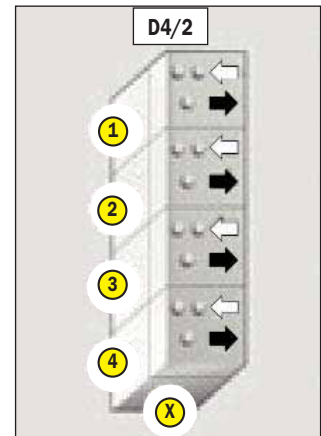

Checking/adjusting the clearance of the valves

Measure the valve clearance between the rocker arm and the valve stem (discharge valve) or the valves bridge (suction valve) using a thickness gauge (arrow).

The thickness gauge must be able to pass through with slight resistance.

Valve clearance:


- suction valve = 0.40 mm
discharge valve = 0.60 mm

To adjust the valve clearance, slacken lock nut "1" (fig. D4/3).

Adjust the valve clearance by turning adjuster screw "2" (Fig. D4/3).

Retighten the lock nut. Tightening torque: 25 Nm.


Check the valve clearance again and correct it if necessary.

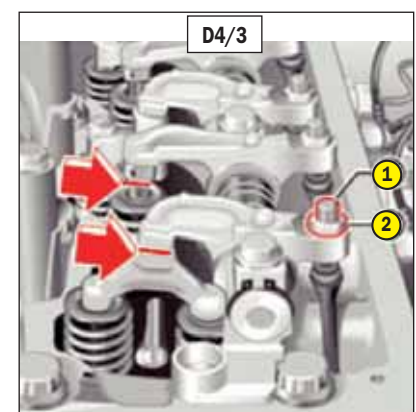

D5 - FUEL PREFILTER CARTRIDGE

NETTOYER


- Open the tank cap to discharge the excess pressure inside the system.
 - Clean the outside of the fuel prefilter, after taking care to cover the ducts, hoses and cables which may be present under the prefilter.
 - Unscrew the threaded cap "1" (fig. D5) and remove it from the filter casing together with filter cartridge "2" (Fig. D5).
 - Clean the threaded cap "1" (Fig. D5) and filter cartridge "2" (Fig. D5).
 - Replace the filter cartridge if it is excessively dirty or damaged.
 - Check sealing ring "3" (Fig. D5) for the threaded cap and replace it, if necessary.
 - Grease sealing ring "3" slightly (Fig. D5).
 - Insert the filter cartridge in the threaded cap and screw the latter in the filter casing.
- Tightening torque: 25 Nm.

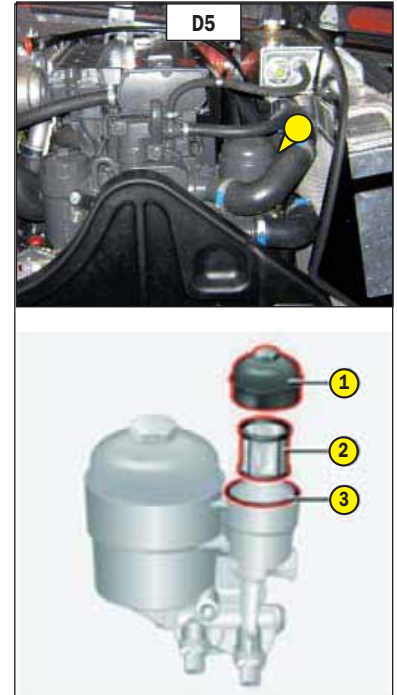

D6 - FUEL FILTER CARTRIDGE

REPLACER

- Open the tank cap to prevent overpressure from building up inside.
- Unscrew threaded cap "1" (Fig. D6) of the fuel filter using a pipe wrench.
- Remove threaded cap "1" (Fig. D6) together with cartridge "3" (Fig. F3) of the filter from filter casing "5" (Fig. D6). Drain out the fuel.
- Remove the threaded cap "1" (Fig. D6) with filter cartridge "3" (Fig. D6).
- Release filter cartridge "3" (Fig. D6) from the retainer by pressing on the sides of the lower edge.
- Remove the cup containing the impurities "4" (fig. D6) from filter casing "5" (fig. D6) holding it by the tabs.
- The filter casing must never contain water or impurities.
- Clean the threaded cap "1" (Fig. D6) and cup for collecting impurities "4" (Fig. D6).
- Replace sealing ring "2" (Fig. D6).
- Fit the new filter cartridge "3" (Fig. D6) back in place in threaded cap "1" (Fig. D6).
- Grease sealing ring "2" (Fig. D6) and the filter cartridge gaskets slightly.
- Insert the cup containing the impurities "4" (fig. D6) in filter casing "5" (Fig. D6) ensuring it is fitted in the correct position.
- Screw and tighten the threaded cap with the filter cartridge.
- Tightening torque: 25 Nm.
- Start up the engine and run it for about one minute to bleed the supply system.
- With the engine switched on, check the fuel filter seal.

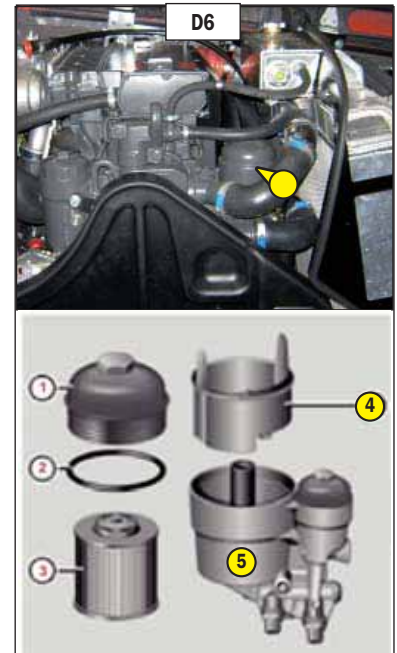


D7 - DRY AIR FILTER CARTRIDGE

CHANGE

In case of use in a heavily dust laden atmosphere, there are pre-filtration cartridges, see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS. Also, the checking and cleaning periodicity of the cartridge must be reduced (up to 250 hours in a heavily laden dust atmosphere and with pre-filtration).

⚠ Change the cartridge in a clean location, with the I.C. engine stopped. Never operate the lift truck with the air filter removed or damaged.


- Open the I.C. engine bonnet.
- Loosen the bolts and remove cover 1 (fig. D7).
- Gently remove the cartridge 2 (fig. D7), taking care to avoid spilling the dust.
- Leave the safety cartridge in place.
- The following parts must be cleaned with a damp, clean lint-free cloth.
 - The inside of the filter and cover.
 - The inside of the filter inlet hose.
 - The gasket surfaces in the filter and in the cover.
- Check pipes and connections between the air filter and the I.C. engine and the connection and state of the clogging indicator on the filter.
- Before mounting check the state of the new cartridge (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS).
- Introduce the cartridge into the filter axis and push it in, pressing the edges and not the middle.
- Reassemble the cover, guiding the valve downwards.

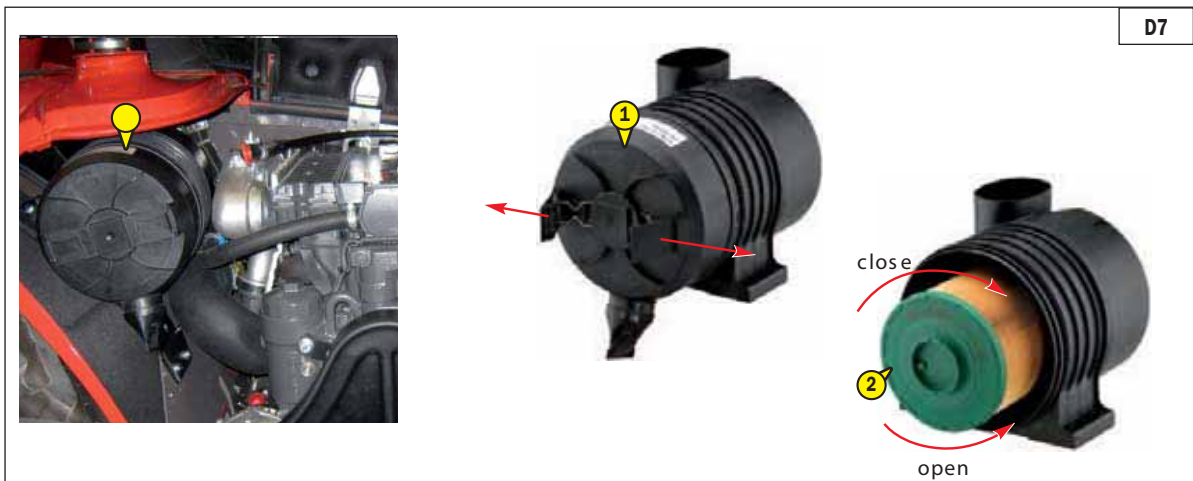

D8 - FUEL PREFILTER CARTRIDGE WITH WATER SEPARATOR

REPLACER

- Turn knob "1" (Fig. D7) clockwise to close the fuel flow during cartridge replacement.
- Open drainage valve "2" (Fig. D7) and bleed screw "3" (Fig. D7) and collect the water-fuel mixture flowing out of the filter element in a container.
- Unscrew and remove filter cartridge "4" (Fig. D7).
- Unscrew and remove the separator container "5" (fig. D7) from the filter cartridge and clean or replace it, as required.
- Reassemble by following the procedure described in reverse order, tightening elements "4" and "5" (fig. D7) manually on the filter body.
- In the assembly phase, use new lubricated sealing rings.
- Close drainage valve "2" (Fig. D7).
- Turn knob "1" (Fig. D7) anticlockwise to open the fuel flow.
- Press the small hand pump "6" (Fig. D7) repeatedly until the fuel flows out through the vent hole "3" (Fig. D7).
- Then close venting screw "3" (Fig. D7).
- Start up the engine and keep it running at minimum for about one minute to let out the air bubbles automatically from the supply system.
- Check for fuel leaks from the prefilter.- S'assurer qu'il n'y a pas de fuites de carburant par le pré-filtre.

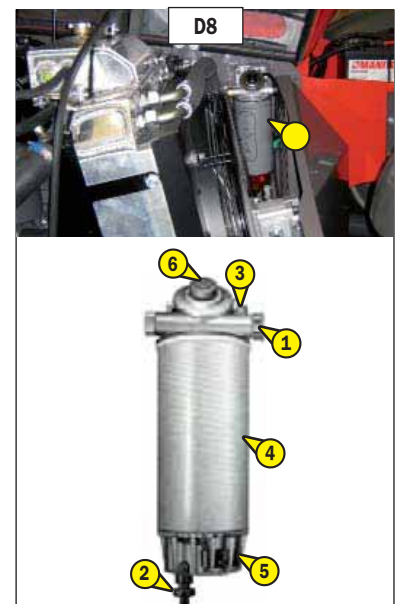

D9 - GEAR BOX OIL FILTER


CHANGE

- Remove the cover plate 1 (fig. D9/1).
- Unscrew and discard gear box oil filter 2 (fig. D69/2).
- Carefully clean the filter head with a clean, lint-free cloth.
- Slightly lubricate the new seal and fit the seal on the filter.
- Fill up the new gear box oil filter (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS) with oil (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL).
- Refit the filter, making sure that the seal is correctly positioned and tightened.



Tighten the gear box oil filter by hand pressure only and lock the filter in place by a quarter turn.

- Put back the cover plate 1 (fig. D9/1).

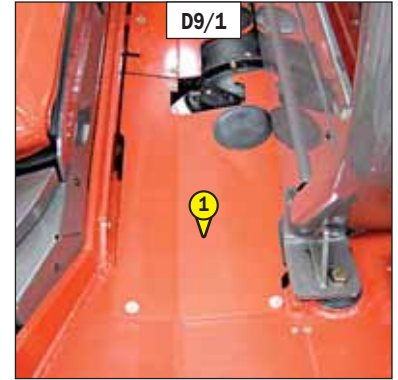

D10 - HYDRAULIC RETURN OIL FILTER CARTRIDGE



CHANGE

Stop the I.C. engine and remove the pressure from the circuits by acting on the hydraulic controls.



Thoroughly clean the outside of the filter and its surroundings before any intervention in order to prevent any risk of polluting the hydraulic circuit.

- Remove the shroud 1 (fig. D10/1).
- Unscrew the locking screws of the cover 2 (fig. D10/2).
- Remove the hydraulic return oil filter cartridge 3 (fig. D10/2), and fit new replacement cartridge (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS).
- Make sure that the cartridge is correctly positioned and refit cover 2 (fig. D10/2).
- Perform the operation on both filters.
- Put back the shroud 1 (fig. D10/1).

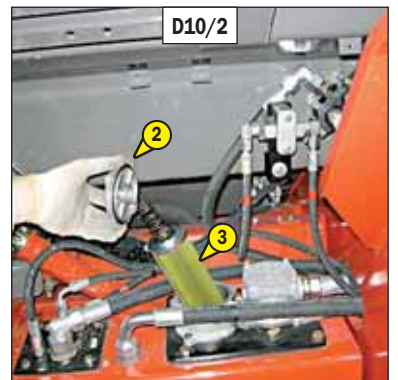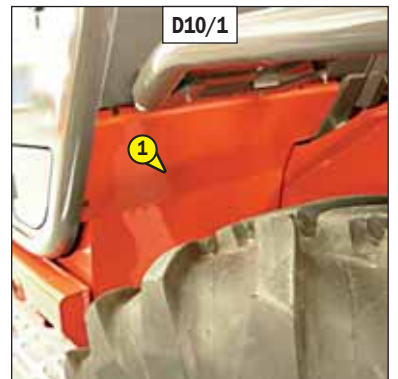

D11 - FRONT AND REAR AXLE DIFFERENTIAL OIL


DRAIN

Place the lift truck on level ground with the I.C. engine stopped and the differential oil still warm.



Dispose of the drain oil in an ecological manner.


- Place a container under drain plugs 1 (fig. D11) and unscrew the plugs.
- Remove level plug 2 (fig. D8) and filler plug 3 (fig. D11) in order to ensure proper emptying.
- Refit and tighten drain plugs 1 (fig. D8) (tightening torque 34 to 49 N.m).
- Fill up with oil (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) through filler port 3 (fig. D11).
- The level is correct when the oil level is flush with the edge of port 2 (fig. D11).
- Check for any possible leaks at the drain plugs.
- Refit and tighten level cap 2 (fig. D11) (tightening torque 34 to 49 N.m) and filler port 3 (fig. D11) (tightening torque 34 to 49 N.m).
- Repeat this operation for the rear axle differential.

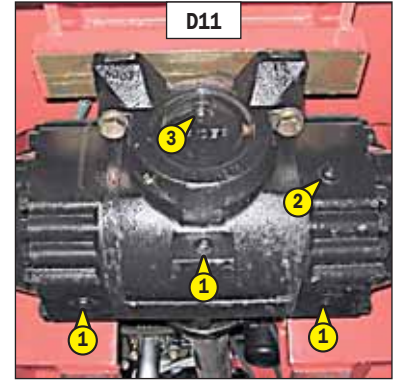

D12 - CLEANFIX COMPRESSOR FILTER (OPTION)

CHANGE

- Open the I.C. engine bonnet.
- Remove clip 2 (fig. D12).
- Replace filter 3 (fig. D12) with a new one (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS) and correctly refit clip 2 (fig. D12).

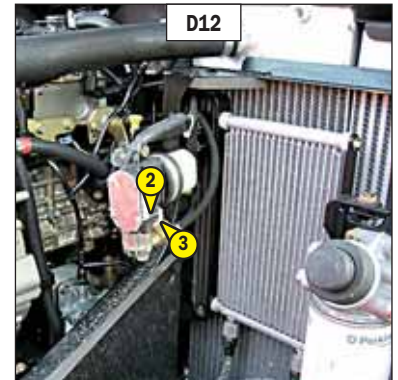

E - EVERY 1000 HOURS SERVICE

Carry out the operations described previously as well as the following operations.

E1 - FUEL TANK

CLEAN

! While carrying out these operations, do not smoke or work near a flame.



Place the lift truck on level ground with the I.C. engine stopped.

- Inspect the parts susceptible to leaks in the fuel circuit and in the tank.
- In the event of a leak, contact your dealer.

! Never try to carry out a weld or any other operation by yourself, this could provoke an explosion or a fire.

Place a container under drain plug 1 (fig. E1/1) and unscrew the plug.

- Open the access panel for hydraulic oil filling.
- Remove cap 2 (fig. E1/2).
- Let the fuel flow and clean with ten liters of clean fuel by filler port 3 (fig. E1/2).
- Refit and tighten drain plug 1 (fig. E1/1) (tightening torque 29 to 39 N.m).
- Fill the fuel tank with clean diesel filtered through the filler port.
- Refit the filling cap.
- If necessary, bleed the fuel circuit (see: 3 - MAINTENANCE: G1 - FUEL SYSTEM).

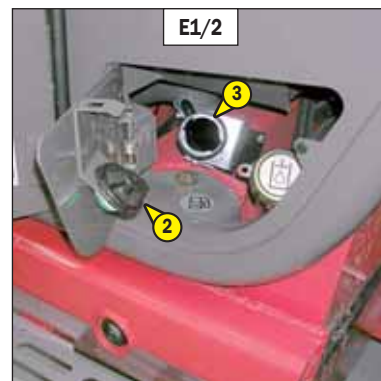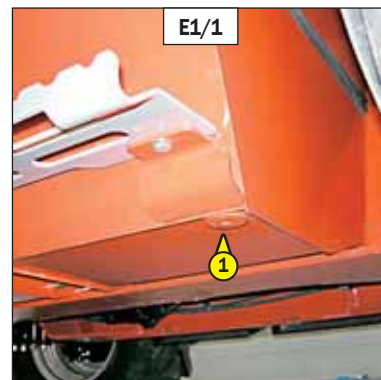


E2 - SAFETY DRY AIR FILTER CARTRIDGE

CHANGE

- For the disassembly and reassembly of the cartridge, see: 3 - MAINTENANCE: D3 - DRY AIR FILTER CARTRIDGE.
- Gently remove the dry air filter safety cartridge 1 (fig. E2), taking care to avoid spilling the dust.
- Clean the gasket surface on the filter with a damp, clean lint-free cloth.
- Before mounting check the state of the new safety cartridge (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS).
- Introduce the cartridge into the filter axis and push it in, pressing the edges and not the middle.

NOTE: The periodicity for changing the safety cartridge is given for information only. The safety cartridge must be changed for every two changes of the air filter cartridge.

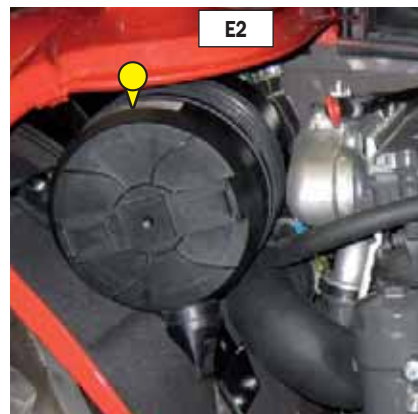

E3 - GEAR BOX OIL

DRAIN

E4 - GEAR BOX SUMP STRAINER

CLEAN

Place the lift truck on level ground with the I.C. engine stopped, the gear box oil still warm.

DRAINING THE OIL

- Place a container under drain plug 1 (fig. E3/1) and under cover 2 (fig. E3/1) and unscrew the drain plug.
- Remove cover plate 3 (fig. E3/2).
- Remove dipstick 4 (fig. E3/3) and unscrew filler cap 5 (fig. E3/3) in order to ensure that the oil is drained properly.






Dispose of the drain oil in an ecological manner.

CLEANING THE STRAINER

- Remove cover 2 (fig. E3/1) and set aside the O-ring joint and sealing washer.
- Allow the rest of the oil to drain away.
- Remove and clean the strainer using a compressed air jet.
- Clean the magnetic section on the plate.
- Refit the assembly and tighten up plate 2 (fig. E3/1) (tightening torque 18 to 31 N.m).

FILLING UP THE OIL

- Refit and tighten drain plug 1 (fig. E3/1) (tightening torque 34 to 54 N.m).
- Fill up with oil (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) by filler port 5 (fig. E3/3) and refit the filler cap.
- Start the I.C. engine and let it run for a few minutes.
- Check any possible leaks from the drain plug or cover.
- Stop the I.C. engine, and within 5 minutes of the I.C. engine being stopped, check on the dipstick 4 (fig. E3/3) the correct level between the two MIN and MAX. marks.
- Top up the level if necessary.
- Refit the shroud 3 (fig. E3/2).

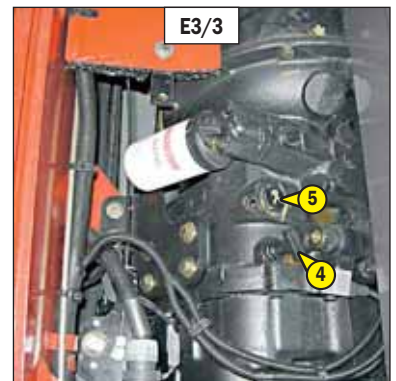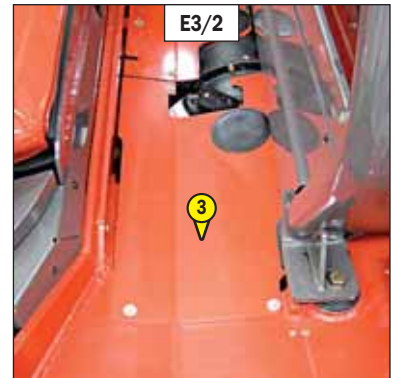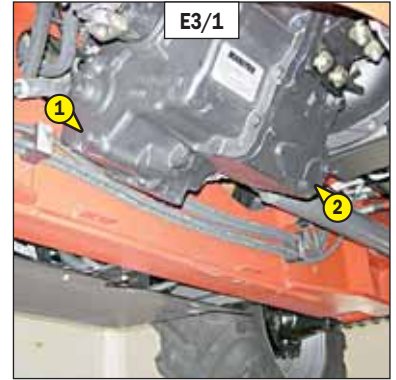

E5 - ANGLE GEARBOX OIL

DRAIN


Place the lift truck on level ground with the I.C. engine stopped, the angle gear box oil still warm.

- Place a container under drain plug 1 (fig. E5/1) and unscrew the plug.
- Remove the plastic cap 2 (fig. E5/2).
- Remove dipstick 3 (fig. E5/2) and unscrew filler cap 4 (fig. E5/2) in order to ensure that the oil is drained properly.



Dispose of the drain oil in an ecological manner.

- Refit and tighten drain plug 1 (fig. E5/1) (tightening torque 20 to 29 N.m).
- Fill up with oil (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) by filler port 4 (fig. E5/2) and refit the filler cap.
- Check the correct level between the MIN and MAX marks on dipstick 3 (fig. E5/2).
- Check for any possible leaks at the drain plug.

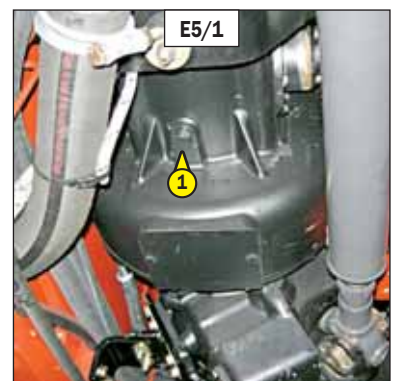

E6 - HYDRAULIC OIL

DRAIN

E7 - SUCTION STRAINER FOR HYDRAULIC OIL TANK

CLEAN

E8 - FILTER CAP FOR HYDRAULIC OIL TANK

CHANGE

E9 - DISTRIBUTOR CONTROL HEAD FILTER

CHANGE

Place the lift truck on level ground with the I.C. engine stopped and telescope jib retracted and lowered as far as possible.

! Before any intervention, thoroughly clean the area surrounding the drain plugs and the suction cover on the hydraulic tank.

DRAINING THE OIL

- Place a container under drain plug 1 (fig. E6/1) and unscrew the plug.
- Open the access panel for hydraulic oil filling.
- Remove filler cap 2 (fig. E6/2) in order to ensure that the oil is drained properly.

! Dispose of the drain oil in an ecological manner.

CLEANING THE STRAINER

- Remove the shroud 3 (fig. E6/3).
- Remove the suction cover 4 (fig. E6/4).
- Remove and clean the strainer using a compressed air jet, check its condition and replace if necessary (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS).
- Refit the strainer and the suction cover 4 (fig. E6/4) making sure the seal is in the correct position.

REPLACING THE DISTRIBUTOR CONTROL HEAD FILTER

- Remove the half clamp 5 (fig. E6/4).
- Undo the two couplings 6 (fig. E6/5) and replace the filter 7 (fig. E6/5).

! Be careful to mount the new filter 7 (fig. E6/5) in the same direction as the arrow.

- Refit the half clamp 5 (fig. E6/4) and the protective cover 3 (fig. E6/3).

FILLING UP THE OIL

- Clean and refit drain plugs 1 (fig. E6/1) (tightening torque 29 to 39 N.m).
- Fill up with oil (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) by filler port 8 (fig. E6/2).






! Use a clean container and funnel and clean the underside of the oil drum before filling.

- Observe the oil level on dipstick 9 (fig. E6/2), the oil level should be at the level of the red point.
- Check for any possible leaks at the drain plugs.
- Replace filler plug 2 (fig. E6/2) with a new filler plug (see: 3 - MAINTENANCE: FILTERS CARTRIDGES AND BELTS).

HYDRAULIC CIRCUIT DECONTAMINATION

This should be carried out by your dealer after each oil change.

The hydraulic oil used in the circuit must be at least equal in quality to class 8 (according to NAS 1638). Your dealer will be able to clean the hydraulic circuit using an external unit and check the quality of the oil in order to ensure the long life of hydraulic components and particularly of the main pump.

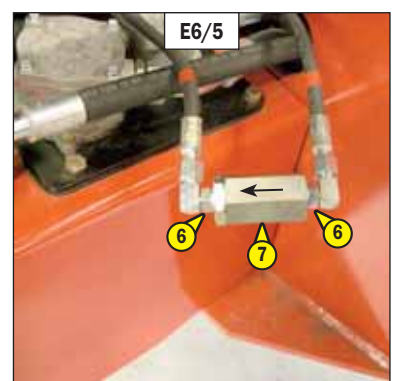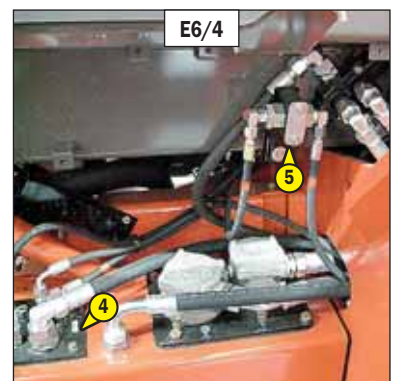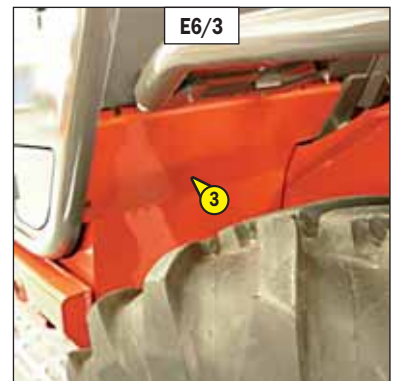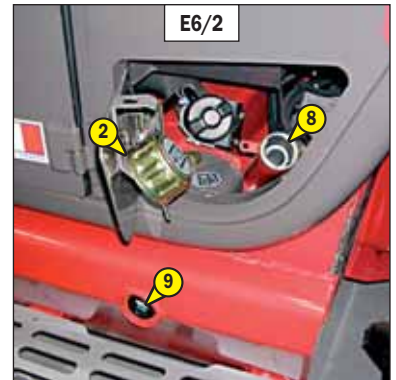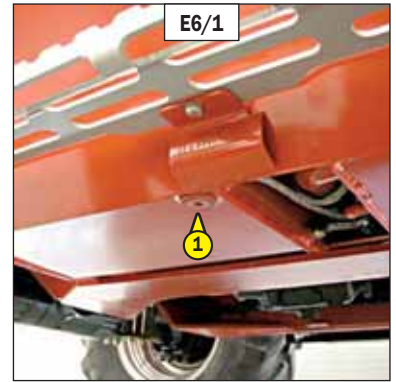

Seat belt with two anchoring points

- Check the following points:
 - Fixing of the anchoring points on the seat.
 - Cleanness of the strap and the locking mechanism.
 - Triggering of the locking mechanism.
 - Condition of the strap (cuts, curled edges).

Reeled seat belt with two anchoring points

- Check the points listed above together with the following points:
 - The correct winding of the belt.
 - Condition of the reel guards.
 - Roller locking mechanism when the strap is given a sharp tug.

NOTE: After an accident, replace the seat belt.



In no event should the lift truck be used if the seat belt is defective (fixing, locking, cuts, tears, etc.). Repair or replace the seat belt immediately.

E11 - FRONT AND REAR WHEELS REDUCERS OIL


DRAIN

Place the lift truck on level ground with the I.C. engine stopped and the reducers oil still warm.



Dispose of the drain oil in an ecological manner.

- Drain and change each front wheel reducer.
- Place drain plug 1 (fig. E11) in position A.
- Place a container under the drain plug and unscrew the plug.
- Let the oil drain fully.
- Place the drain port in position B, i.e. in a level port.
- Fill up with oil (see: 3 - MAINTENANCE: LUBRICANTS AND FUEL) by level port 1 (fig. E11).
- The level is correct when the oil level is flush with the edge of the hole.
- Refit and tighten the drain plug 1 (fig. E11) (tightening torque 34 to 49 N.m).
- Repeat this operation on each rear wheel reducer.

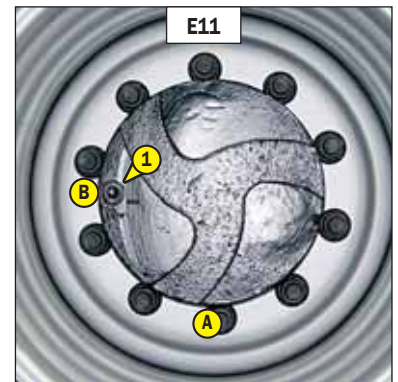

F - EVERY 2000 HOURS OF SERVICE

Carry out the operations described previously as well as the following operations.

F1 - COOLING LIQUID

DRAIN

Before changing the cooling liquid, check the seals and conditions of the cab cooling and heating system.

Drain the cooling liquid


Before draining the liquid, cover the cables, piping etc, present under the drainage screw. Place a container under the drainage screw large enough to hold the quantity of liquid to be collected.

Gradually open the cap on the tank "1" (Fig. F411), discharge the excess pressure, then remove the cap.

Turn the temperature regulator knob "2" (Fig. F1/2) present in the cabin completely.

Insert a tube (recommended length 1m) on drainage screw "3" (Fig. F1/3) present on the engine.

Unscrew drainage screw "3" (Fig. F1/3) (1 - 2 turns) and let the cooling liquid flow out from the engine block.

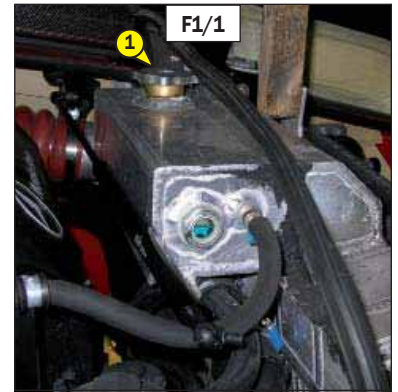


Place a container large enough for the quantity of liquid to be collected, under the radiator drainage screw “4” (Fig. F4/4).

Unscrew the radiator drainage screw “4” (fig. F4/4) (in the lower part of the radiator) and drain out the cooling liquid.

Clear the drainage opening of obstruction, if present.

Tighten the cooling liquid drainage screws present on engine “3” (Fig. F4/3) and on radiator “4” (Fig. F4/4).

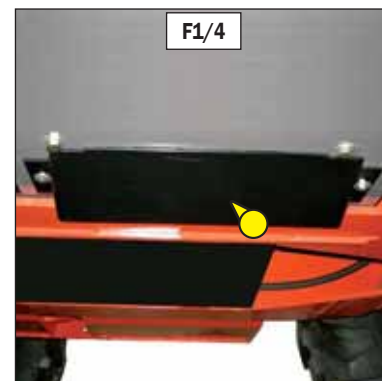


REEMPLISSAGE DU LIQUIDE

Pour the cooling liquid through the opening in tank “5” (Fig. F1/5) up to the MAX. mark.

Refit cap “5” to close the tank (Fig. F1/5).

Start up the engine and run it for about one minute, changing the speed to release air bubble from the cab cooling and heating system.

Switch the engine off and top up with cooling liquid to the MAX level in the tank.

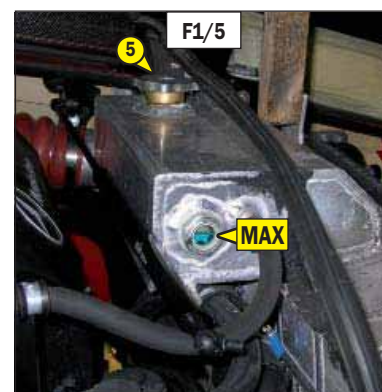

 **The I.C. engine does not contain any corrosion resistor and must be filled during the whole year with a mixture containing 25% of ethylene glycol-based antifreeze.**

G - OCCASIONAL MAINTENANCE


G1 - WHEEL

CHANGE



In the event of a wheel being changed on the public highway, make sure of the following points:

- Stop the lift truck, if possible on even and hard ground.
- To pass on stop of lift truck (see: 1 - OPERATING AND SAFETY INSTRUCTIONS: DRIVING INSTRUCTIONS UNLADEN AND LADEN).
- Put the warning lights on.
- Immobilise the lift truck in both directions on the axle opposite to the wheel to be changed.
- Unlock the nuts of the wheel to be changed.
- Place the jack under the flared axle tube, as near as possible to the wheel and adjust the jack 1 (fig. G1).
- Lift the wheel until it comes off the ground and put in place the safety support 2 under the axle (fig. G1).
- Completely unscrew the wheel nuts and remove them.
- Free the wheel by reciprocating movements and roll it to the side.
- Slip the new wheel on the wheel hub.
- Refit the nuts by hand, if necessary grease them.
- Remove the safety support and lower the lift truck with the jack.
- Tighten the wheel nuts with a torque wrench (see: 3 - MAINTENANCE: A - DAILY OR EVERY 10 HOURS SERVICE for tightening torque).

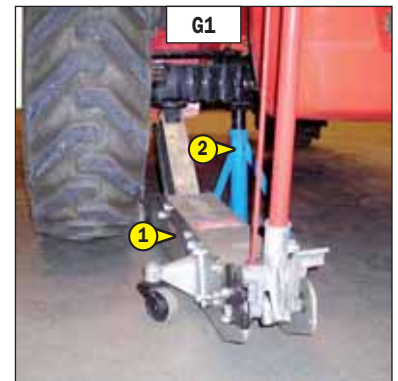


G2 - PARKING BRAKE

UNBLOCKING

This procedure is to be performed in the event of parking brake malfunction.

If the lift truck is not on a horizontal ground, to fix so that it does not descend the slope.

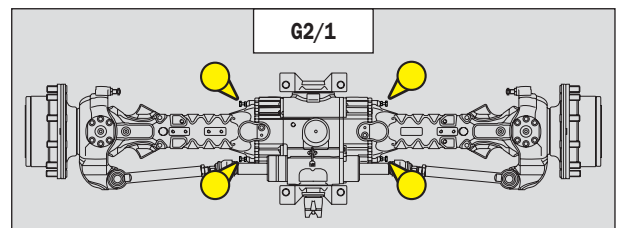


MANUALLY UNBLOCKING THE PARKING BRAKE

- First perform this operation on the left-hand side (fig. G2/1) of the front axle, then on the right-hand side (fig. G2/1).
- Unscrew locknuts 1 (fig. G2/2) by approximately 8 mm.
- Alternately tighten the screws 2 (fig. G2/2) by a 1/4 turn at a time up to a maximum of 1 turn in order to free the brake discs.
- If the I.C. engine is not running there will be no steering or braking assistance. Operate the steering and pedal slowly avoiding sudden jerky movements.
- Once this operation is completed, adjust the parking brake.

ADJUSTING THE PARKING BRAKE

- First perform this operation on the left-hand side (fig. G2/1) of the front axle, then on the right-hand side (fig. G2/1).
- Completely unscrew screws 2 (fig. G3/2) by alternately unscrewing them a 1/4 turn at a time.
- Grease the threads with a silicone lubricant (MANITOU reference: 479292).
- Retighten the screws 2 (fig. G2/2) to obtain a dimension of 30 mm (fig. G3/2).
- Lock the locknuts 1 (fig. G2/2) while holding the screw 2 (fig. G2/2) in position.

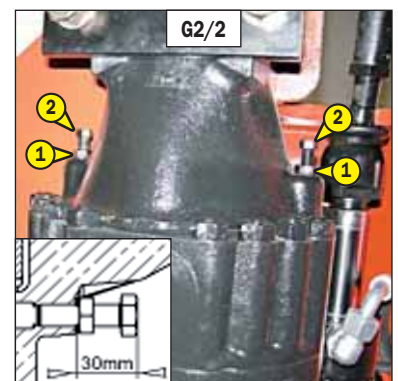

G3 - FRONT HEADLAMPS

ADJUST


RECOMMENDED SETTING

(as per standard ECE-76/756 76/761 ECE20)

Set to -2 % of the dipped beam in relation to the horizontal line of the headlamp.

ADJUSTING PROCEDURE

- Place the lift truck unloaded and in the transport position and perpendicular to a white wall on flat, level ground (fig. G3).
- Check the tire pressures (see: 2 - DESCRIPTION: FRONT AND REAR TIRES).
- Put the gearshift lever into neutral.

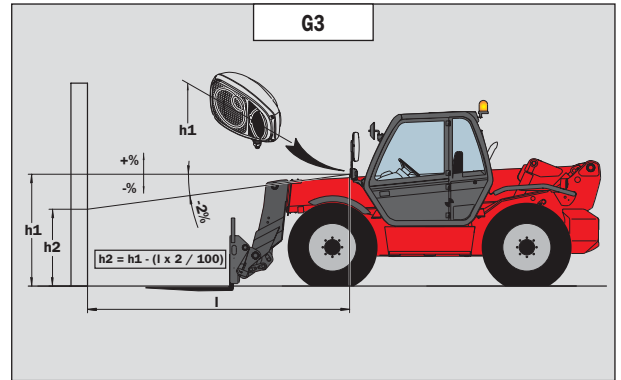

Calculating the height of the dipped beam (h2)

- h1 = Height of the dipped beam in relation to the ground.
- h2 = Height of the adjusted beam.
- l = Distance between the dipped beam and the white wall.

G4 - LIFT TRUCK


TOW

⚠ The lift truck must be towed very slowly (less than 5 km/h) and for as short a distance as possible (less than 100 m).

- Set the reversing gear in neutral.
- Place the reduction gearbox in neutral, by proceeding as follows.
- Place a container under the hoses 1 (fig. G4), loosen them and block their openings.

⚠ Release the pressure and wait until the fluid no longer flows before fully unscrewing the end fittings of the hoses.

- Using a tool, slide the shaft 2 (fig. G4) and mark the engagement of the three positions. Ensure that the shaft is fully engaged in the intermediate position, that is the neutral point.
- Release the hand brake.
- Switch on the warning lights.
- If the I.C. engine is not running there will be no steering or braking assistance. Operate the steering and pedal slowly avoiding sudden jerky movements.
- After towing, reconnect the hoses.

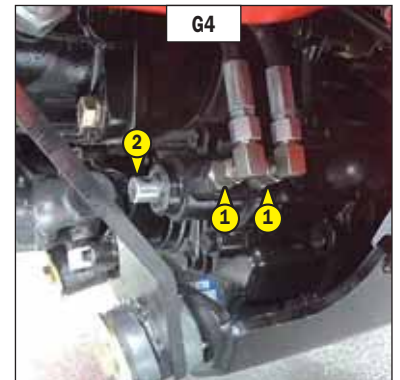



G5 - LIFT TRUCK




SLING

- Take into account the position of the lift truck centre of gravity for lifting (fig. G5/1).

A = 1560 mm B = 1210 mm

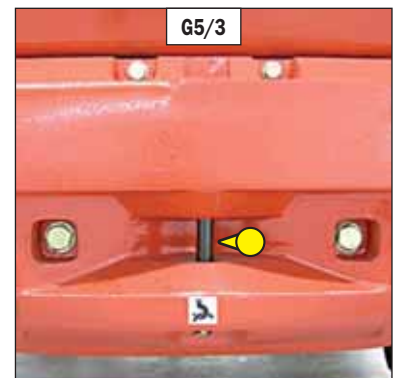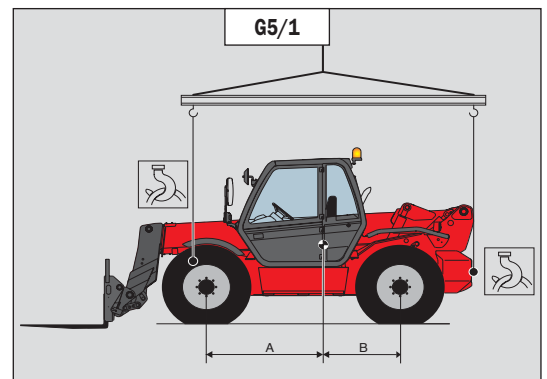- Place the hooks in the fastening points provided (fig. G5/2 and G5/3).







-  **Ensure that the safety instructions connected to the platform are respected before the loading of the lift truck and that the driver of the means of transport is informed about the dimensions and the weight of the lift truck (see: 2 - DESCRIPTION: CHARACTERISTICS).**
-  **Ensure that the platform has got dimensions and a load capacity sufficient for transporting the lift truck. Check also the pressure on the contact surface allowable for the platform in connection with the lift truck.**
-  **For lift trucks equipped with a Turbo-charged I.C. engine, block off the exhaust outlet to avoid rotation of the Turbo shaft without lubrication when transporting the vehicle.**

LOAD THE LIFT TRUCK

- Block the wheels of the platform.
- Fix the loading ramps so that you obtain an angle as little as possible to lift the lift truck.
- Load the lift truck parallel to the platform.
- Stop the lift truck (see: 1 - OPERATING AND SAFETY INSTRUCTIONS: DRIVING INSTRUCTIONS UNLADEN AND LADEN).

STOW THE LIFT TRUCK

- Fix the chocks to the platform at the front and at the back of each tyre (fig. G6/1).
- Fix also the chocks to the platform in the inside of each tyre (fig. G6/2).
- Secure the lift truck to the platform with sufficiently strong ropes. At the front of the lift truck, attach the ropes to the fastening points 1 (fig. G6/3) and at the rear to the towing pin 2 (fig. G6/4).
- Tighten the ropes (fig. G6/5).

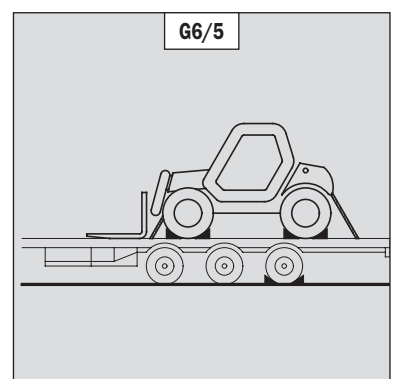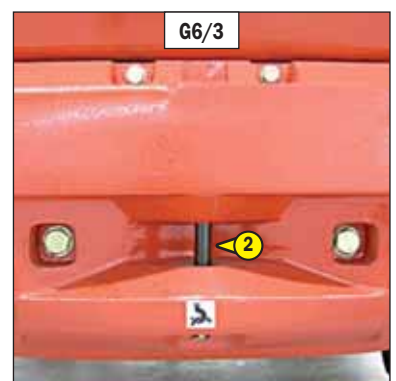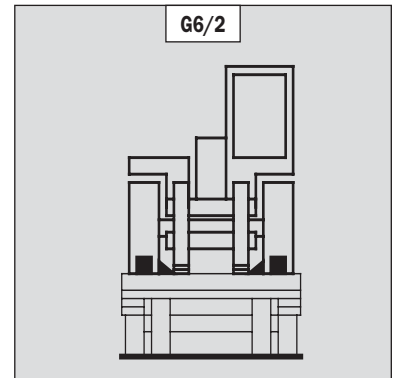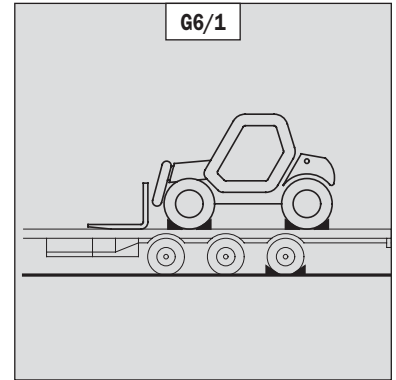















According to the use of the lift truck, the device may require to be periodically reset.

This operation can be easily performed by means of the following procedure.

- Provide a fork carrier or a bucket and a load corresponding to at least half the lift truck's rated capacity.
- Preferably perform the reset when the lift truck is still cold (before it is used) or ensure that the temperature of the rear axle is not more than 50 °C.
- Place the lift truck on flat, level ground with the wheels straight.

! Scrupulously follow the jib positioning instructions. Should you fail to follow these instructions, two audible beeps will be sounded and the fault indicator lamp ! will come on. If in doubt, consult your dealer.

STAGE 1 START	 <p>→ Simultaneously press and hold down the "BUCKET" MODE  and TEST  buttons.</p> <ul style="list-style-type: none"> - Without attachments. - Jib fully retracted and raised - On stabilisers if fitted.. - Two audible beeps will be sounded and all the leds will flash twice to confirm the start of the procedure.
STAGE 2	 <p>→  → Short press the test button. </p> <ul style="list-style-type: none"> - Without attachments. - Carriage tilted fully backward. - Stabilisers raised, if fitted. - Jib fully retracted and in the down position a few centimetres off the ground. - An audible beep. - First green led flashing. - Flashing test button.
STAGE 3	 <p>→  /  → Short press the test button. </p> <ul style="list-style-type: none"> - With the fork carrier or the bucket and a load (keep jib retracted to allow all other hydraulic movements). - Jib fully retracted and in the down position a few centimetres off the ground. - Two audible beeps will be sounded and all the leds will flash twice to confirm the end of the procedure. - First green led continuously lit. - Second green led flashing. - Flashing test button. <p>! Keep the load as close to the ground as possible throughout this operation.</p> <p>- Hold down the disable the "aggravating" hydraulic movement cut-off button  (indicator lamp lit), and telescope the jib until the rear wheels are off the ground.</p> <p>NOTA: This stage consists in unloading the rear axle. It can be done using a jack but without bearing on the rear axle.</p>
STAGE 4 FINISH	 <p>→  / </p> <ul style="list-style-type: none"> - After completing the resetting procedure, the lift truck is in an overloaded condition. Retract the telescope to restore the situation. - All leds lit. - A continuous audible beep.

! When the reset is completed, check the operation of the longitudinal stability limiter and warning device (see: 3 - MAINTENANCE: A - DAILY OF EVERY 10 HOURS SERVICE).


4 - OPTIONAL ATTACHMENTS FOR USE WITH THE RANGE

TABLE OF CONTENTS

<u>INTRODUCTION</u>	<u>4-5</u>
<u>PICKING UP THE ATTACHMENTS</u>	<u>4-6</u>
<u>TECHNICAL SPECIFICATIONS OF ATTACHMENTS</u>	<u>4-8</u>
<u>ATTACHMENT SHIELDS</u>	<u>4-16</u>

INTRODUCTION

- Your lift truck must be used with interchangeable equipment. These items are called: ATTACHMENTS.
- A wide range of attachments, specially designed and perfectly suitable for your lift truck is available and guaranteed by MANITOU.
- The attachments are delivered with a load chart concerning your lift truck. The operator's manual and the load chart should be kept in the places provided in the lift truck. For standard attachments, their use is governed by the instructions contained on this notice.
- Some particular uses require the adaptation of the attachment which is not provided in the price-listed options. Optional solutions exist, consult your dealer.

 **All attachments with a suspended load (winch, crane jib, crane jib with winch, hook, etc.) MUST be used with a lift truck equipped with a hydraulic movement cut-out device. In this case, the movement cut-out must be switched on and the transverse attitude perfectly horizontal.**

 **Only attachments approved by MANITOU are to be used on our lift trucks (see: 4 - ADAPTABLE ATTACHMENTS IN OPTION ON THE RANGE: TECHNICAL SPECIFICATIONS OF ATTACHMENTS). The manufacturer's liability will be denied in case of modification or of attachment adaptation carried out without his knowing it.**

 **Depending on their size, certain attachments may, when the jib is lowered and retracted, come into contact with the front tyres and cause damage to them, if reverse tilt is activated in the forward tilt direction. TO REMOVE THIS RISK, EXTEND THE TELESCOPE TO A SUFFICIENT EXTENT FOR THE PARTICULAR LIFT TRUCK AND ATTACHMENT SO THAT THIS CONTACT IS NOT POSSIBLE.**


 **Maximum loads are defined by the capacity of a lift truck taking account of the attachment's mass and centre of gravity. In the event of the attachment having less capacity than the lift truck, never exceed this limit.**

PICKING UP THE ATTACHMENTS

A - ATTACHMENT WITHOUT HYDRAULICS AND HAND LOCKING DEVICE

TAKING UP AN ATTACHMENT

- Ensure that the attachment is in a position facilitating the locking to the carriage. If it is not correctly oriented, take the necessary precautions in order to move it safely.
- Check that the locking pin and the clip are in position in the bracket (fig. A).
- Place the lift truck with the jib fully lowered in front of and parallel to the attachment, tilt the carriage forwards (fig. B).
- Bring the carriage under the locking tube of the attachment, slightly lift the jib, incline the carriage backwards in order to position the attachment (fig. C).
- Lift the attachment off the ground to facilitate locking.

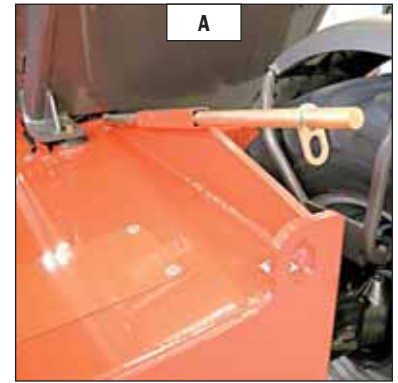

HAND LOCKING




- Take the locking pin and the clip on the bracket (fig. A) and lock the attachment (fig. D). Do not forget to refit the clip.

HAND RELEASING

- Proceed in the reverse order of paragraph HAND LOCKING while making sure you put back the locking pin and the clip in the bracket (fig. A).

LAYING AN ATTACHMENT

- Proceed in the reverse order of paragraph TAKING UP AN ATTACHMENT while making sure you place the attachment flat on the ground and in closed position.

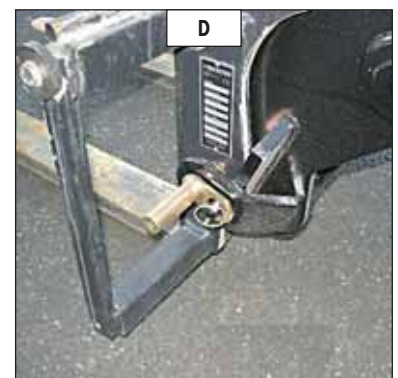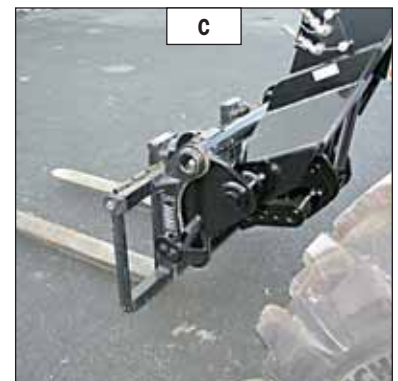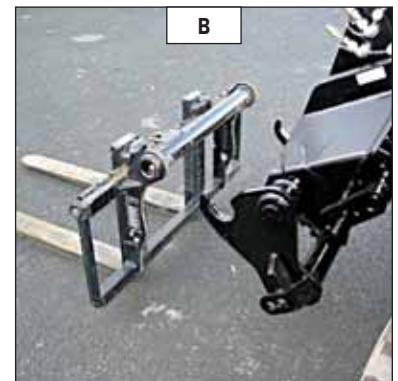

B - HYDRAULIC ATTACHMENT AND HAND LOCKING DEVICE


TAKING UP AN ATTACHMENT

- Ensure that the attachment is in a position facilitating the locking to the carriage. If it is not correctly oriented, take the necessary precautions in order to move it safely.
- Check that the locking pin and the clip are in position in the bracket (fig. A).
- Place the lift truck with the jib fully lowered in front of and parallel to the attachment, tilt the carriage forwards (fig. B).
- Bring the carriage under the locking tube of the attachment, slightly lift the jib, incline the carriage backwards in order to position the attachment (fig. C).
- Lift the attachment off the ground to facilitate locking.



MANUAL LOCKING AND CONNECTION OF THE ATTACHMENT

- Take the locking pin and the clip on the bracket (fig. A) and lock the attachment (fig. D). Do not forget to refit the clip.
- Stop the I.C. engine and keep the ignition on the lift truck.
- Remove the pressure of the hydraulic circuit by operating switch 1 (fig. E) on the distributor lever backwards and forwards 4 or 5 times.
- Connect the rapid connectors according to the logic of the attachment's hydraulic movements.

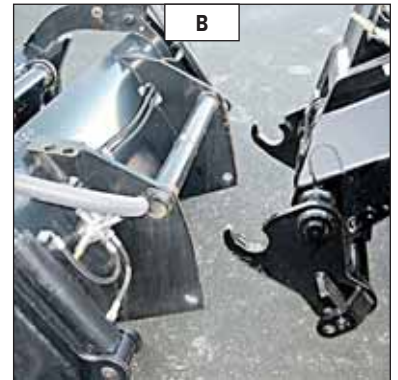



! *Make sure that the rapid connectors are clean and protect the holes which are not used, with the caps provided.*

HAND RELEASING AND DISCONNECTING THE ATTACHMENT

- Proceed in the opposite order to that described in MANUAL LOCKING AND CONNECTION OF THE ATTACHMENT while making sure you put the locking pin back into the bracket (fig. A).

LAYING AN ATTACHMENT


- Proceed in the reverse order of paragraph TAKING UP AN ATTACHMENT while making sure you place the attachment flat on the ground and in closed position.

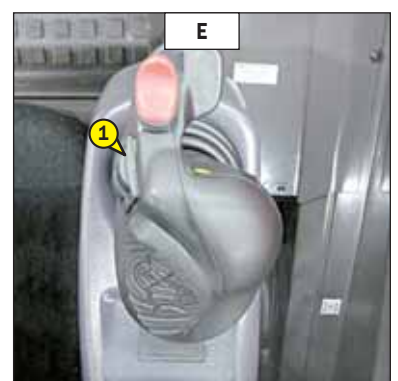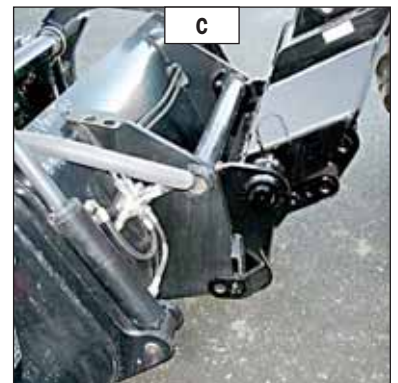

TECHNICAL SPECIFICATIONS OF ATTACHMENTS


FLOATING FORK CARRIAGE

	TFF 45 MT-1040	TFF 45 MT-1300	
PART NUMBER	653344	653345	
Rated capacity	4500 kg	4500 kg	
Width	1040 mm	1300 mm	
Weight	370 kg	400 kg	

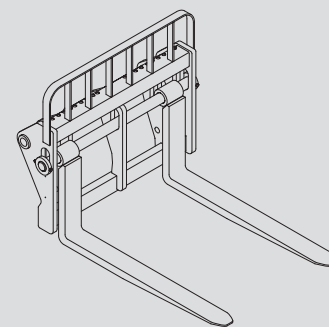


FLOATING FORK SIDE-SHIFT CARRIAGE

	TFF 45 MT-1040 DL	TFF 45 MT-1300 DL	
PART NUMBER	751545	751546	
Rated capacity	4500 kg	4500 kg	
Side-shift	2x100 mm	2x100 mm	
Width	1040 mm	1300 mm	
Weight	410 kg	450 kg	

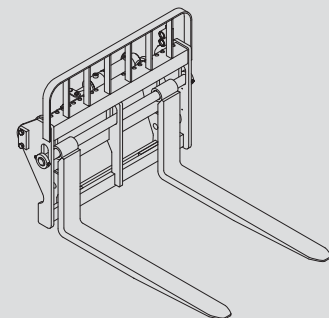


FLOATING FORK


PART NUMBER	211922		
Section	125x50x1200 mm		
Weight	71 kg		

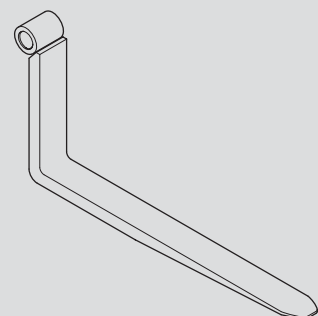


STANDARDISED TILTING FORK CARRIAGE			
	PFB 45 N MT-1260 S2	PFB 45 N MT-1670 S2	PFB 45 N MT-2000 S2
PART NUMBER	654407	653747	653748
Rated capacity	4500 kg	4500 kg	4500 kg
Width	1260 mm	1670 mm	2000 mm
Weight	200 kg	255 kg	300 kg

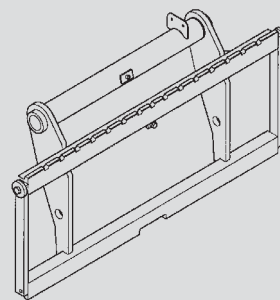


STANDARDISED SIDE-SHIFT CARRIAGE			
	TDLA 40 N MT-1670	TDLA 40 N MT-2000	
PART NUMBER	751542	751369	
Rated capacity	4300 kg	4300 kg	
Side-shift	2x100 mm	2x100 mm	
Width	1670 mm	2000 mm	
Weight	265 kg	305 kg	

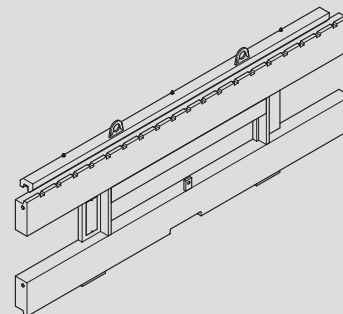


STANDARDISED FORK			
PART NUMBER	415652		
Section	125x50x1200 mm		
Weight	78 kg		

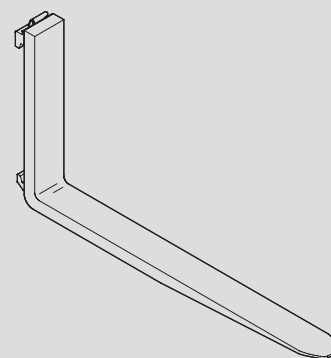


LOAD BACK REST			
PART NUMBER	727035	572788	572790
Width	1260 mm	1670 mm	2000 mm
Weight	46 kg	56 kg	63 kg

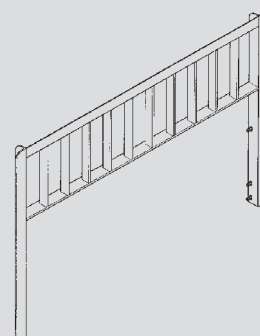


BUILDING BUCKET			
	CBC 700 L1950 S2	CBC 800 L2250 S3	CBC 900 L2450 S3
PART NUMBER	654472	654471	654470
Rated capacity	697 l	814 l	893 l
Width	1950 mm	2250 mm	2450 mm
Weight	330 kg	385 kg	410 kg

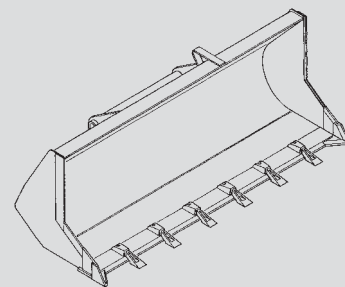


LOADING BUCKET			
	CBR 780 L1950 S2	CBR 900 L2250 S2	CBR 1000 L2450 S2
PART NUMBER	570613	653749	654716
Rated capacity	778 l	904 l	990 l
Width	1950 mm	2250 mm	2450 mm
Weight	340 kg	390 kg	410 kg

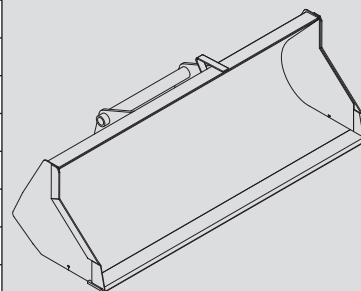


GRAIN BUCKET			
	CBA 1500 L2450 S3	CBA 2000 L2450 S3	
PART NUMBER	570547	570551	
Rated capacity	1502 l	1998 l	
Width	2450 mm	2450 mm	
Weight	514 kg	607 kg	

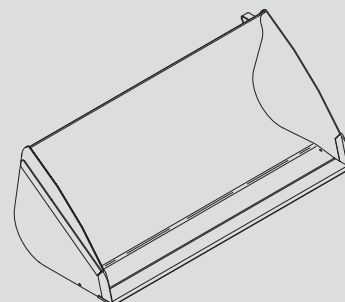


GRAIN BUCKET			
	CBA 2500 L2450 S3	CBA 3000 L2500 S3	
PART NUMBER	570553	570555	
Rated capacity	2508 l	3003 l	
Width	2450 mm	2500 mm	
Weight	701 kg	774 kg	

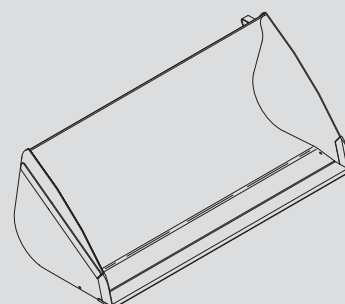


GRAIN BUCKET (REVERSING AND DISMOUNTABLE CUTTING EDGE)			
	CBA 1500 L2450 LDR S3	CBA 2000 L2450 LDR S3	CBA 2500 L2450 LDR S3
PART NUMBER	570548	570552	570554
Rated capacity	1502 l	1998 l	2508 l
Width	2450 mm	2450 mm	2450 mm
Weight	585 kg	678 kg	772 kg

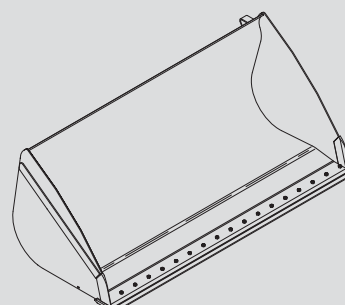


BUCKET 4X1			
	CB4x1-700 L1950	CB4x1-850 L2300	CB4x1-900 L2450
PART NUMBER	751402	751401	751465
Rated capacity	700 l	850 l	900 l
Width	1950 mm	2300 mm	2450 mm
Weight	640 kg	735 kg	765 kg

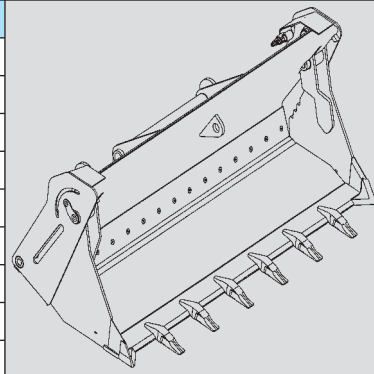


MULTIPURPOSE BUCKET (REVERSING AND DISMOUNTABLE CUTTING EDGE)			
	CBM 2450 LDR S5		
PART NUMBER	752195		
Rated capacity	1,03 m3		
Width	2450 mm		
Grab	11		
Weight	790 kg		

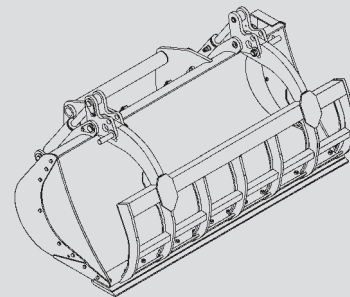


GRAB BUCKET			
	CBG 1950 S4	CBG 2300 S4	CBG 2450 S4
PART NUMBER	751407	751414	751418
Rated capacity	1 m3	1,2 m3	1,26 m3
Width	1950 mm	2300 mm	2450 mm
Grab	7	8	8
Weight	555 kg	615 kg	635 kg

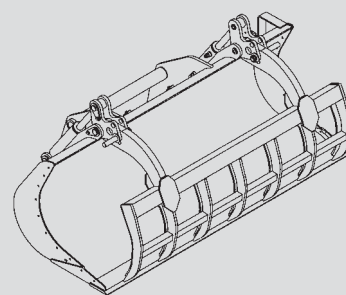


GRAB BUCKET (NON-HAZARDOUS INDUSTRIAL WASTE)			
	CBG 1950 DIB S4	CBG 2300 DIB S4	CBG 2450 DIB S4
PART NUMBER	653016	653018	653020
Rated capacity	1 m3	1,2 m3	1,26 m3
Width	1950 mm	2300 mm	2450 mm
Grab	7	8	8
Weight	678 kg	740 kg	767 kg

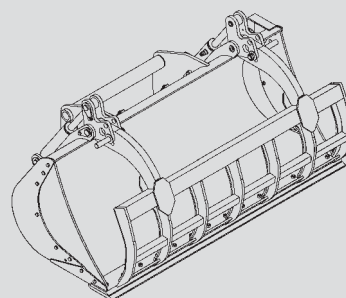


GRAB BUCKET (NON-HAZARDOUS INDUSTRIAL WASTE)			
	CBG 2450 DIB 1,4		
PART NUMBER	654817		
Rated capacity	1,4 m3		
Width	2450 mm		
Grab	4		
Weight	1100 kg		

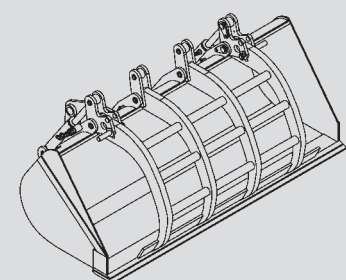


GRAB BUCKET (GRAB CLOSED)			
	CBG 2300 GF S4		
PART NUMBER	653008		
Rated capacity	1,2 m3		
Width	2300 mm		
Grab	8		
Weight	637 kg		

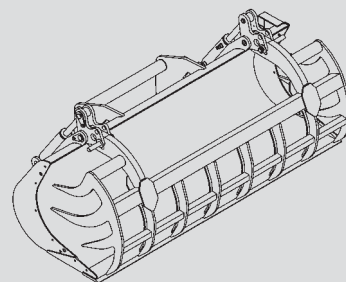


GRAB BUCKET (CLOSED JAWS AND REVERSIBLE REMOVABLE BLADE)			
	CBG 1950 JFD-LDR S4	CBG 2300 JFD-LDR S4	CBG 2450 JFD-LDR S4
PART NUMBER	653003	653006	653009
Rated capacity	1 m3	1,2 m3	1,26 m3
Width	1950 mm	2300 mm	2450 mm
Grab	7	8	8
Weight	655 kg	715 kg	742 kg

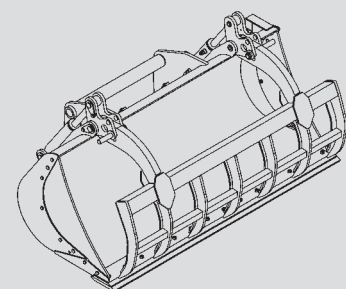


CONCRETE BUCKET (ADAPTABLE ON FORKS)			
	BB 500 S4	BBH 500 S4	
PART NUMBER	654409	751462	
Rated capacity	500 l/1300 kg	500 l/1300 kg	
Width	1100 mm	1100 mm	
Weight	205 kg	220 kg	

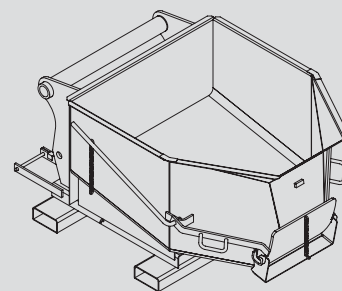


CONCRETE BUCKET (ADAPTABLE ON FORKS)			
	BBG 500 S4	BBHG 500 S4	
PART NUMBER	654411	751464	
Rated capacity	500 l/1300 kg	500 l/1300 kg	
Width	1100 mm	1100 mm	
Weight	220 kg	235 kg	

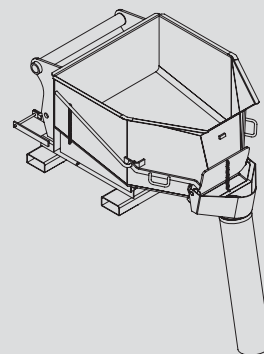


SPOUT BUCKET (ADAPTABLE ON FORKS)			
	GL 300 S2	GL 400 S2	
PART NUMBER	174371	174372	
Rated capacity	300 l/725 kg	400 l/969 kg	
Weight	150 kg	166 kg	
HYDRAULIC KIT TO OPEN THE SPOUT			
PART NUMBER	653750		

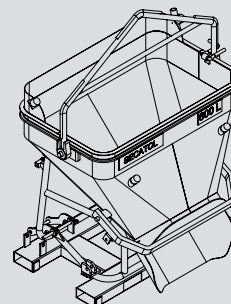


SPOUT BUCKET (ADAPTABLE ON FORKS)			
	GL 600 S2	GL 800 S2	
PART NUMBER	174373	174374	
Rated capacity	600 l/1440 kg	800 l/1920 kg	
Weight	290 kg	325 kg	
HYDRAULIC KIT TO OPEN THE SPOUT			
PART NUMBER	653750		

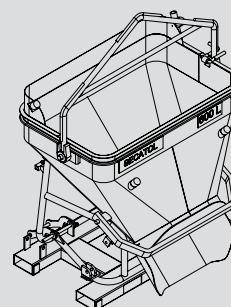


SPOUT BUCKET (ADAPTABLE ON FORKS)			
	GL 1000 S2	GL 1500 S2	
PART NUMBER	174375	174376	
Rated capacity	1000 l/2440 kg	1500 l/3591 kg	
Weight	360 kg	409 kg	
HYDRAULIC KIT TO OPEN THE SPOUT			
PART NUMBER	653750		

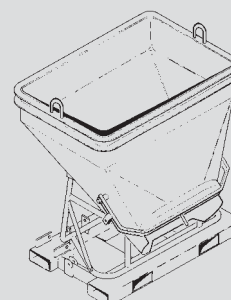


MANURE FORK WITH GRAB			
	FFGR 30 MT 2100 S5	FFGR 30 MT 2400 S5	FFGR 30 MT 2100 DR
PART NUMBER	556843	570594	570728
Rated capacity	1700 Kg	1700 Kg	1700 Kg
Width	2100 mm	2400 mm	2100 mm
Finger	10	12	10 (round finger)
Grab	7	8	7
Weight	567 kg	606 kg	567 kg

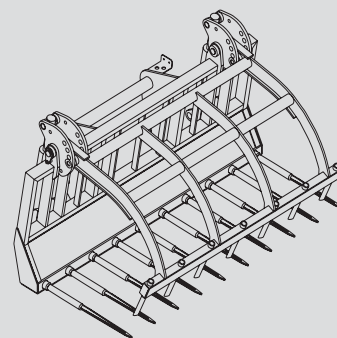


CRANE JIB			
	P 600 MT S3		
PART NUMBER	653228		
Rated capacity	600 kg		
Weight	170 kg		

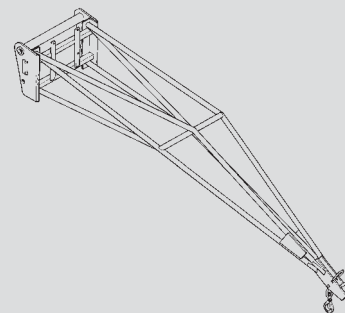


CRANE JIB			
	P 4000 MT S2		
PART NUMBER	653226		
Rated capacity	4000 kg/1200 kg		
Weight	210 kg		




CRANE JIB WITH WINCH			
	PT 600 MT S6		
PART NUMBER	708538		
Rated capacity	600 kg		
Weight	288 kg		

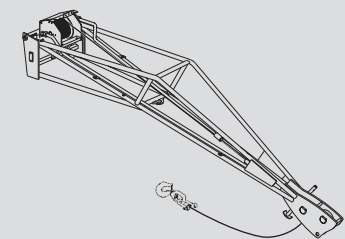

15°/15° MULTI-DIRECTIONAL CRANE JIB			
	P0 600 L2500 S2	P0 1000 L1500 S2	P0 2000 L1000 S2
PART NUMBER	751547	751548	751549
Rated capacity	600 kg	1000 kg	2000 kg
Weight	320 kg	275 kg	255 kg

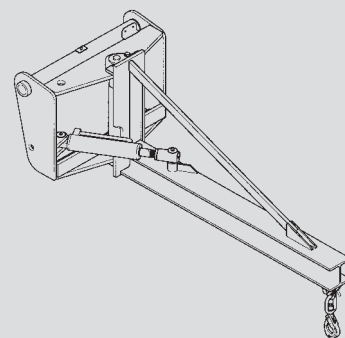


CRANE JIB			
	PC 50		
PART NUMBER	708544		
Rated capacity	5000 kg		
Weight	120 kg		

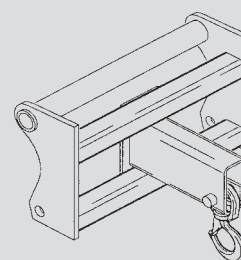


ATTACHMENT SHIELDS


FORK PROTECTOR			
PART NUMBER	227801		

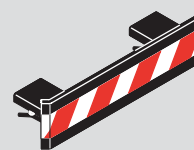


FORK BLOCK FOR FLOATING FORK CARRIAGE			
PART NUMBER	261210		

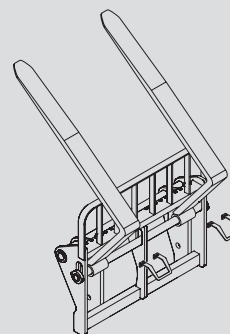

BUCKET PROTECTOR			
NOTE: Always ensure that the width of the protector you choose is less than or equal to the width of the bucket.			
PART NUMBER	206734	206732	206730
Width	1375 mm	1500 mm	1650 mm
PART NUMBER	235854	206728	206726
Width	1850 mm	1950 mm	2000 mm
PART NUMBER	223771	223773	206724
Width	2050 mm	2100 mm	2150 mm
PART NUMBER	206099	206722	223775
Width	2250 mm	2450 mm	2500 mm

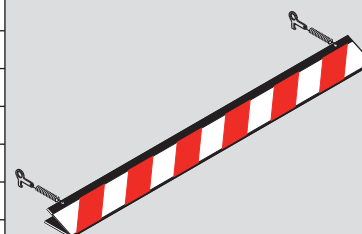

MANURE FORK PROTECTOR			
PART NUMBER	230689		

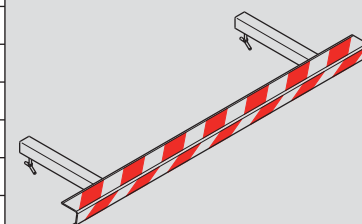

5 - SPECIFIC AUSTRALIA

See also the operator's manual supplement: 647065 AU

LOAD CHART

